

Kit contents



- A. 1x 4 Way Outlet (3/4" BSP Thread)
Item 5650-1



- H. 4x End Cap
Item 5650-9



- B. 1x 10m Poly Pipe 3/16"
Item 5650-3



- I. 1x T Joint
Item 5650-10



- C. 2x 90° Spray Nozzle
Item 5650-4



- J. 1x Angled Mist Nozzle
Item 5650-11



- D. 1x 180° Spray Nozzle
Item 5650-5



- K. 3x Angled Drip Nozzle
Item 5650-12



- E. 2x Shower Spray Nozzle
Item 5650-6



- L. 1x Accessory Connector
Item 2470



- F. 1x Rotor
Sprinkler
Item 5650-7



- M. 1x Universal Tap Connector
Item 2320



- G. 1x Flow Control Valve
Item 5650-8

Setting up and connecting your Mini Sprinkler Kit


Step 1:

Plan.

Think about what type of sprinkler would be sufficient for the area or plant you would like to water keeping in mind how much area needs to be covered. Different sprinkler heads have different spray patterns and area coverage.

Step 2:

Put your plan into action by placing the correct sprinkler head in its designated spots in the garden. Remember to place each sprinkler in the direction you would like cover.

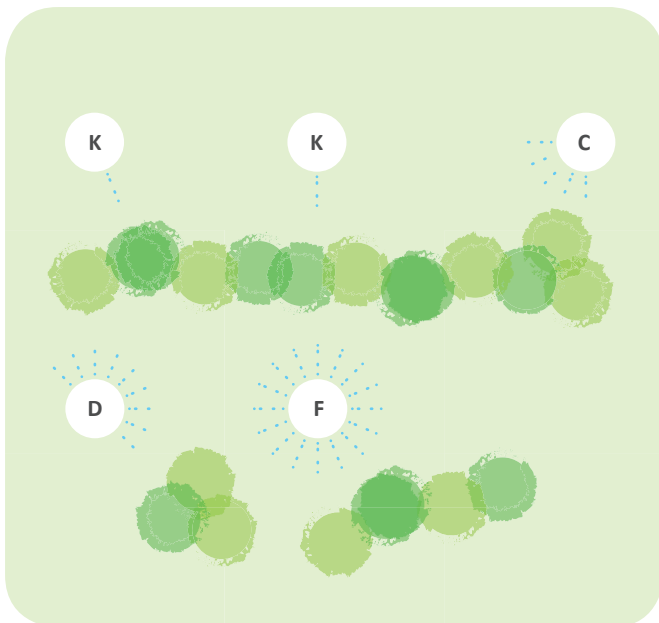


Step 3:

Fitting the 4-way outlet

- **Option 1:** If your tap is close (within about 2 metres) to the garden bed, screw the tap connector to the tap then screw the accessory connector to the 4 way outlet and connect the tap fitting to the accessory fitting.




- **Option 2:** If the tap is more than 2 metres from the garden bed, it is best to run a length of hose to reach your designated watering area, then connect to your 4-way outlet. This will ensure there will be no loss of pressure when connecting to your sprinklers.

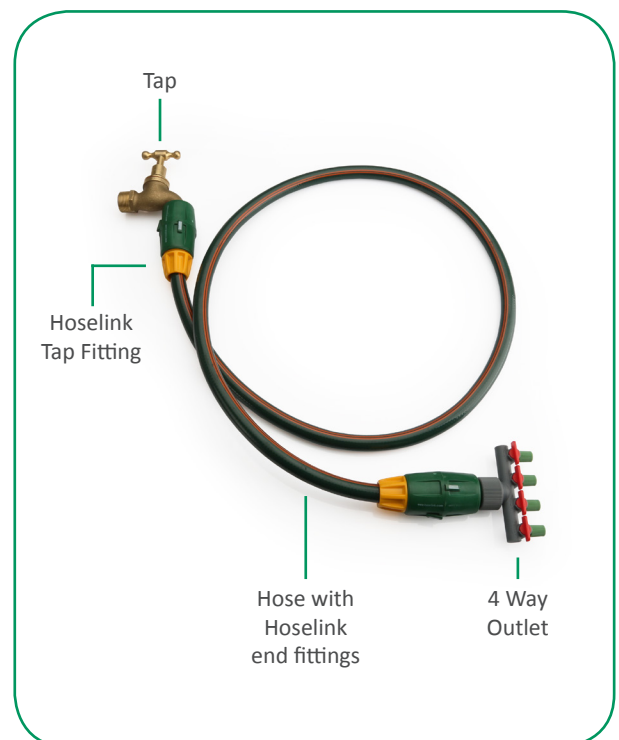

Step 4:

1. Attach the 3/16 inch black Poly pipe to the four-way outlet then roll out until it reaches your first desired sprinkler head comfortably.
2. Cut to length and attach the sprinkler head to the poly pipe. (See - How to secure Poly pipe to your sprinkler heads)
3. Attach your Poly pipe to the outlet on the sprinkler head then roll out and repeat the process to connect to the next sprinkler head


Tip: If connecting the last sprinkler in the line be sure to use the grey end cap to stop the water flow.

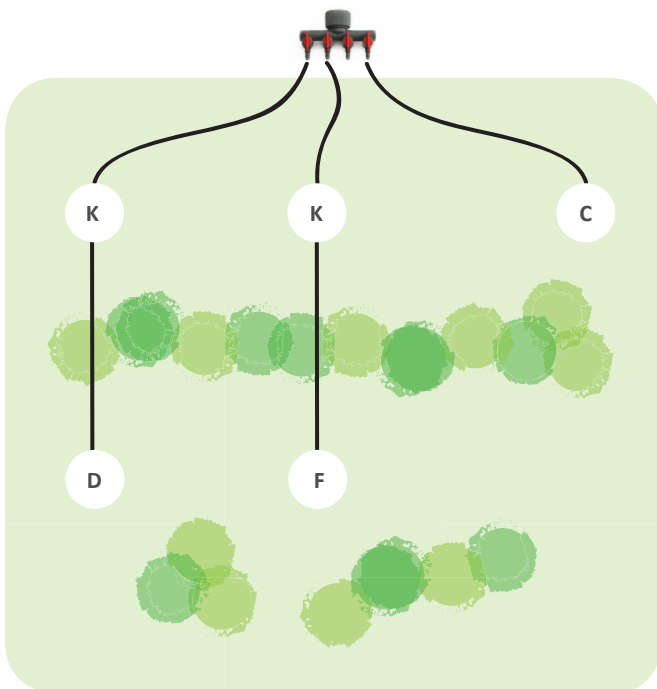

How to secure the Poly Pipe to your sprinkler heads

Step 1:

Select your desired outlet and unscrew the green nut to reveal a small grey stem.

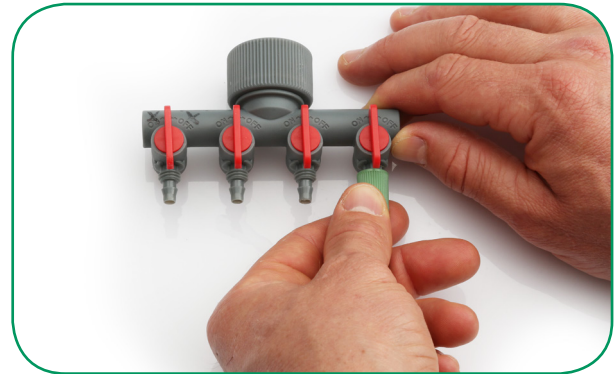

Step 2:

Slide the green nut over the end of the poly pipe.




Step 3:

Make sure the end of your poly pipe is cut square.




Step 4:

Push the poly pipe all the way to the base of the stem.

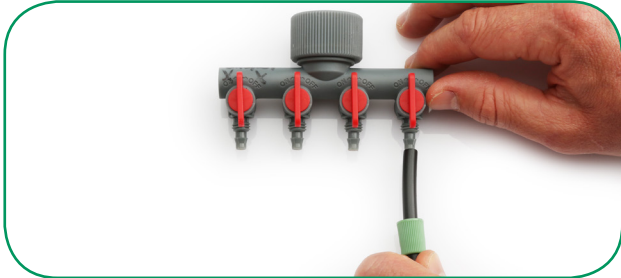


Step 5:

Screw and tighten the green nut.

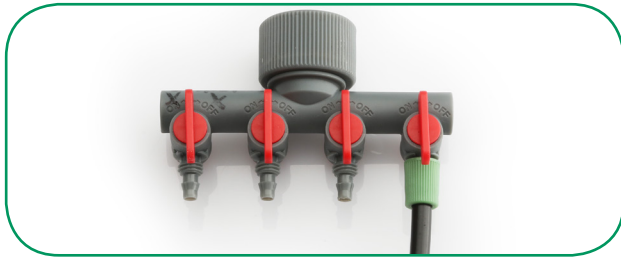



Step 6:

Roll out your desired length of hose until it reaches the first sprinkler head comfortably, cut to size and slide the green nut over the end of the poly pipe.

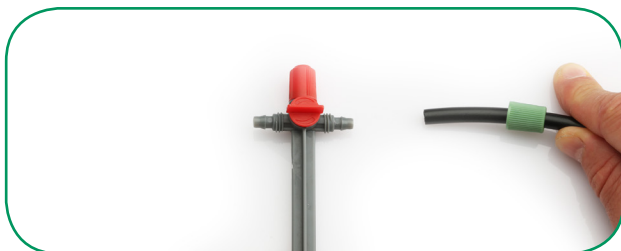


Step 7:

Push the poly pipe all the way to the base of the stem.

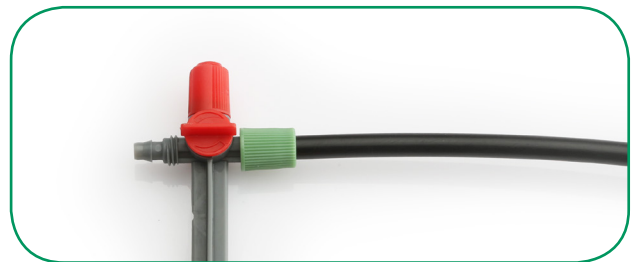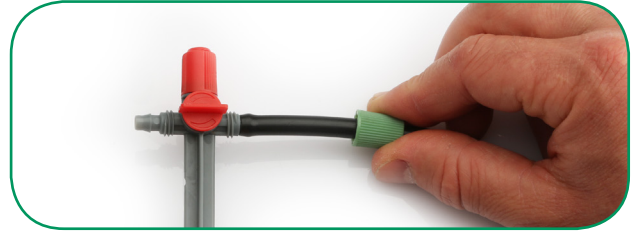

Step 8:

Repeat steps to connect from the outlet of the sprinkler head.

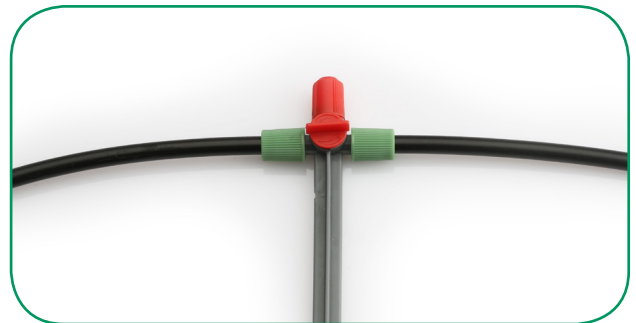

Step 9:

When you have reached the last sprinkler head place an end cap on the outlet.

