A30 Shower Kit SPECIFICATION SHEET (UK & EU)

Version: 2019–1














A30 Shower Kit




1200mm Shower Kit Includes:

The A30 drain is dramatically different. Developing a low profile drainage system with a high flow rate meant pushing the boundaries of design without compromising function. It's one thing to make a product thinner, it's something else to simultaneously increase the flow rate, giving A30 the highest flow rate in the Aquabocci range.

Profile

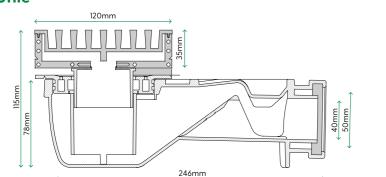

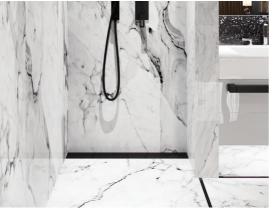

Performance and finish


LOCATIONS	Swimming Pools, Wet Rooms, Balconies and Driveways	
FLOW RATES	120 litres per minute	
SLIP RATING	Optional Aquabocci WunderGrip (CSIRO R-13) / Non Slip finish available on all Aquabocci products	
ANTI CORROSION	Guaranteed not to rust, corrode or tea stain around salt water or chlorine	
HEELGUARD SAFE?	Yes	
FUNCTION	Can be cut to any length	
AQUABOCCI CUSTOM	4 colours available	

System Fittings and Accessories

ITEM

Connector To be used to join straight sections and corner pieces

End Cap To be used at each end to stop water



ITEM


Spigot Spigots can be attached anywhere along the channel



Glue 1 bottle is sufficient to glue 2 spigots



2400mm Shower Kit Includes:

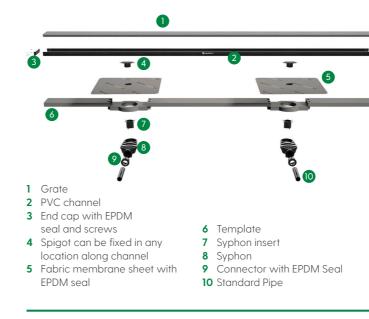

Corner



COLOUR	FINISH
GT SILVER	Smooth Top
GI SILVER	WunderGrip
TITANIUM	Smooth Top
ПАЛЮМ	WunderGrip
BLACK	Smooth Top
BLACK	WunderGrip
СНАМРАВИЕ	Smooth Top
Снамрабие	WunderGrip

What is WunderGrip?

wundergrip

WunderGrip is a CSIRO R-13 Non-Slip surface. Suitable for commercial and health care projects that require a high slip rating.

COLOUR	FINISH
	Smooth Top
GT SILVER	WunderGrip
TITANIUM	Smooth Top
IIIANIOM	WunderGrip
	Smooth Top
BLACK	WunderGrip
CHAMPAGNE	Smooth Top
CHAMPAGNE	WunderGrip

COLOUR	FINISH
	Smooth Top
GT SILVER	WunderGrip
TITANIUM	Smooth Top
ПАНІОМ	WunderGrip
BLACK	Smooth Top
BLACK	WunderGrip
CHAMPAGNE	Smooth Top
CHAMPAGNE	WunderGrip







aquabocci.com 🚈

A30 Shower Kit INSTALLATION GUIDE UK & EU

Slab Installation

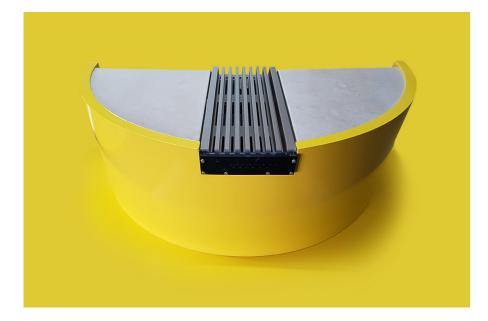



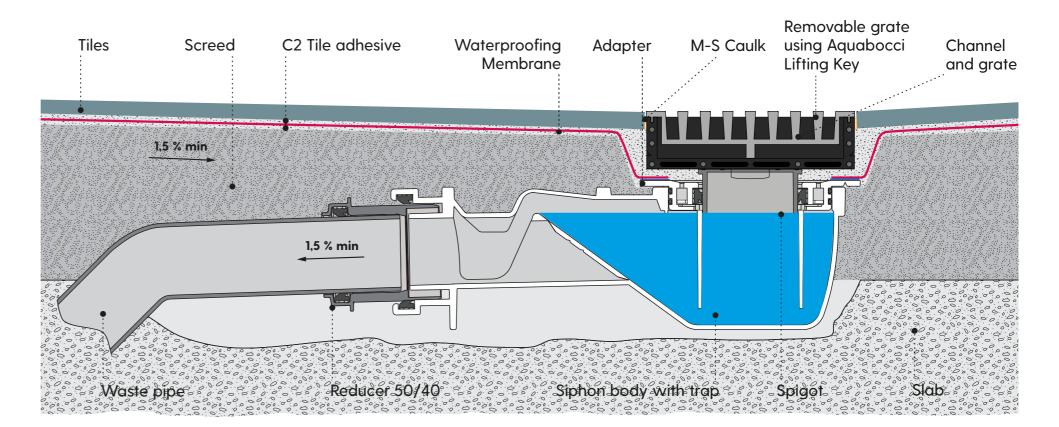









A30 Shower Kit INSTALLATION GUIDE UK & EU

Timber Installation



