



**11-13 Volkswagen Jetta 2.0L**

**Part Number 115206**

**Installation Instructions**

**Removing the factory intake system:**

1. Disconnect the negative battery cable.
2. Remove the clamp holding the factory flex pipe onto the factory air duct and separate the two pieces.



3. Pull up on the factory air box and remove it from the engine compartment.




4. Using a torx bit remove the two screws holding the factory air inlet scoop.



5. Remove the lower ducting and remove the scoop.



6. It is only necessary to remove the first section of the tubing to install the Volant intake. If you would like to remove the resonator box you will need to remove the wheel well and skid plates to gain access to the box and remove it from underneath the vehicle.
7. To remove the lower ducting remove the torx bolt and disconnect the clamp holding the tube to the resonator box. Remove the duct.

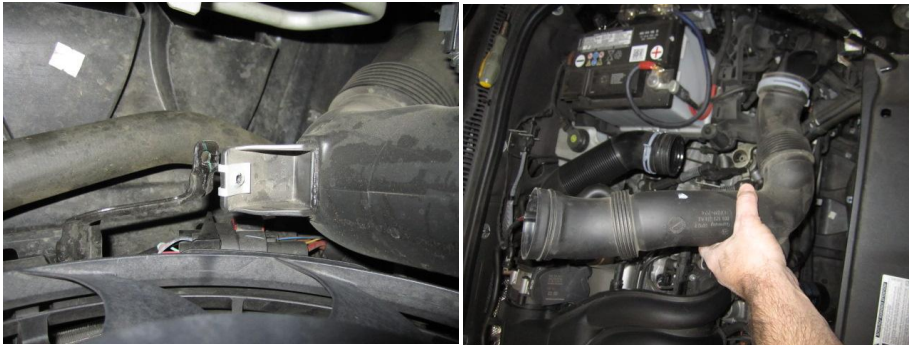

8. To remove the resonator box you will need to remove the two 13mm bolts from the frame. After the box is removed reinstall the skid plate.




## Installing the Volant intake system:

9. Press the filter onto the adapter and tighten the clamp through the access hole in the bottom of the air box.



10. Press the factory rubber grommets into the predrilled holes on the bottom of the air box. Press the Volant box onto the factory mounting studs.

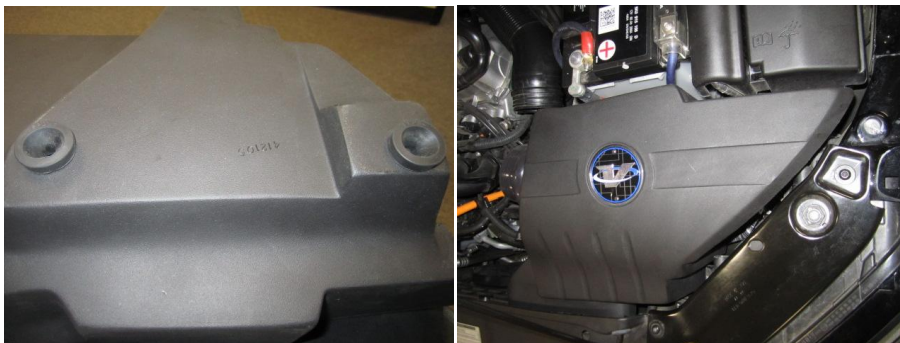

11. Attach the 3 ½ Hump hose to the filter box adapter with a #56 clamp and attach the air duct to the factory flex hose and tighten with a #48 clamp.



12. Reattach your negative battery cable.