
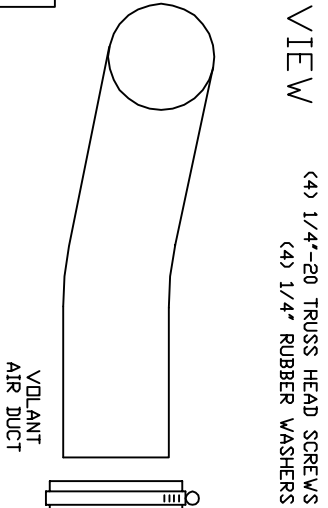



VOLANT COOL AIR INTAKES
 PART NO.: 16857152
 INSTALLATION INSTRUCTIONS
 WWW.VOLANT.COM
 TECH SUPPORT: (909) 481-3888

16857152 PARTS LIST

| | | | | | |
|---|-----------------------|---|---------------------------|---|--------------------------|
| 1 | VOLANT FILTER BOX | 1 | 3 1/2" X 2 1/2" SLEEVE | | |
| 1 | VOLANT FILTER BOX LID | 1 | 3" X 2" SLEEVE | 1 | BR19846C BRACKET (SHORT) |
| 1 | VOLANT AIR DUCT | 2 | 1/4"-20 BOLTS | 1 | BR26852 BRACKET (LONG) |
| 1 | VOLANT RAM AIR SCOOP | 3 | 1/4" WASHERS | 2 | 1/2" RUBBER GROMMET |
| 1 | RAM FILTER W/CLAMP | 2 | 1/4" LOCK WASHERS | 2 | 1/2" STRAIGHT FITTING |
| 2 | #048 CLAMPS | 4 | 1/4"-20 TRUSS HEAD SCREWS | 1 | 1/2" X 2" BREATHER HOSE |
| 2 | #056 CLAMPS | 4 | 1/4" RUBBER WASHERS | | |

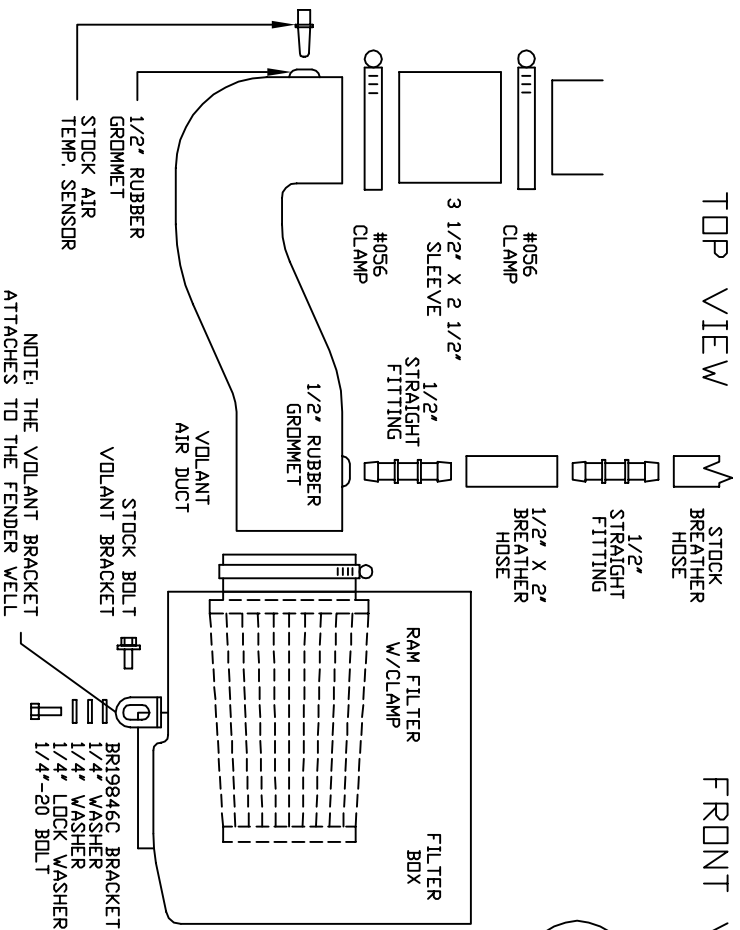

- NOTE:
1. ATTACH THE 3" X 2" SLEEVE TO THE FILTER BOX WITH A #048 CLAMP. DO NOT TIGHTEN.
 2. BEFORE ATTACHING THE ACCESSORY RAM AIR SCOOP, REMOVE THE PLASTIC INSERT FROM THE AIR VENT LOCATED NEXT TO THE LOWER LIGHT HOUSING ON THE DRIVER'S SIDE.
 3. ATTACH THE BR26852 BRACKET TO THE RAM AIR SCOOP WITH THE HARDWARE PROVIDED.
 4. ATTACH THE RAM AIR SCOOP TO THE 3" X 2" SLEEVE WITH A #048 CLAMP. DO NOT TIGHTEN. ATTACH THE OTHER END OF THE BRACKET TO THE EXISTING HOLE WHERE THE STOCK SYSTEM WAS FASTENED WITH A STOCK BOLT.
 5. ADJUST ALL PARTS AND HARDWARE THEN TIGHTEN BOLTS & CLAMPS.

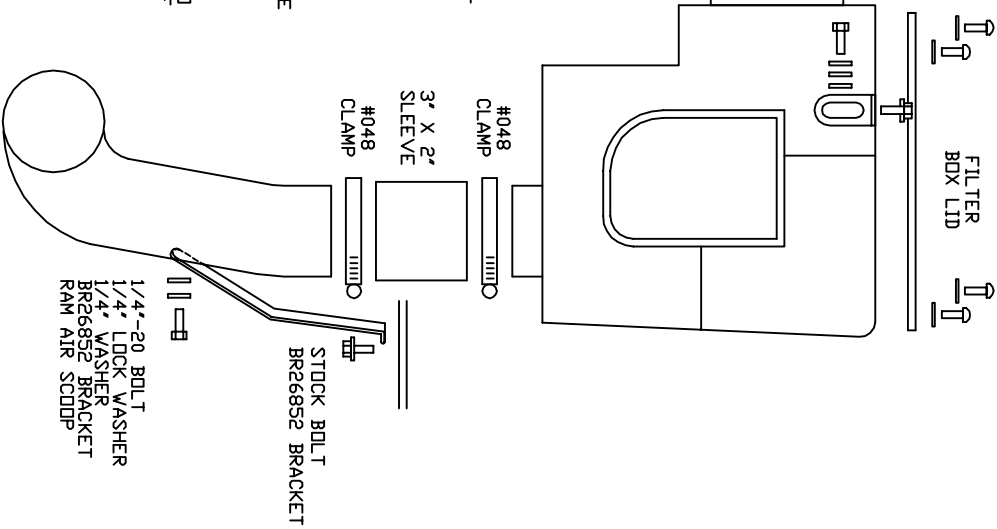



Volant Performance
 Rancho Cucamonga, CA 91730
 (909) 481-3888 Tech Support
 (909) 476-1491 Fax
 www.volant.com

READ INSTRUCTIONS THOROUGHLY BEFORE DISASSEMBLING. DO NOT SKIP ANY STEPS. ANY QUESTIONS ON A VOLANT KIT MAY BE REFERRED TO OUR TECH SUPPORT LINE AT (909) 481-3888 OR VISIT OUR WEBSITE AT WWW.VOLANT.COM

INSTALLATION INSTRUCTIONS PART NO. 16857152

Installation Instructions:

1. Disconnect negative battery cable
- Under car:
2. Jack up the front of the vehicle and put vehicle on jack stands
 3. Remove the front skid plate by removing 6 plastic tabs (3 on each side) with flathead screwdriver also remove the 10 7mm bolts and 2 10mm bolts
 4. Remove the rear skid plate by removing the 2 existing 10 mm bolts
- 5.Remove the factory resnator box
- Under hood:
6. Remove the engine cover by pulling up
 7. Pull stock breather hose located out of the factory box
 8. Remove the factory 10mm bolt holding the box down located on the core support
 9. Remove the air temp sensor by gently pulling STRAIGHT out
 10. Loosen the factory clamp holding on the factory air duct onto throttle body by using a 5/16 socket or nut driver or flathead screwdriver
 11. Remove the factory box and duct
 12. Remove the rubber grommet from the bottom of the factory box
- Installation of Volant Cool Air Intake:
13. Prior to installing Volant box put the Volant fitting inside of the factory rubber grommet and install on the Volant box by pressing the grommet through hole in box
 14. Prior to installing Volant box attach the 3" X 2" Volant sleeve to the bottom of the Volant box using a #48 clamp tighten clamp with a 5/16 socket or nut driver or flathead screwdriver
 15. Prior to installing Volant box install the smaller L bracket to the Volant box using a ¼ lock washer ¼ washer and a 12mm bolt
 16. Place Volant box in factory position and tighten down box with the factory 10mm bolt
 17. Place the ½ straight fitting into the Volant duct, than the Volant ½ sleeve than the Volant ½ fitting IE duct-fitting-breather hose-fitting
 18. Place the 3 ½ X 2 ½" sleeve on the Volant duct and tighten with a #56 clamp using a 5/16 socket or nut driver or flathead screwdriver
 19. Place the Volant filter through the hole in the box and clamp to the Volant duct using a 5/16 socket or nut driver or flathead screwdriver
 20. Place the open end of the 3 ½ X 2 ½ sleeve onto throttle body and tighten the #56 clamp using a 5/16 socket or nut driver or flathead screwdriver
 21. Place the factory breather hose onto the Volant ½ hose fitting
 22. Place the stock air temp sensor into the ½ rubber grommet on the Volant duct
 23. Re-install the factory engine cover by pressing down on factory mounts
- Installation of Volant scoop:
26. Attach the Volant scoop to the bottom of the Volant box and tighten the #48
 27. Clamp with a 5/16 socket or nut driver or flathead screwdriver
 28. Attach Volant bracket the factory bolt location on top of the inner wheel well
 29. Attach scoop to the Volant bracket with ¼-20 bolt ¼ lock washer and ¼ washer. Tighten with 12mm socket or 12mm wrench
 30. Reinstall factory skid plates
 31. Reinstall the negative battery cable

WARNING: OVER TIGHTENING HARDWARE MAY ALTAR THE INTEGRITY OF THE VOLANT AIR INTAKE SYSTEM.

BEFORE ROAD TESTING

1. Start engine, leaving the transmission in park and securing the parking brake.
2. Make sure to look and listen for any unusual noises or air leaks. Repair problems if needed.
3. Once completed it will be necessary to check periodically for realignment and tightening of all connections.
4. Once all tests are completed, enjoy the performance of your new Volant Air Intake System.

CARE AND CLEANING

Check the cotton reusable filter periodically and remove any excessive dirt build-up by tapping the filter on the ground and brushing off the loosened dirt. Clean the filter by using Volant's Filter Recharger Kit. Volant's Filter Recharger Kit is designed to restore original air flow. Re-oil every 10,000 miles without cleaning to improve filtering in sand and dirt. Clean only when dirt is very excessive or 50,000 miles.

RECOMMENDED SERVICE PARTS

| RECOMMENDED SERVICE PARTS | PART NO. |
|---------------------------|----------|
| REPLACEMENT FILTER | 5124 |
| PREFILTER | 51902 |
| CLEANING KIT | 5100 |

APPLICATION GUIDE

| MY | MAKE | MODEL | ENG. |
|-------|----------|-------|------|
| 04-09 | CHRYSLER | 300 | 5.7L |

INSTALL

