


VOLANT COOL AIR INTAKES
 PART NO.: 17861
 INSTALLATION INSTRUCTIONS
 WWW.VOLANT.COM
 TECH SUPPORT: (909) 481-3888


17861 PARTS LIST		3 1/4" WASHERS
1	VOLANT FILTER BOX	1 1/4" LOCK WASHER
1	VOLANT FILTER BOX LID	1 1/4" NUT
1	VOLANT AIR DUCT	4 1/4"-20 TRUSS HEAD SCREWS
1	RAM FILTER W/CLAMP	4 1/4" RUBBER WASHERS
2	#056 CLAMPS	1 1/2" RUBBER GROMMET
1	3 1/4" X 3' SLEEVE	1 VOLANT BRACKET
1	1 1/4"-20 BOLT	1 1/2" X 15" BREATHER HOSE

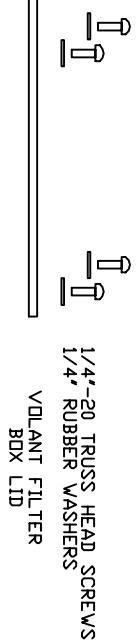

SIDE VIEW



VOLANT
FILTER BOX



TOP VIEW




THROTTLE
BODY

#056 CLAMP



3 1/4" X 3'
HUMP HOSE

LOCATION FOR
AIR TEMP SENSOR

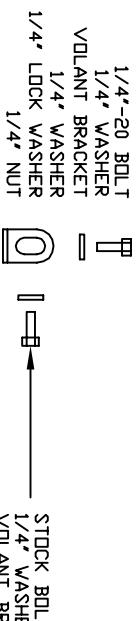

STOCK BOLT
1/4" WASHER
VOLANT BRACKET

LOCATION FOR
AIR TEMP SENSOR



LOCATION FOR
AIR TEMP SENSOR

1/2" RUBBER
GROMMET

1/2" X 15'
BREATHER HOSE



RAM FILTER W/CLAMP

VOLANT AIR DUCT



17861 install instructions

1. Disconnect the negative battery cable.



2. Loosen the clamp holding the duct to the throttle body



3. Un clip the ATS sensor harness from the sensor.




4. Loosen the clamp holding the duct to the box.



5. Remove the factory air duct.

6. Remove the breather hose from the air box and crankcase.

7. Remove the factory air box top and filter.

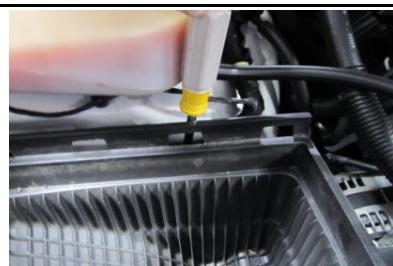

8. Remove the bolt holding the air box down.



9. Un clip the ram inlet from the front of the air box.



10. Remove the factory air box.



11. Remove the grill pins and remove the grill.



12. Install the volant bracket.



13. Install the volant air box.



14. Attach the box to the volant box.



15. Install the scoop into the volant box.



16. Re install the grill.



17. Slide the filter through the air box.



18. Press the volant duct into the filter.



23. Press the ATS sensor into the volant duct and attach the harness.



19. tighten the clamps holding the duct to the filter and the throttle body.



24. Re attach the negative battery cable.



20. Attach the breather hose to the crankcase vent hose and the motor.



21. Attach the air box lid.



22. Remove the ATS sensor.