


VOLANT COOL AIR INTAKES  
 PART NO.: 26083150  
 INSTALLATION INSTRUCTIONS  
 WWW.VOLANT.COM  
 TECH SUPPRT: (909) 481-3888

26083150 PARTS LIST

1	VOLANT AIR DUCT	2	1/4" LOCK WASHERS
2	VOLANT CAS SCOOPS	2	1/4" NUTS
2	RAM FILTER W/CLAMPS	1	1/2" GRDMET
2	#072 CLAMPS	2	VOLANT BRACKETS
1	4" X 2 3/4" SLEEVE		
2	1/4"-20 BOLTS		
4	1/4" WASHERS		

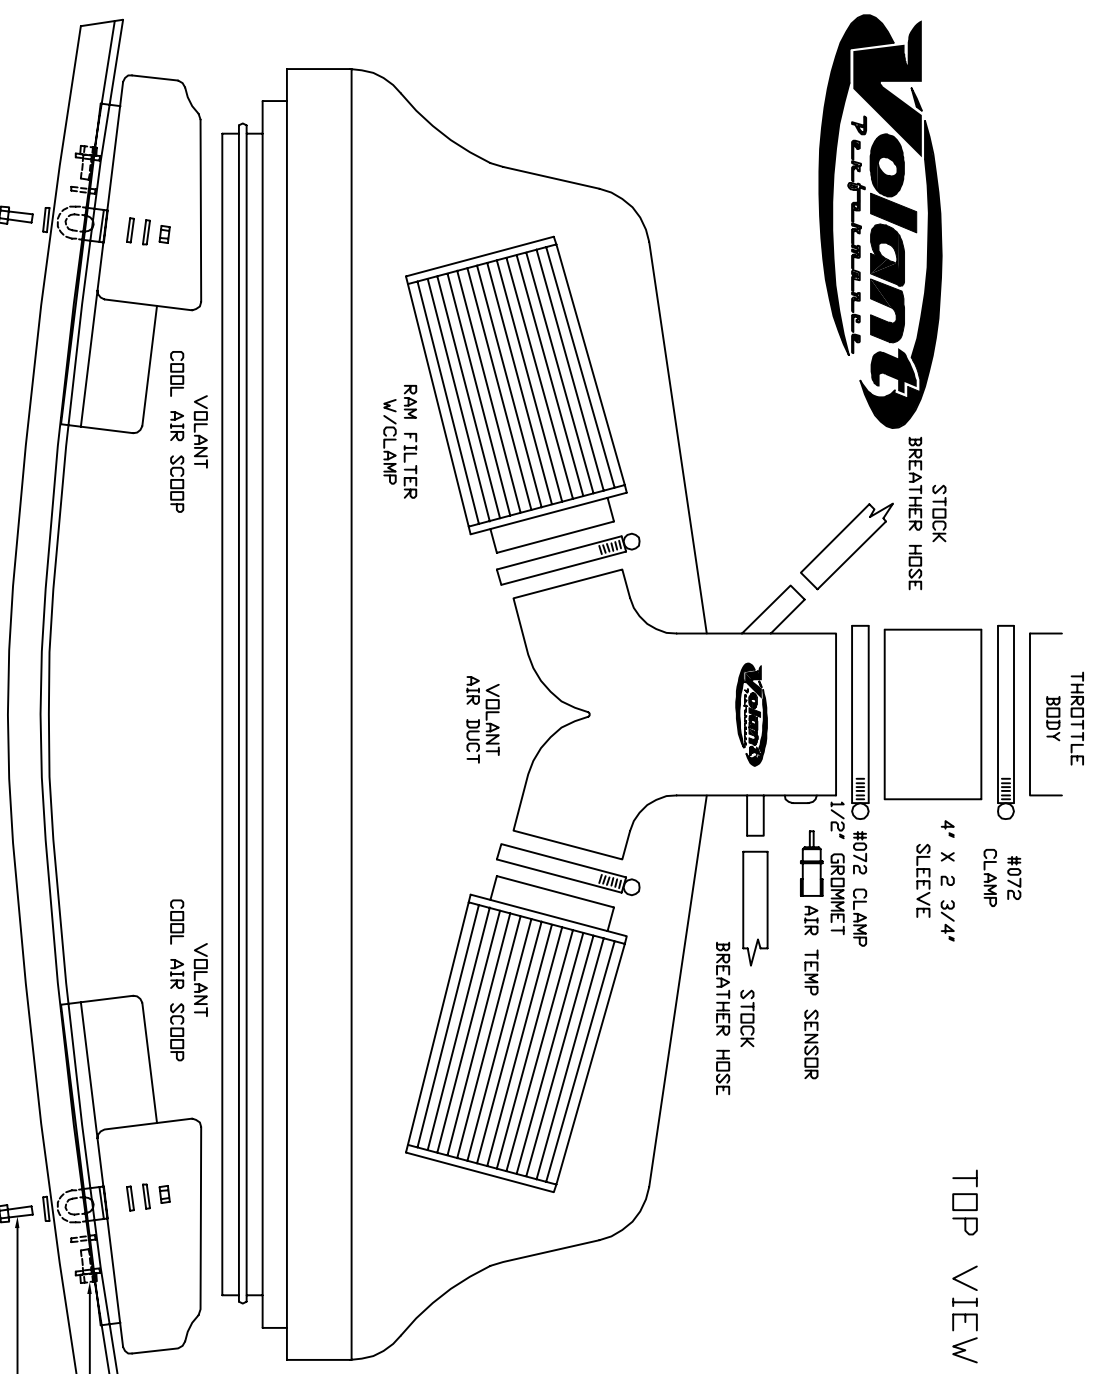

TOP VIEW

NOTE: ATTACH THE VOLANT BRACKET TO THE COOL AIR SCOOP. PLACE THE SCOOP BETWEEN THE RADIATOR CORE AND THE FRONT BUMPER. ATTACH THE SCOOP TO UNDERNEATH THE VINYL COVER USING THE STOCK BOLT AND 1/4" WASHER

- 1/4"-20 BOLT
- 1/4" WASHER
- VOLANT BRACKET
- 1/4"-20 BOLT
- 1/4" WASHER
- VOLANT BRACKET
- 1/4" WASHER
- VOLANT CAS SCOOP
- 1/4" WASHER
- 1/4" LOCK WASHER
- 1/4" NUT



Volant Performance  
 Rancho Cucamonga, CA 91730  
 (909) 481-3888 Tech Support  
 (909) 476-1491 Fax  
 www.volant.com

**READ INSTRUCTIONS THOROUGHLY BEFORE DISASSEMBLING. DO NOT SKIP ANY STEPS. ANY QUESTIONS ON A VOLANT KIT MAY BE REFERRED TO OUR TECH SUPPORT LINE AT (909) 481-3888 OR VISIT OUR WEBSITE AT WWW.VOLANT.COM**

**INSTALLATION INSTRUCTIONS PART NO. 26083150**

**Installation Instructions:**

1. Disconnect the negative battery cable.
2. Un clamp the (2) crankcase vent hoses.
3. Remove the (2) screws holding the factory air box top on and remove the box.
4. Remove the ATS sensor from the factory duct by pulling straight out.
5. Loosen the air duct clamp at the throttle body and remove the factory wing nut, Remove the duct and factory filters.
6. Attach the 4 x 2.75 sleeve to the throttle body and and tighten with a #72 clamp.
7. Press the volant duct into the open end of the sleeve and tighten down with a #72 clamp.
8. Attach the (2) volant ram filters
9. Press the ATS sensor into the volant duct and reattach the breather hoses.
10. Reinstall the air box cover.
11. Attach the long portion of the L brackets to the Volant scoops with the hardware provided.
12. Attach the scoops to the core support using the factory bolts
13. Reinstall the negative battery cable.

**WARNING: OVER TIGHTENING HARDWARE MAY ALTAR THE INTEGRITY OF THE VOLANT AIR INTAKE SYSTEM.**

**BEFORE ROAD TESTING**

1. Start engine, leaving the transmission in park and securing the parking brake.
2. Make sure to look and listen for any unusual noises or air leaks. Repair problems if needed.
3. Once completed it will be necessary to check periodically for realignment and tightening of all connections.
4. Once all tests are completed, enjoy the performance of your new Volant Air Intake System.

**CARE AND CLEANING**

Check the cotton reusable filter periodically and remove any excessive dirt build-up by tapping the filter on the ground and brushing off the loosened dirt. Clean the filter by using Volant's Filter Recharger Kit. Volant's Filter Recharger Kit is designed to restore original air flow. Re-oil every 10,000 miles without cleaning to improve filtering in sand and dirt. Clean only when dirt is very excessive or 50,000 miles.

**RECOMMENDED SERVICE PARTS**

RECOMMENDED SERVICE PARTS	PART NO.
REPLACEMENT FILTER	5115
CLEANING KIT	5100

**APPLICATION GUIDE**

MY	MAKE	MODEL	ENG.
03-06	DODGE	VIPER	8.3L

**INSTALL**

