


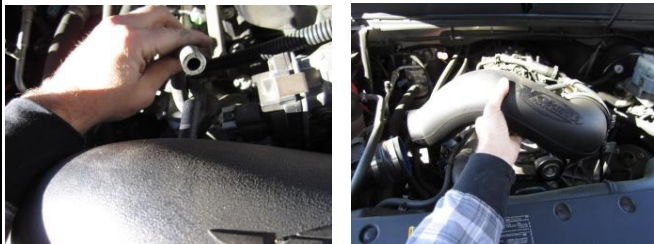
Install Instructions	Parts List	Tools Required	
Part Number: 725253 Year: 07-11 Make: GM Model: Esc, Ava, Sil LT, Sie LT, Sub, Tah, Yuk Engine: 4.8, 5.3, 6.0, 6.2	1. TB spacer # 4655253 2. Spacer gasket # 5655253 3. (4) 6mm x 70 # 59012217 4. (4) 1/4 lock washers # 59020114 5. (4) 6mm washers # 59020108 6. Counter sunk screw # 59012219 7. Plate # 5755253	5/16 socket of wrench 4mm socket or wrench 10mm six socket or wrench 5/32 allen wrench	

1. Disconnect the negative battery cable. Remove the engine cover. Remove the clip holding the radiator hose.

2. Loosen the 2 clamps holding the air duct to the throttle body and to the MAF sensor or air box.



3. Remove the breather hose and remove the duct.



4. Remove the (2) 10mm bolts and (2) 10mm nuts than remove the (4) 4mm studs.



5. Install the TB gasket and spacer using the hardware provided.



6. If you are using your factory system remove the small factory ball stud and insert the supplied bracket with the counter sunk screw relocate the stud and grommet.



7. Re-install the air intake ducting, radiator hose clamp, engine cover and negative battery cable.



Volant Cool Air Intakes
 10285 Indiana Ct.
 Rancho Cucamonga, CA 91730

TECH LINE (909) 481-3888
 www.Volant.com
 Part number: 725253