




Anvil Overland

Anvil Dash-Bar Installation Instructions


Tools Needed

- Small screwdriver or trim removal tool
- 1/4" Ratchet Handle with Extension
- 10mm Socket
- 4mm Hex key

1. Remove lower grab handle bolt cover on driver and passenger A-Pillar with trim removal tool or screwdriver.
2. Remove lower grab handle bolt on driver and passenger A-Pillar with a 10mm socket
3. Thread Short-Bar threads into the bolt holes
4. Insert 1/4" ratchet handle into slot at the end of the bar and tighten
5. Assemble screws on to the End Clamps as shown
6. Place End-Clamps on to the ends of the Main-Bar and slightly tighten with 4mm hex key so they do not fall off
7. From the Passenger side guide assembly into the vehicle and rest the bar on the steering column
8. Insert Passenger End Clamp on to Short Bar and tighten moderately
9. Repeat on Drivers side
10. Go back to passenger side and make sure End Clamp is completely inserted. Then tighten End Clamp assembly until secure.
11. Repeat on drivers side

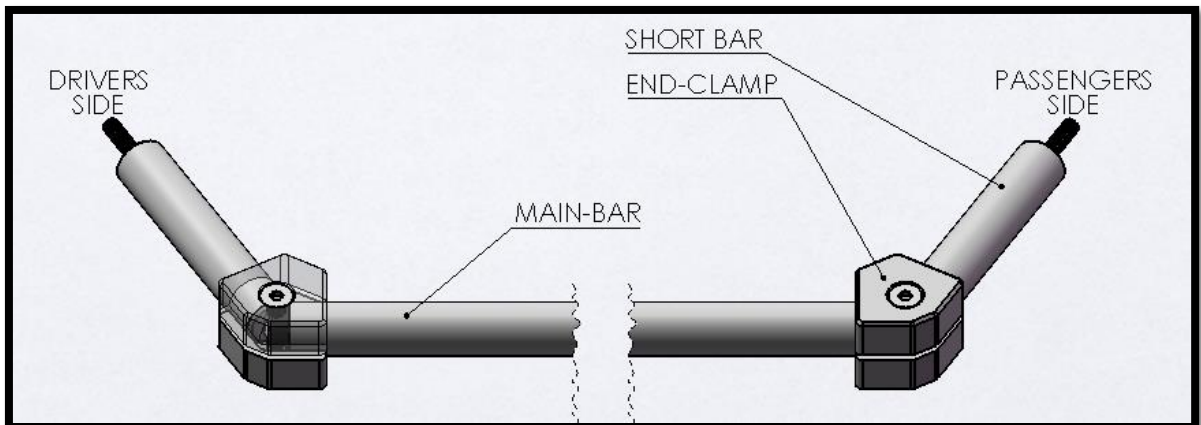

12. Install center support as shown

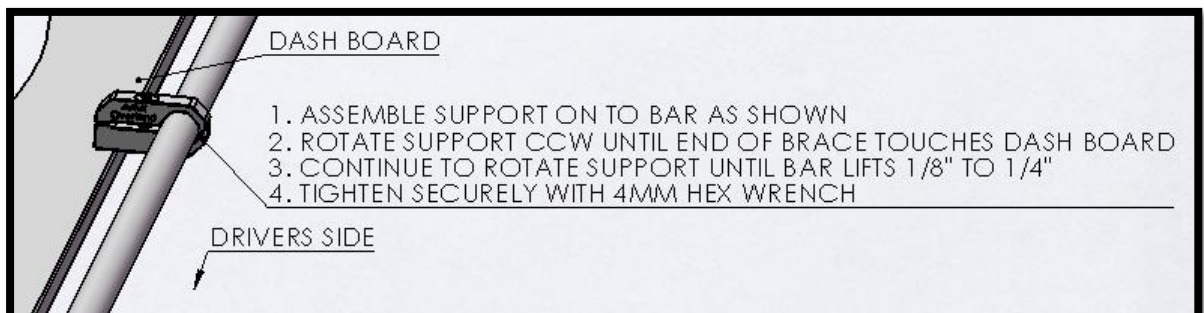



Anvil Overland

Anvil JL/JT Dash-Bar