JOE BED

MCM HOUSE

Assembly instructions


- We suggest you spend a short time reading through this leaflet and then follow the simple step by step instructions.
- Do not discard any of the packaging until you have checked that you have all the parts and the pack of fittings.

PARTS

A	В	С	D	E	F	G	Н	I
							(h)	
Headboard 1x	Left side plate 1x	Right side plate 1x	Footboard 1x	Slats 1x	4x	M8 8x	M8x30mm 36x	M8 14x
J	K	L	M	N	0	P		
		10		0		(1)	Ĭ	Ě
8x	2x	8x	Ø13mm Spring washer 46x	Ø18mm Flat washer 46x	Allen Key 1x	M8 Spanner 1x	2 people required for assembly	


1

- Assemble 2 x legs (F) to the under side of Headboard (A).
- Screw 4 x thread (G) into the headboard by hand.
- Tighten until Thread G can be screwed no further.

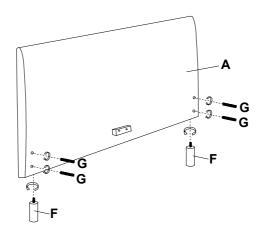

2


- Assemble Side plates B and C to headboard, ensuring thread G is visible in the side plate cut out holes.
- Once side plates and headboard are firmly pushed together and components L, N, M and I are in place (refer to drawing) tighten with spanner P.
- Tip before using Spanner P, screw components L, M, N and I by hand as tight as possible this will save time. Then tighten down with Spanner P.

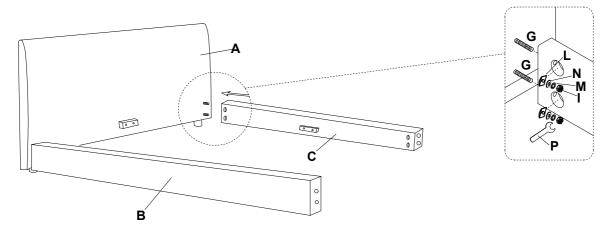

JOE BED | MCM HOUSE T. 1300 997 975 | MCMHOUSE.COM PAGE 1 OF 4


3

- Screw the remaining 4×10^{-2} k thread (G) into the thread holes on foot board D, tighten by hand until G can go no further into footboard D.

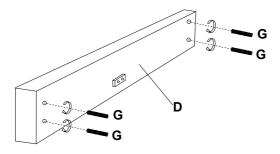

4


- $\ Attach \ footboard \ D \ into \ side \ plates \ B \ and \ C, \ ensuing \ thread \ G \ is \ visible \ in \ the \ cut \ out \ holes. \ Refer to \ drawing \ \ assemble \ sides \ and \ foot \ with \ L,M,N,I,P.$
- Tip before using Spanner P, screw components L, M, N and I by hand as tight as possible this will save time. Then tighten down with Spanner P.

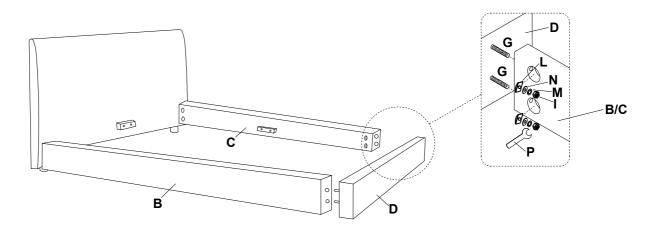

JOE BED | MCM HOUSE T. 1300 997 975 | MCMHOUSE.COM PAGE 2 OF 4


5

- Attach corner brackets (J) to the pre drilled holes that now line up on pieces B, C, D and headbaord.
- Brackets J attach by fastening the bracket to B, C and D with components H, M and N. Refer to drawing.
- Ensure they are all tight with Allen Key O.

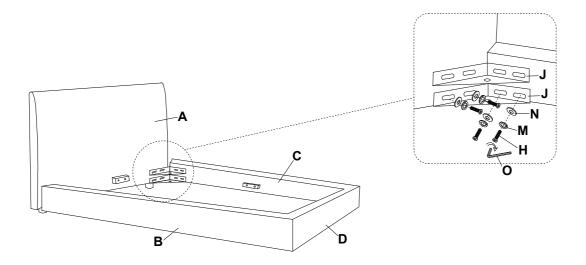

6


- At the foot of the bed attach the last 2 remaining feet to bottom bracket J that is now in place. Lift the base of the bed up and place the thread of the foot through the center hole in the bottom bracket.
- Tighten components I, \dot{M} and \dot{N} with spanner P.

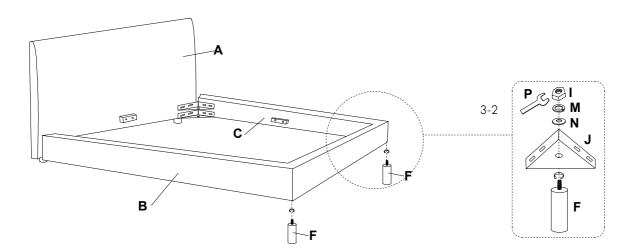

JOE BED | MCM HOUSE T. 1300 997 975 | MCMHOUSE.COM PAGE 3 OF 4


7

- Attach 2 x legs K to the under side of Slat E with hardware O, H, M, N, I and P. Refer to drawing. Ensuring the nut and screws are fastened tight with allen K and spanner provided. The Bed is now assembled.

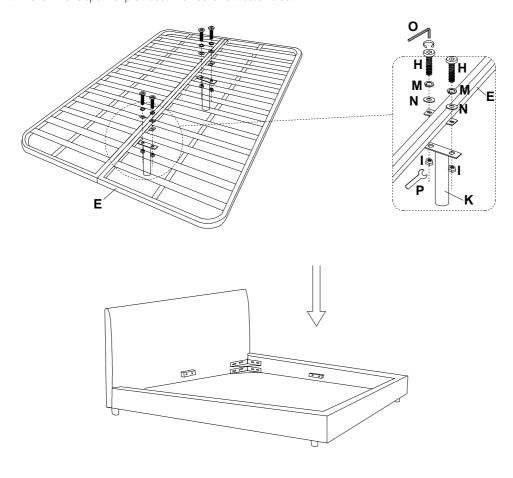

8

- Unfold your Joe Bed cover and slip over the head board first. Once the head board is fully covered, slip the remaining cover over the sides and foot. Once the cover is on the bed make any adjustments required to have the cover neatly placed. Once in place, remove the velcro strip and fix the velcro to the bedhead, sides and foot. Ensuring the cover is fitted to the bed. Place your mattress inside the frame and on the slats.

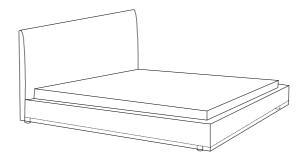

WARNING

- -These table parts can be cumbersome and heavy; the assistance of two or more people is recommended in order to prevent personal injury and ensure the table parts are not damaged during the assembly process.
- Keep fittings out of childrens' reach

JOE BED | MCM HOUSE T. 1300 997 975 | MCMHOUSE.COM PAGE 4 OF 4