

NEUSPEED®

HI-FLO TURBO INLET PIPE

2014-UP AUDI A3, S3 (8V) / TT, TTS (8S) 1.8 TSI/2.0 TSI
2015-UP MQB VW GOLF, GTI, GOLF R, ALLTRACK, SPORTWAGEN 1.8 TSI/2.0 TSI
2018 TIGUAN/ATLAS 2.0 TSI

PART #48.02.46


INSTALLATION INSTRUCTIONS

PARTS LIST: 1 - TURBO INLET PIPE

TOOLS LIST: 1 - T30 TORX 1 - SCREWDRIVER



1. Remove factory or aftermarket air intake system to access original Turbo Inlet Pipe.

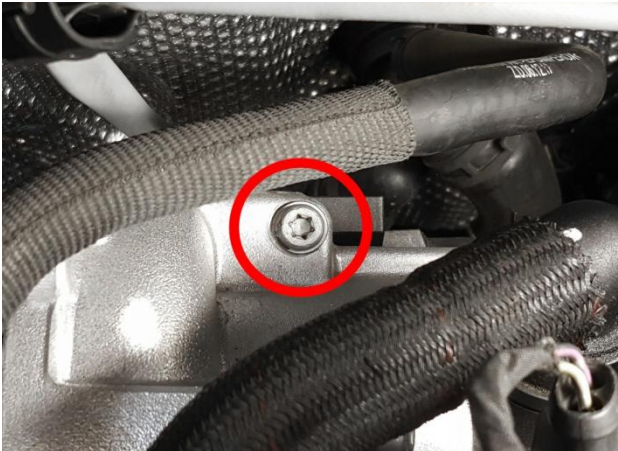

2. Using T30 Torx undo Turbo Inlet Pipe retaining screw (O-ring on back side of screw to retain).



3. Rotate turbo pipe rearward past locking tabs then pull out from turbo.




4. **Early Version:** Pull and pry with screwdriver if necessary to disconnect PCV vent hose from Turbo Pipe. **Late Version:** Squeeze collar to release locking tabs to remove PCV vent hose.



5. Remove O-ring from original pipe and install on NEUSPEED Pipe.



6. Install NEUSPEED Pipe onto turbo then rotate forward into locking tabs.

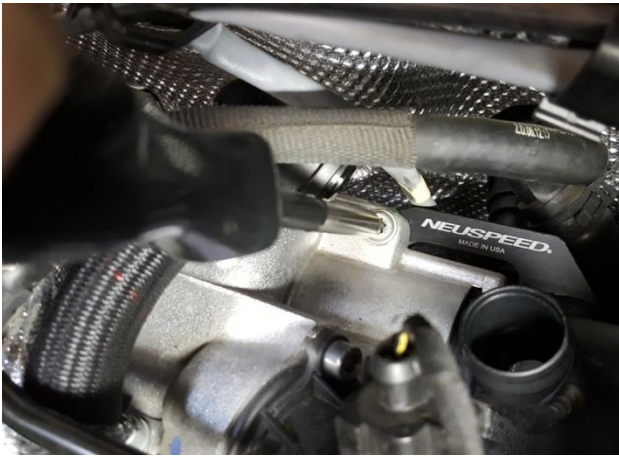

7. Now install and tighten original retaining screw.



8. Re-install PVC vent hose.

9. Re-install air intake. Double check all connections.

Copyright 2018, NEUSPEED®.
All rights reserved. Reproduction in whole or in part prohibited.
DOC. 49.02.46 Rev. 03.06.18