


Replacement Cable Cam Driver Plate

For RACOR_® PHL-1R

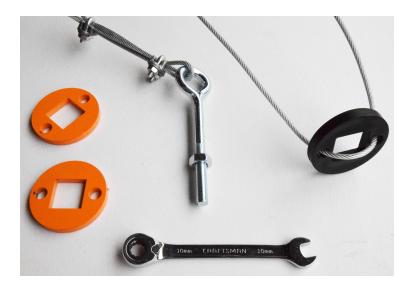

Feel more confident when removing your Wrangler top by making this upgrade to your RACOR hoist.

Kit Includes:

2 Replacement Steel Cable Cam Driver Plates (Note: Colors may vary)

Tools Needed:

10mm Wrench

Installation Instructions

- On both cables, mark the center of the cable as it passes through the original cam. This will help speed up getting the deck close to level when attaching to the platform.
- 2. Working with one cable set at a time, loosen and remove the 2 u-bolts clamps that lock the cable around one of the eye bolts. (Only one end of the cable needs to be opened up to perform this upgrade)





- 3. Next, pull the cable out of the old plastic cam.
- 4. Now thread the cable into the new steel cams, lining up the center mark in the middle of the new part.
- 5. Pull the cable back through the eye bolt, making sure to fold it back on itself once, then re-attach the u-bolt clamps around the cable and tighten the nuts.
- 6. Repeat 1 thru 5 with second cable.





TopsyProducts.com

708 Ohio Street Oshkosh WI

