


EASY INSTALL:

- Lowbrow Customs **BREATHER BOLTS**
- Gasbox **DOG DISH AIR CLEANER & BRACKET**

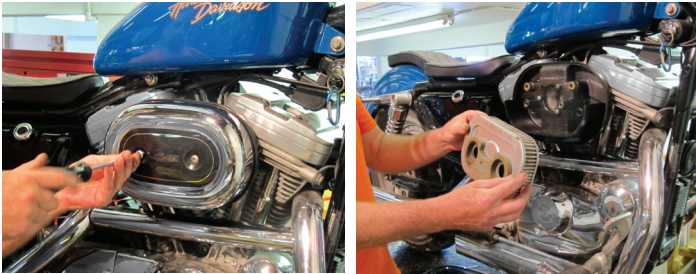

1. a.) Remove 2 Phillips head screws from stock air cleaner cover.
b.) Remove air cleaner cover & air cleaner element.




2. a.) Remove stock breather bolts & 3 screws from carb.
b.) Now, you can remove the stock air box.
c.) Remove carb gasket, and save for re-use in step 3.



3. a.) Install carb gasket, Gasbox support bracket & Lowbrow Customs breather bolts.
Do not tighten breather bolts yet.
b.) It would be a good idea to use a drop or 2 of RED Loctite on your breather bolts.



4. a.) Install backing plate for air cleaner with 3 screws, & a drop or 2 of BLUE Loctite.
b.) Tighten all fasteners including breather bolts.

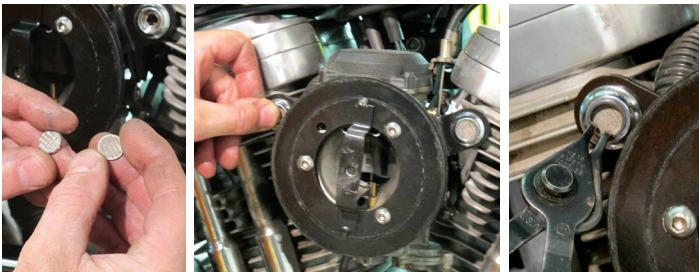

5. a.) Install mesh screens in Breather Bolts. (Fine side out.)
b.) Install snap rings, being sure they are seated.



6. a.) Install air cleaner element & cover.

"Bada-Bing, Bada-Bang, Bada-Boom! Go for a Ride!"



CV Carb:
SKU # 003867
S&S Super E Carb:
SKU # 003868



Evo Sporty CV Carb:
SKU # 003482
Big Twin Carb:
SKU # 003859



EVO
CHROME PLATED:
SKU # 003735
BLACK ED:
SKU # 003733
TWIN CAM
CHROME PLATED:
SKU # 003736
BLACK ED:
SKU # 003734