



Assembly Instructions: Roller Blinds







USA Distributor for Hoklatherm
16001 Impact Way Pflugerville, TX 78660

09.2022

Inventory List

Inventory for roof ridge installation:



	Name	Amount Pcs
	Hammer head bolt M6 x 18	4
	Washer 6.4, DIN 125, stainless steel V2A	4
	Hex nut M6, DIN 934, stainless steel V2A	4
	Eyelet M 6	4
	S-hook 4 mm	8
	Galvanized chain DIN 5685, long links (approx. 500 mm long)	4









Screw eyelets into channels of roof beams in your desired location.



Hang roller blinds in desired height using the chain and s-hooks.



Inventory list for sidewall attachment:

	Name	Amount Pcs
	Hammer head bolt M6 x 16	9
	Washer	9
	Hex nut M6, DIN 934, stainless steel V2A	9
	Eyelet M6	1
	Long nut	4
	Hook	4
	Flag cleat	2
	Cord with grip ring (length approx. 3.0 m)	2

Sidewall attachment of roller blinds:

There are holes in the keder profiles of the roller blinds. The holes are used to attach the extended (rolled-out) roller blind.

Align the assembled attachment hooks with the holes in the roller blind profile.



Assembly of attachment hook:

Assemble the hook, hammer head bolt and other items in the following order to build the attachment hook.



Attach cord on eyelet.



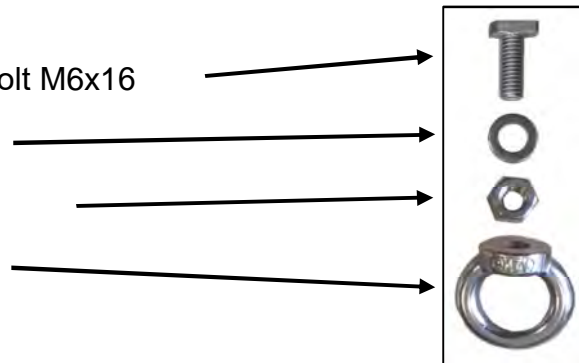
Guide of the cord consisting of:

Hammer head bolt M6x16

Washer

Hex nut M6

Eyelet M6






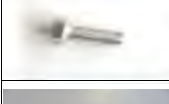


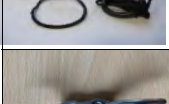

The cord can be run through this guide on the sidewall.



Inventory List

Inventory for sidewall installation:



	Name	Amount Pcs
	Hammer head bolt M6 x 18	4
	Washer 6.4, DIN 125, stainless steel V2A	7
	Hex nut M6, DIN 934, stainless steel V2A	7
	Hex screw M6 x 16, DIN 933, stainless steel V2A	3
	Eyelet M6	3
	Mounting brackets	2
	Cord with grip ring (length approx. 3.0 m)	1
	Flag cleat	1



The roller blind is mounted on the gutter profile by using the mounting brackets.



Mounting brackets



The shading fabric is tensioned on a roll by utilizing a spring.



The eyelet is used to guide the cord. The eyelet is screwed to the vertical profile just before the floor profile.



The cord is wrapped around the flag cleat several times to prevent the shade from retracting.



Customer Service or
Assembly Questions?

Give us a call
Toll free: 1-877-760-8500
customerservice@exaco.com
Exaco Trading
www.EXACO.com

*Please watch our animated assembly
video on our Exaco Trading Co
YouTube Channel.
Find the link at www.exaco.com*

