

## Fitting Instructions – A step by step guide

Prior to installing the console cover, it's important to understand how the console cover is constructed. Please turn it inside out to understand. **We've found that if one section underneath is misfitted the console won't close.**

As per the photo below you will see when 2 panels are joined together, there is approximately 10mm of back sewn neoprene. If the back sewn seams are incorrectly positioned (see step 4 - below) it stops the console from closing.



**Once understood turn the console cover back to its normal way.**


**Step 1)** Lift the centre console into the upright position and fit the centre console cover over the top of the console

**Step 2)** Feed the Velcro through the gap between the console. It is an incredibly tight fit, so you may need to angle one section through the gap as a starting point and then pull the rest through.

**Step 3)** Join the Velcro together



**Step 4)** If the console cover isn't closing, it is because of a misfit.

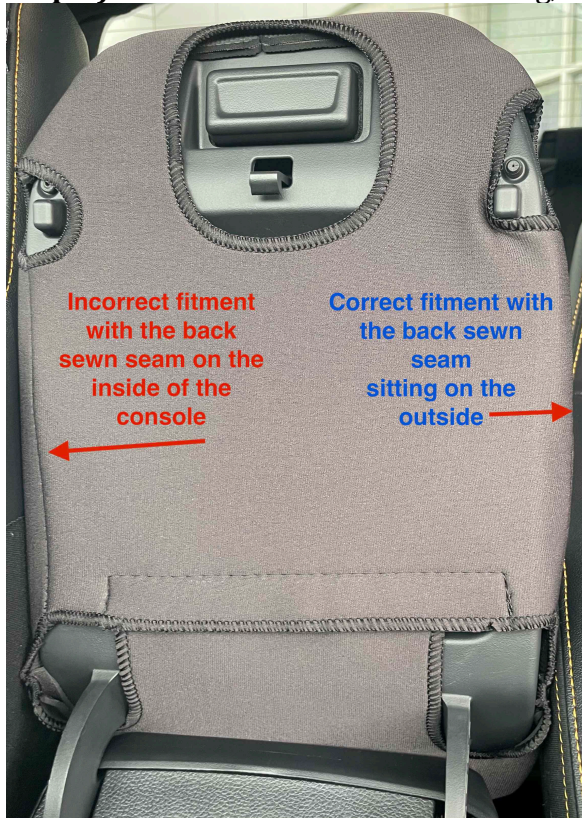

**CORRECT FITMENT** - The back sewn panels are sitting on the outside. It's best to pinch both back sewn seams outwards.





**ANOTHER EXAMPLE OF A PERFECT FITMENT - The back sewn seam sits above the console line**



**Step 5) Close the console**

