



Clear bay window

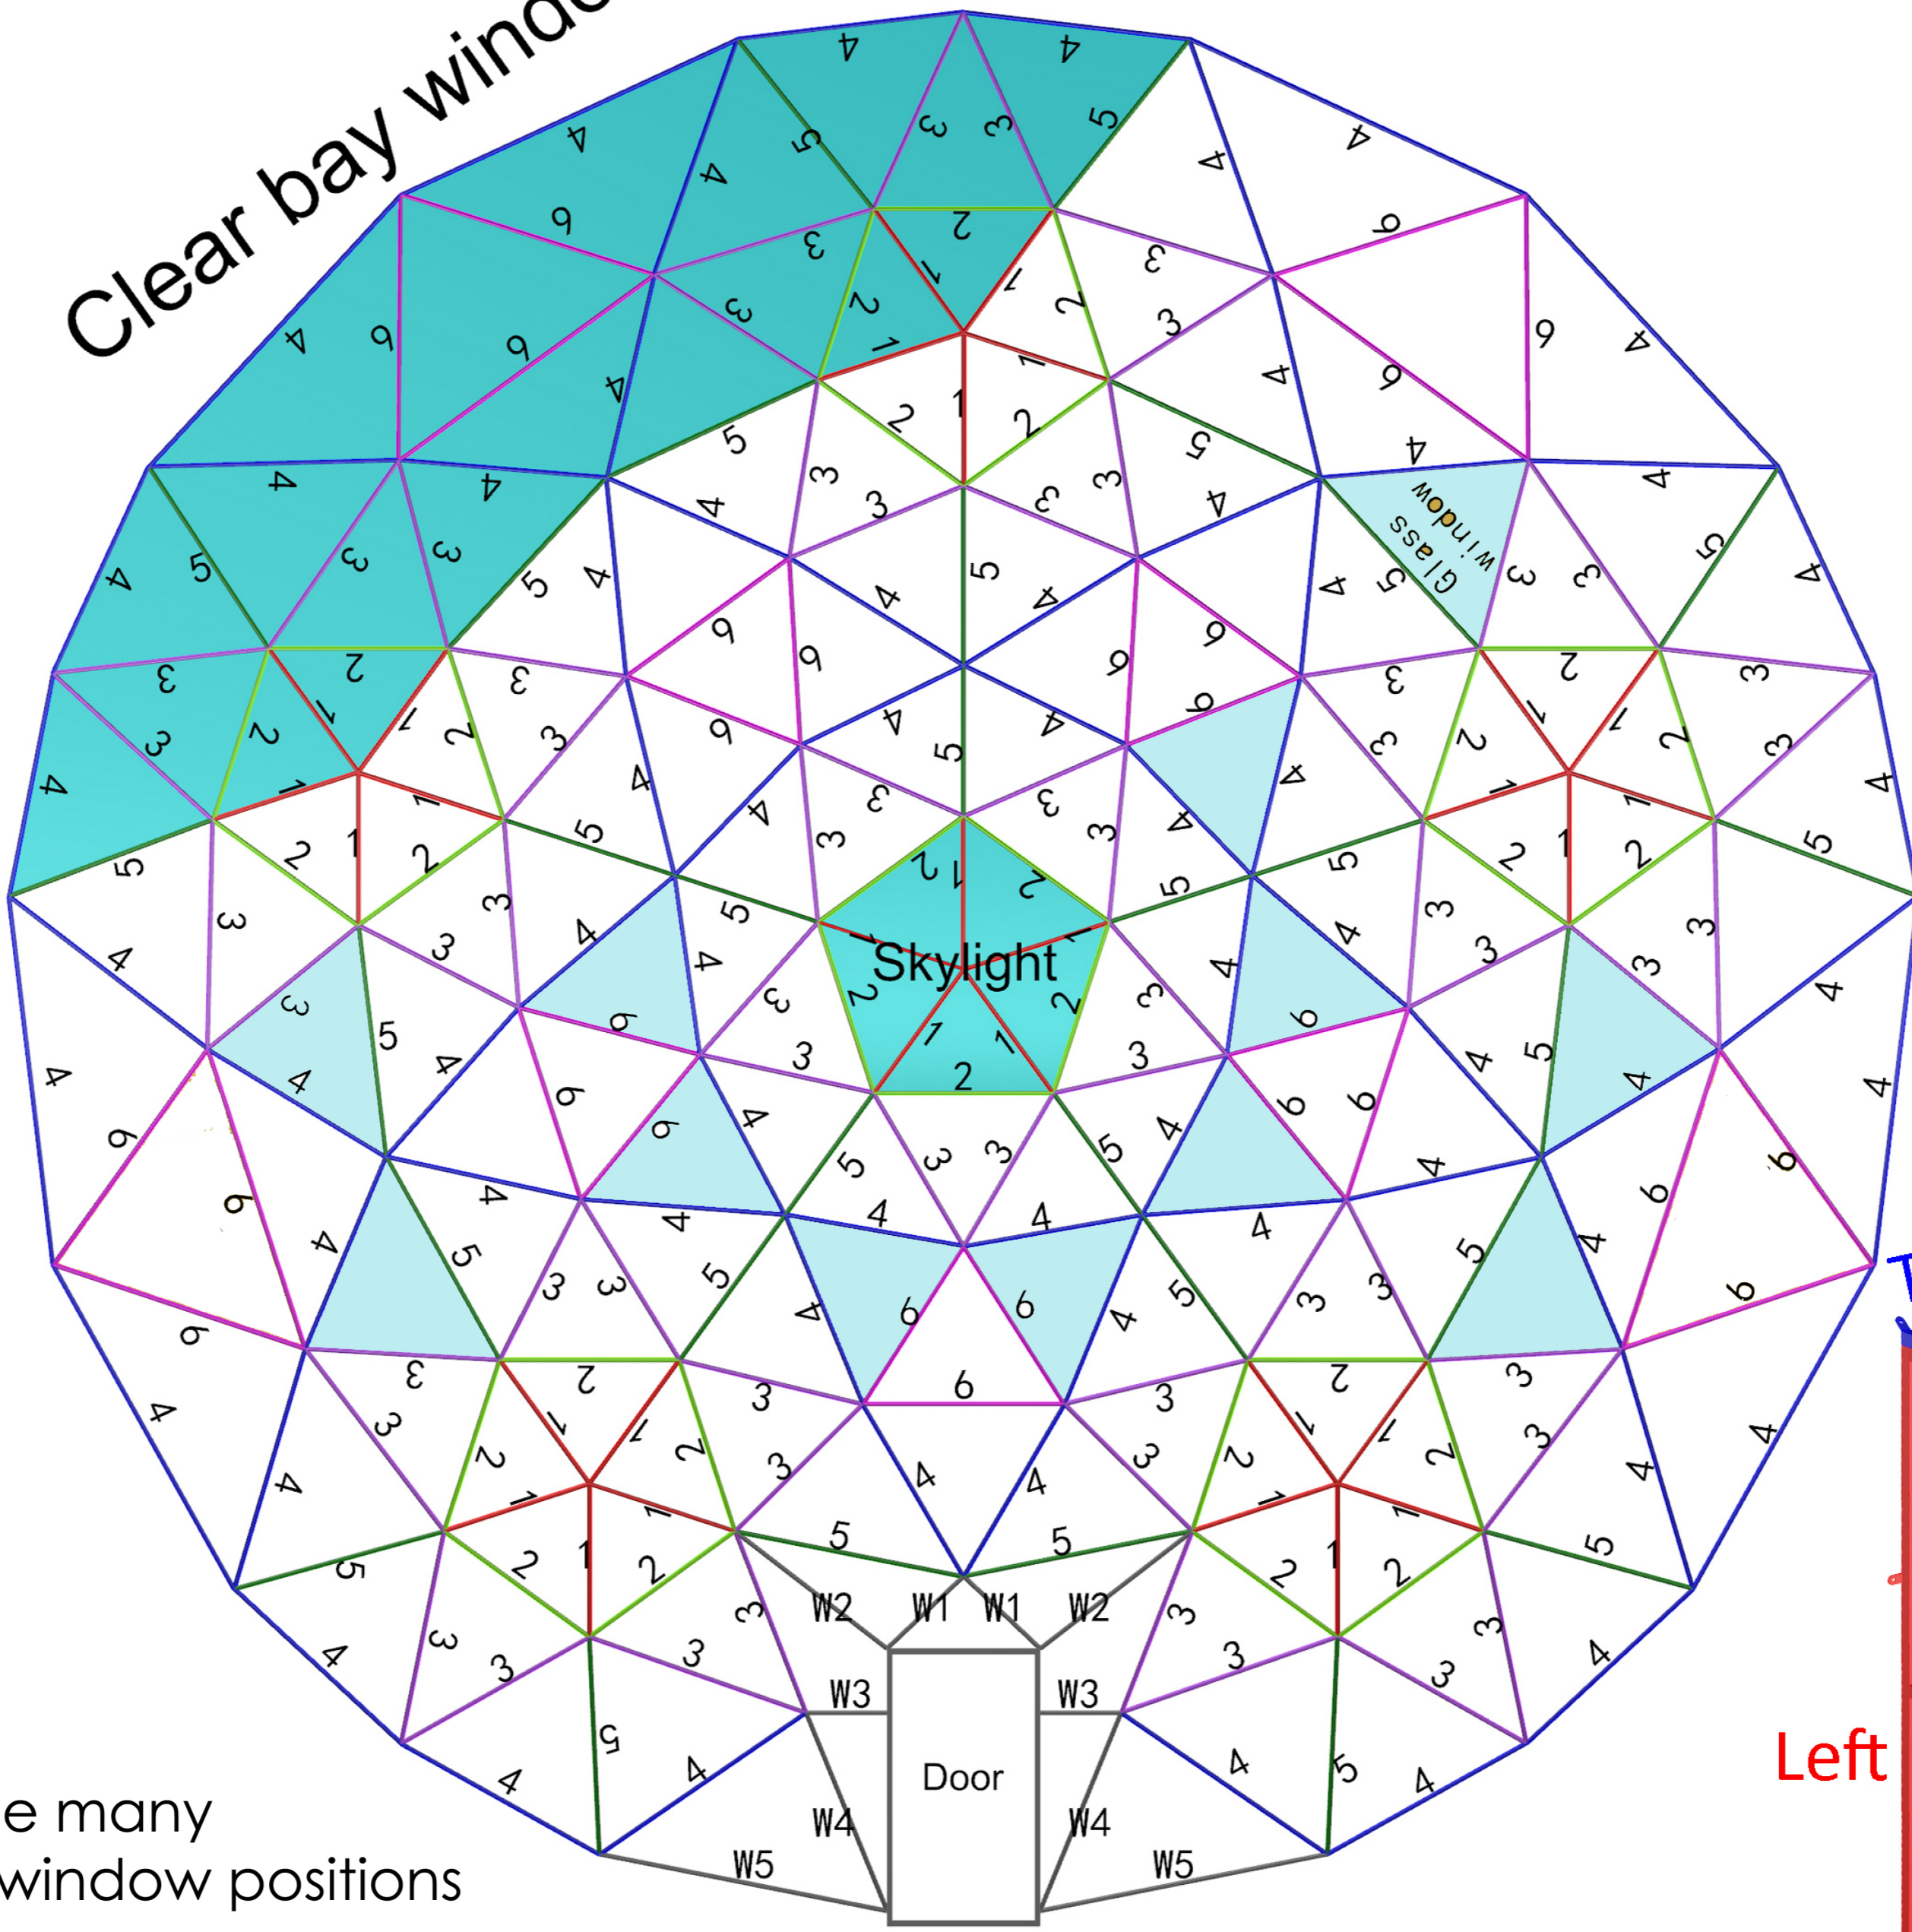







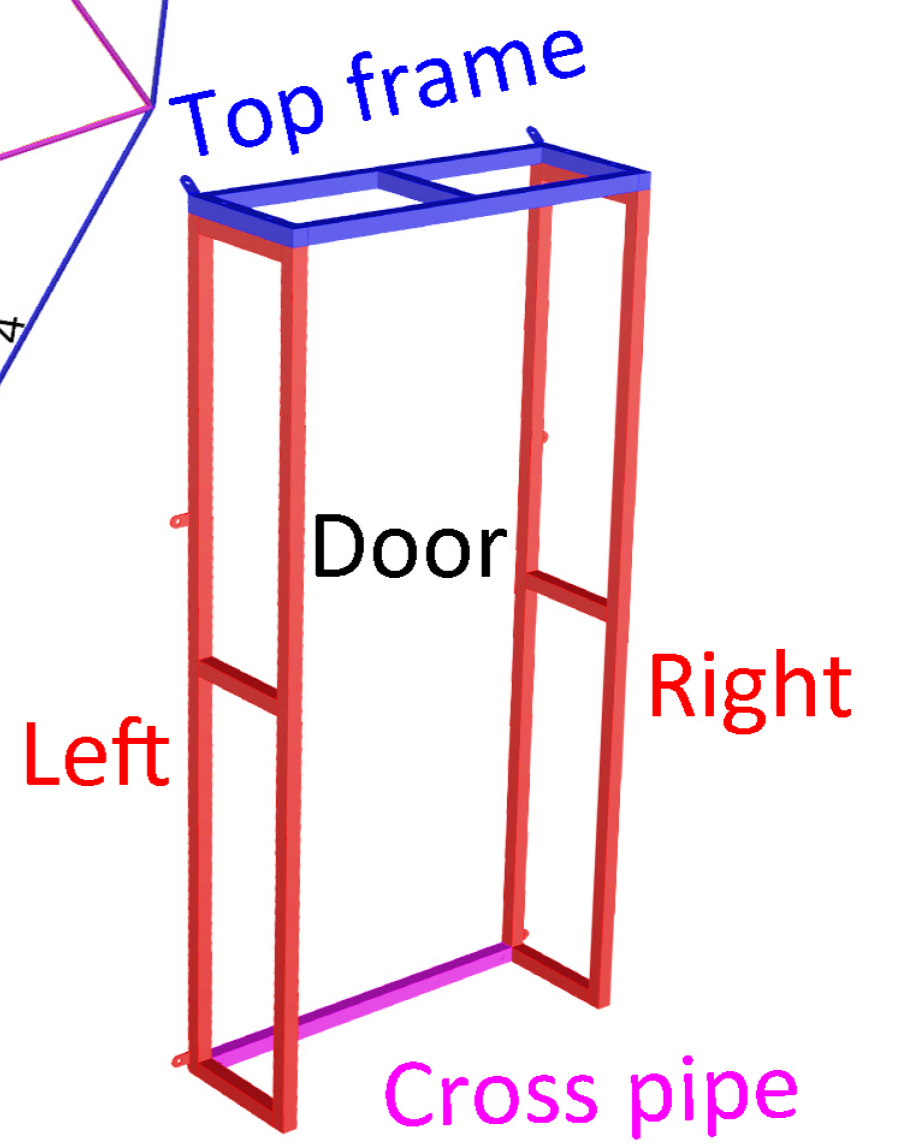


### 10M4V Dome

No.	QTY	No.	QTY
1	30	W1	2
2	30	W2	2
3	60	W3	2
4	66	W4	2
5	30	W5	2
6	27	Tensioning Pipe Y	18
Feet	19	Panorama window Tensioning Pipe Y1	4
		Tensioning Pipe By Door Y2	2


Choose 3 of the many possible Glass window positions







# 10M Oxford Liner

	NO.	QTY
	A	4
	A1	2
	B	24
	B3	1
	B4	1
	C	8
	C1	8
	W	1
	Y	1

Clear bay window

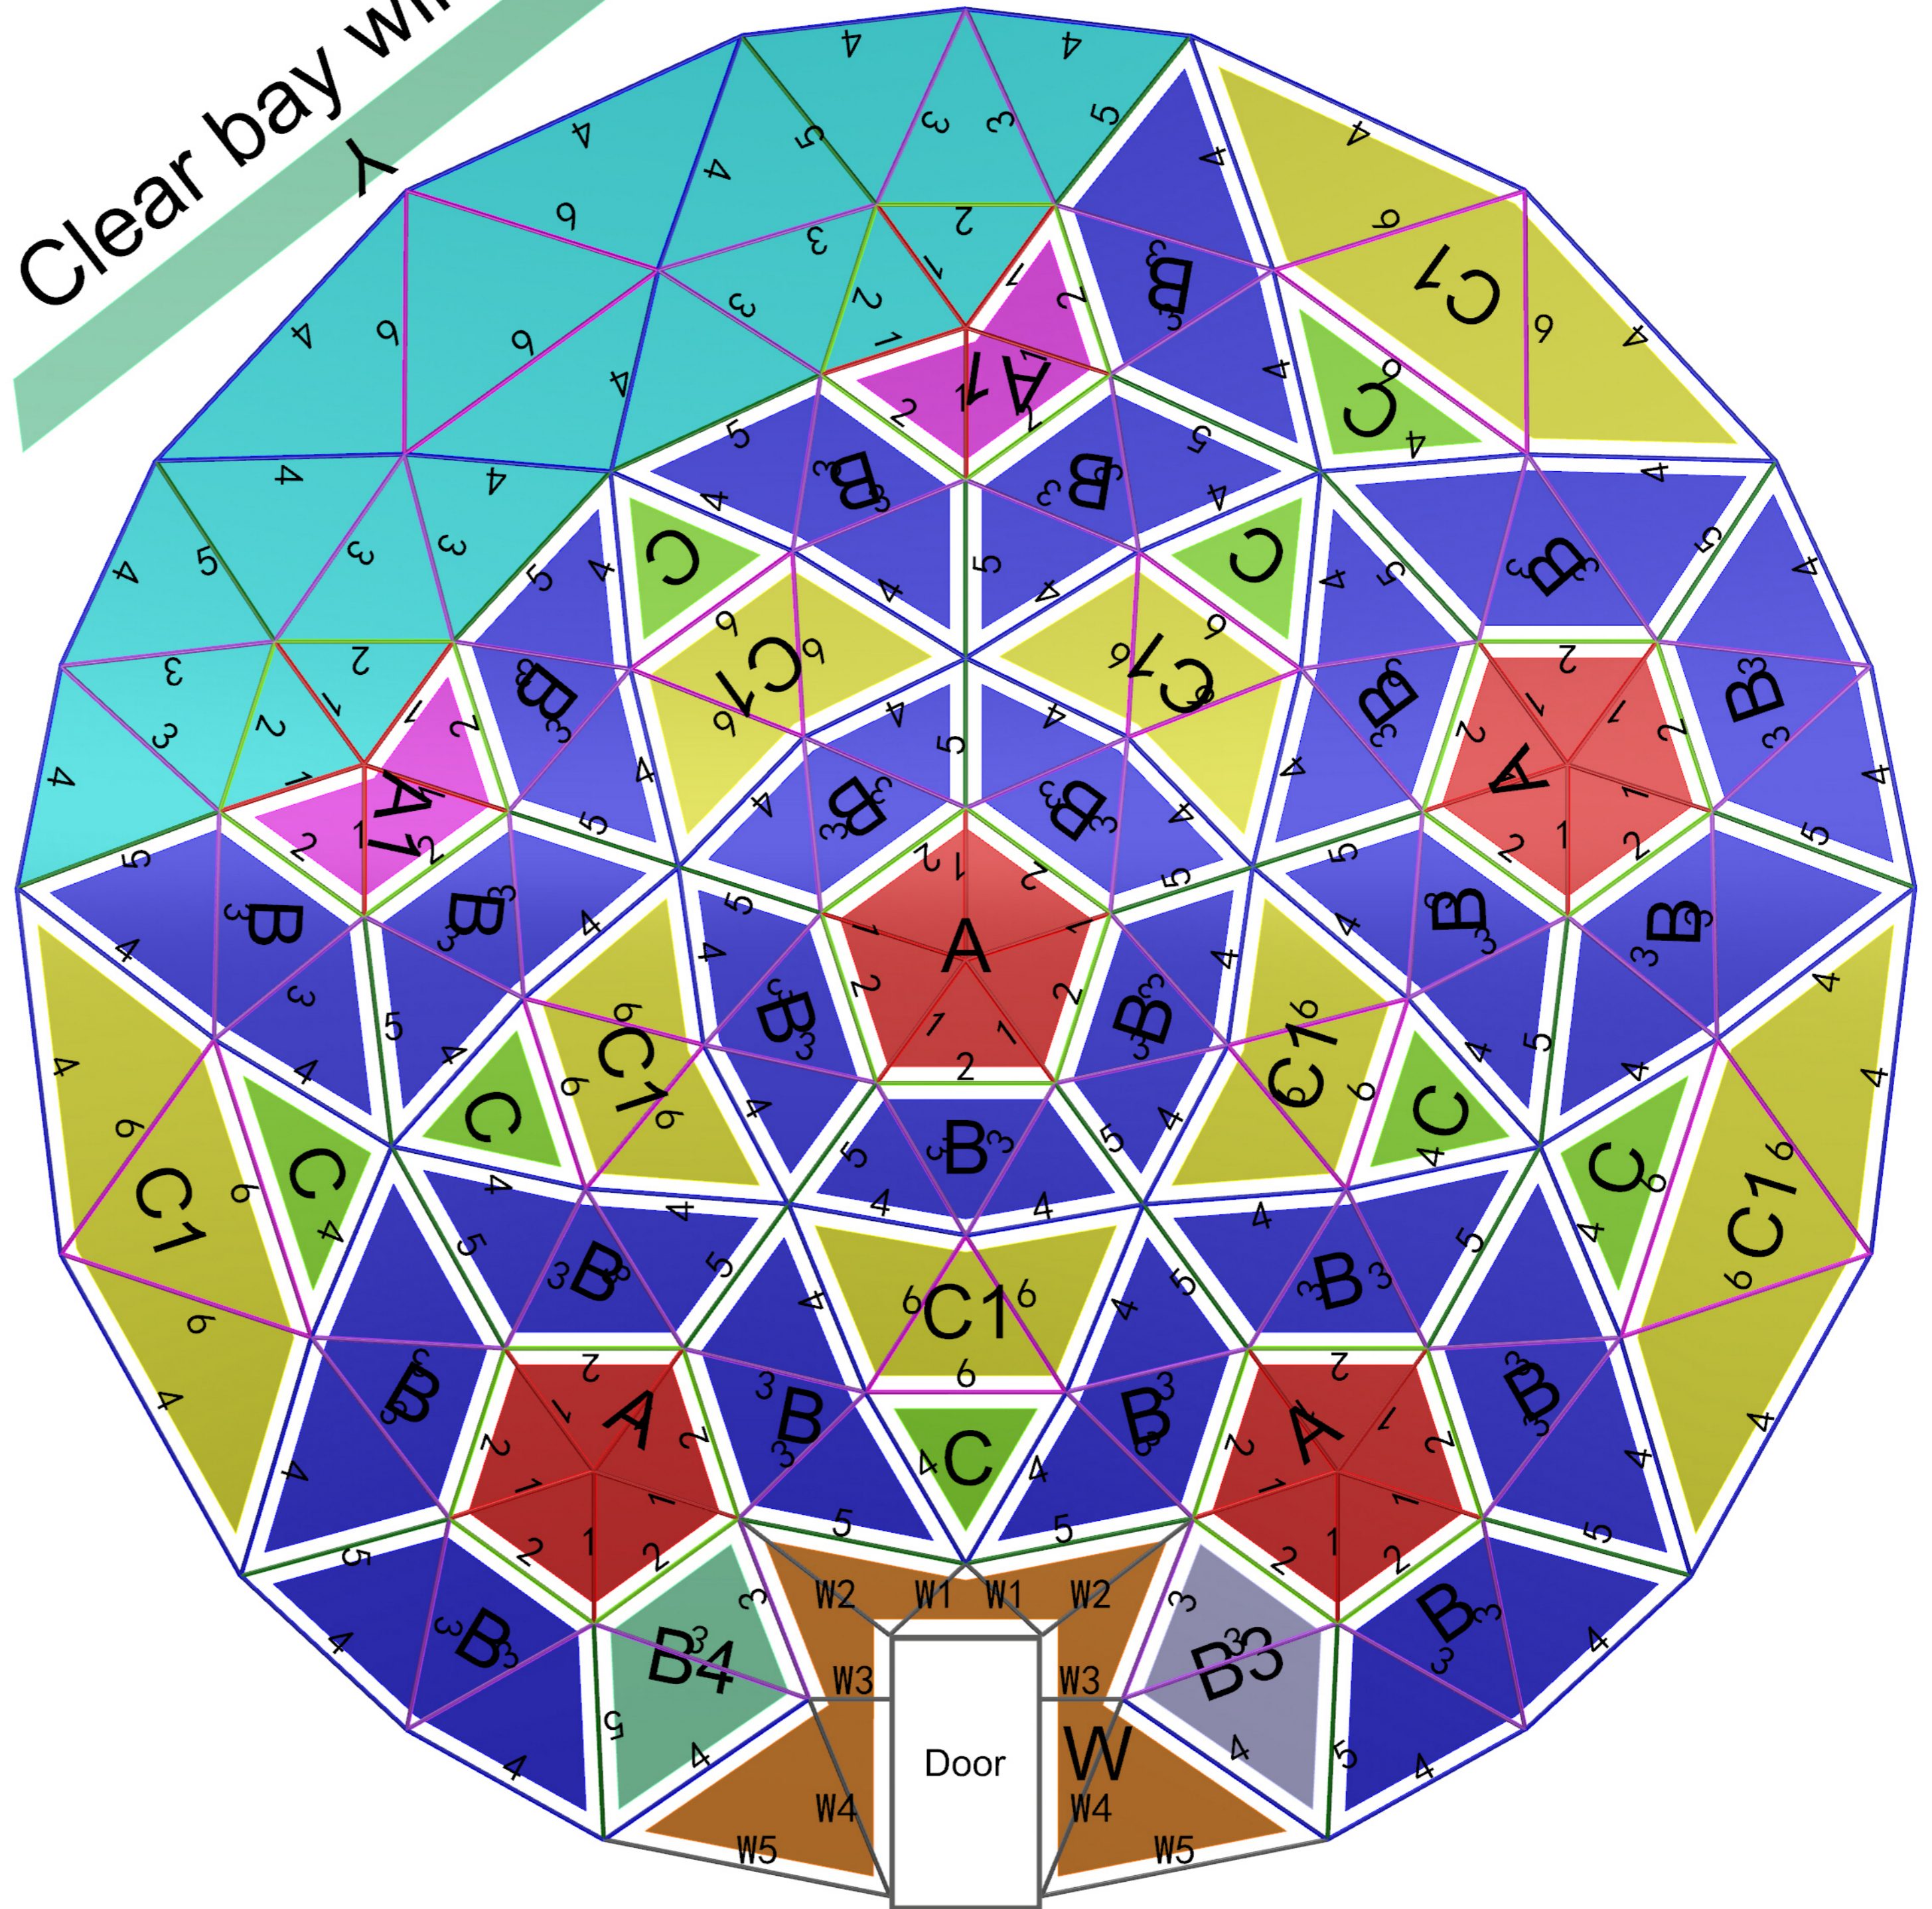

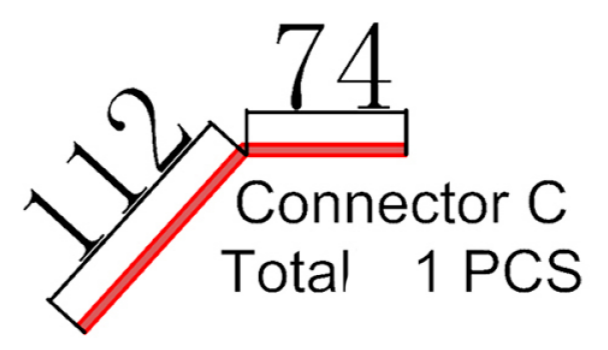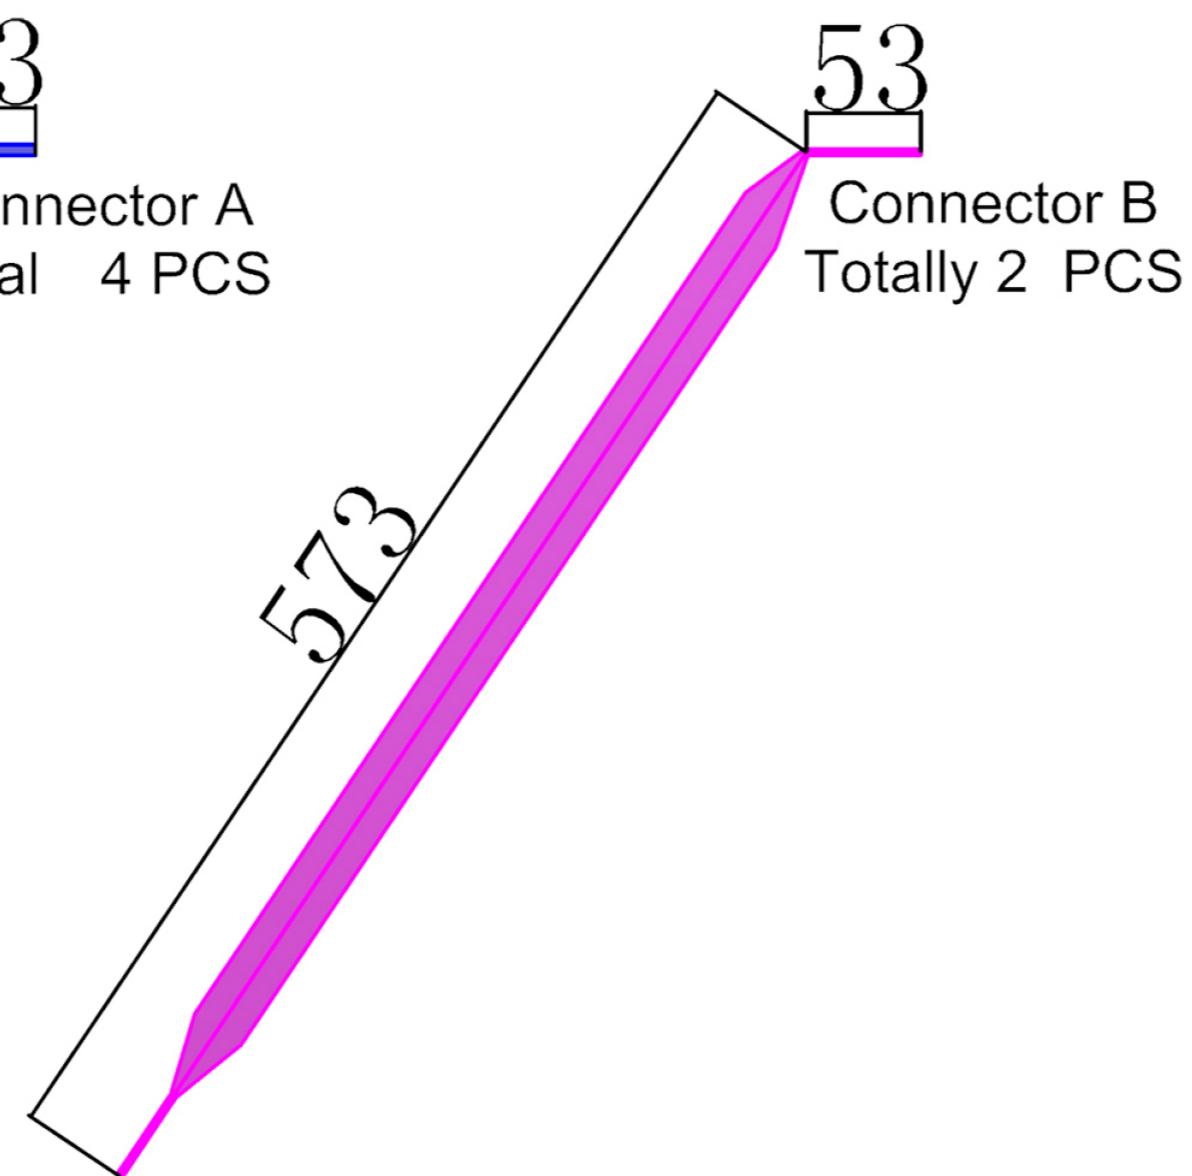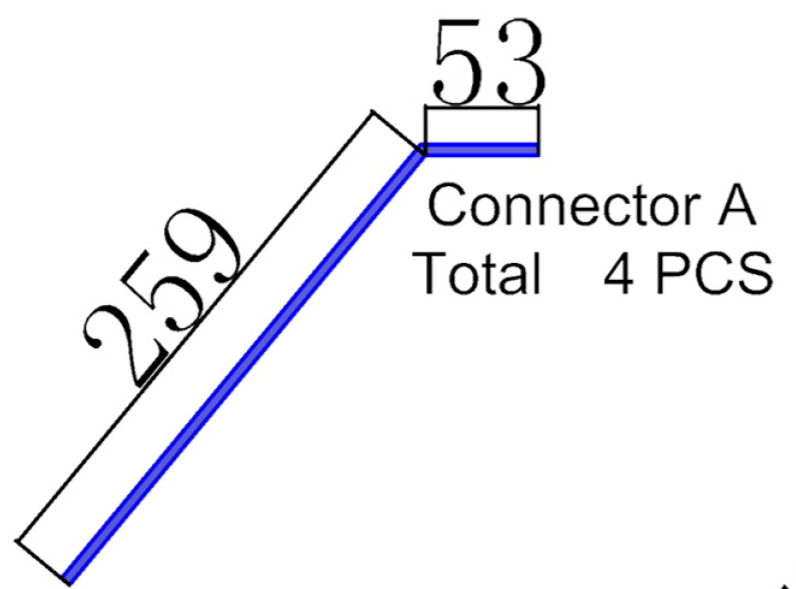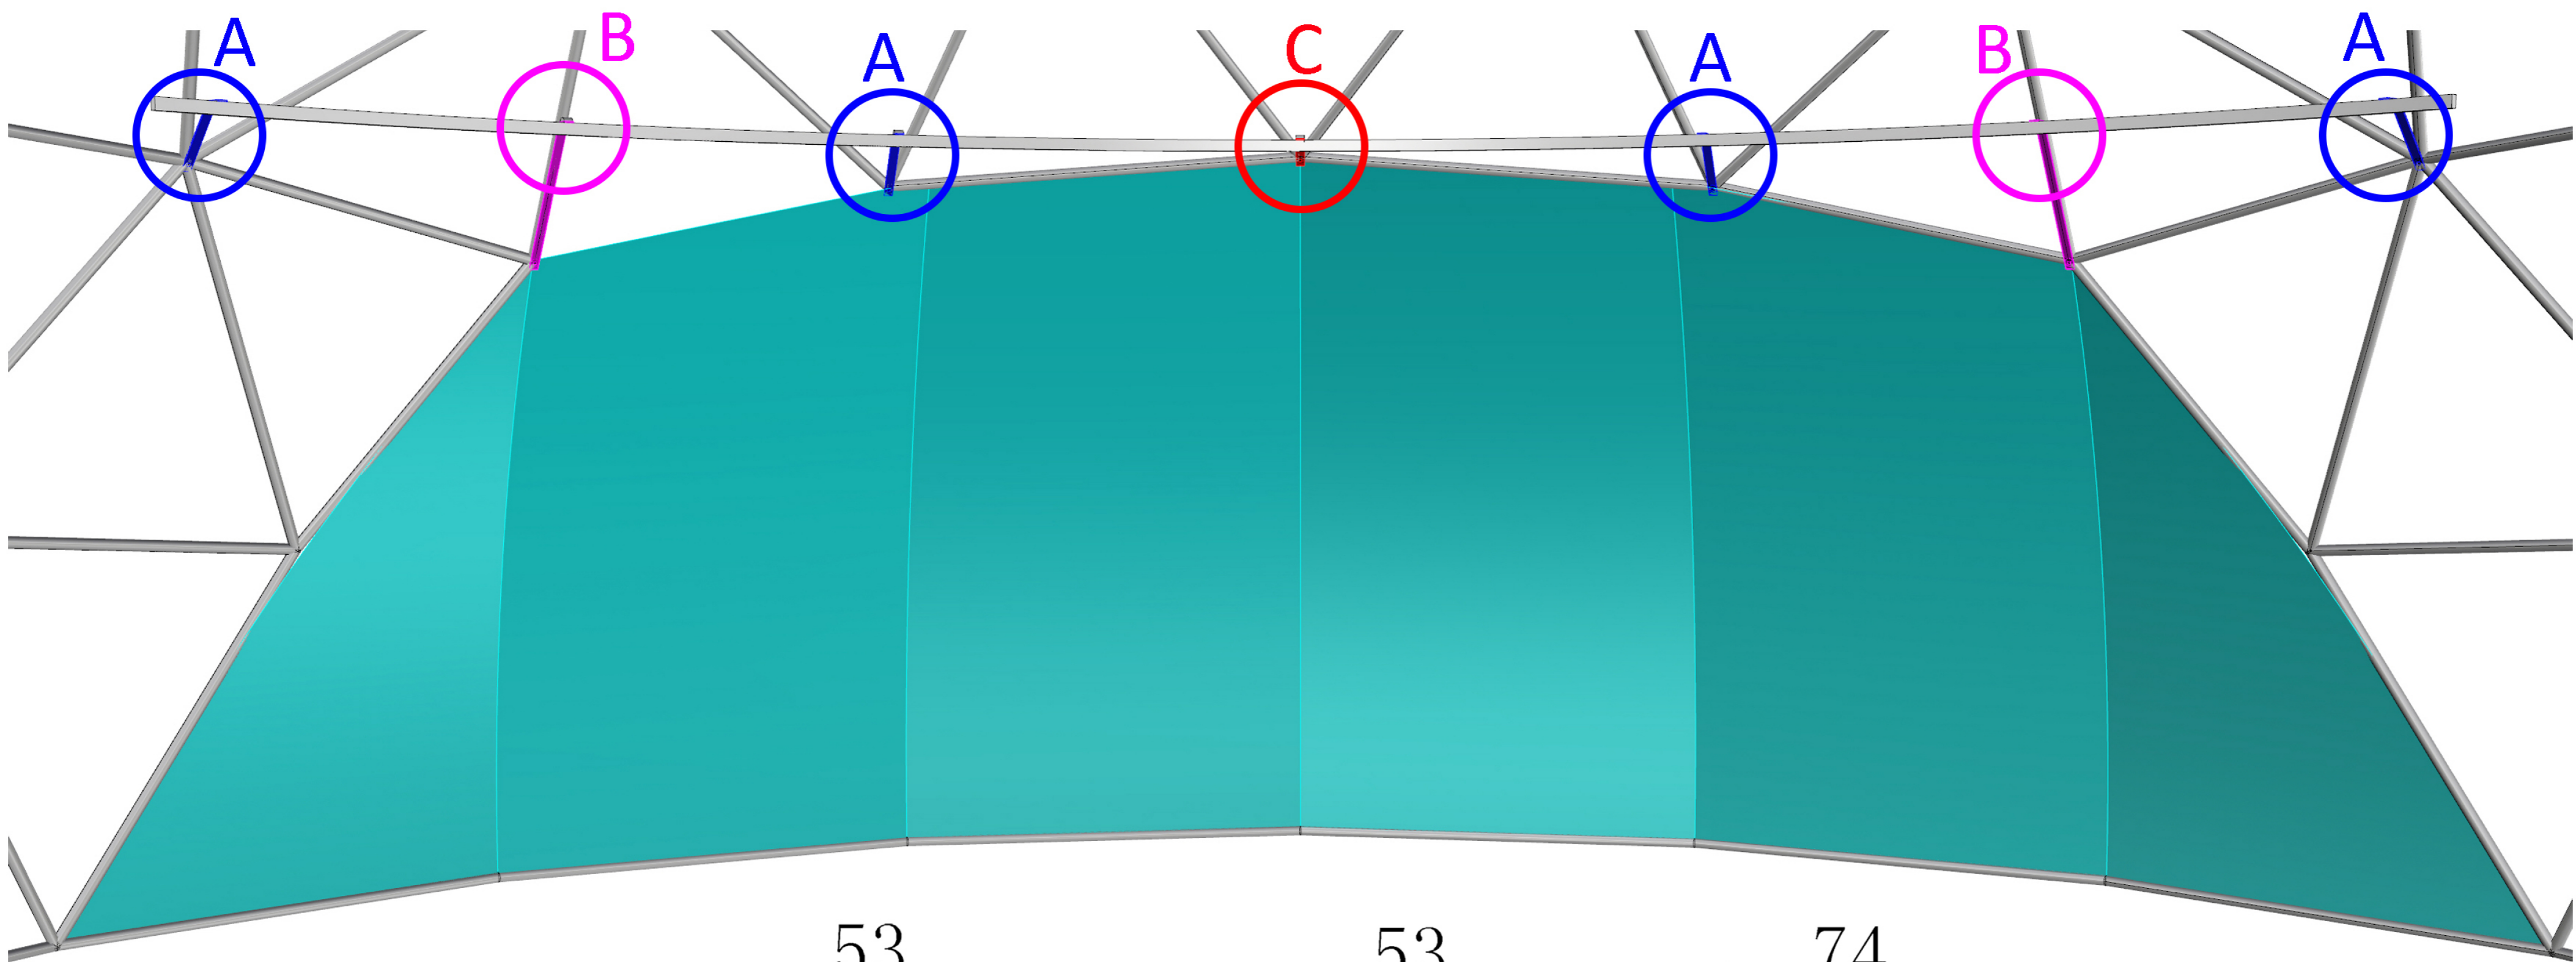

## TRIANGLE GLASS WINDOW:

After the cover is fully tensioned, Install the glass window as per the drawings attached. Check our resources for in-depth, illustrated instructions.

