

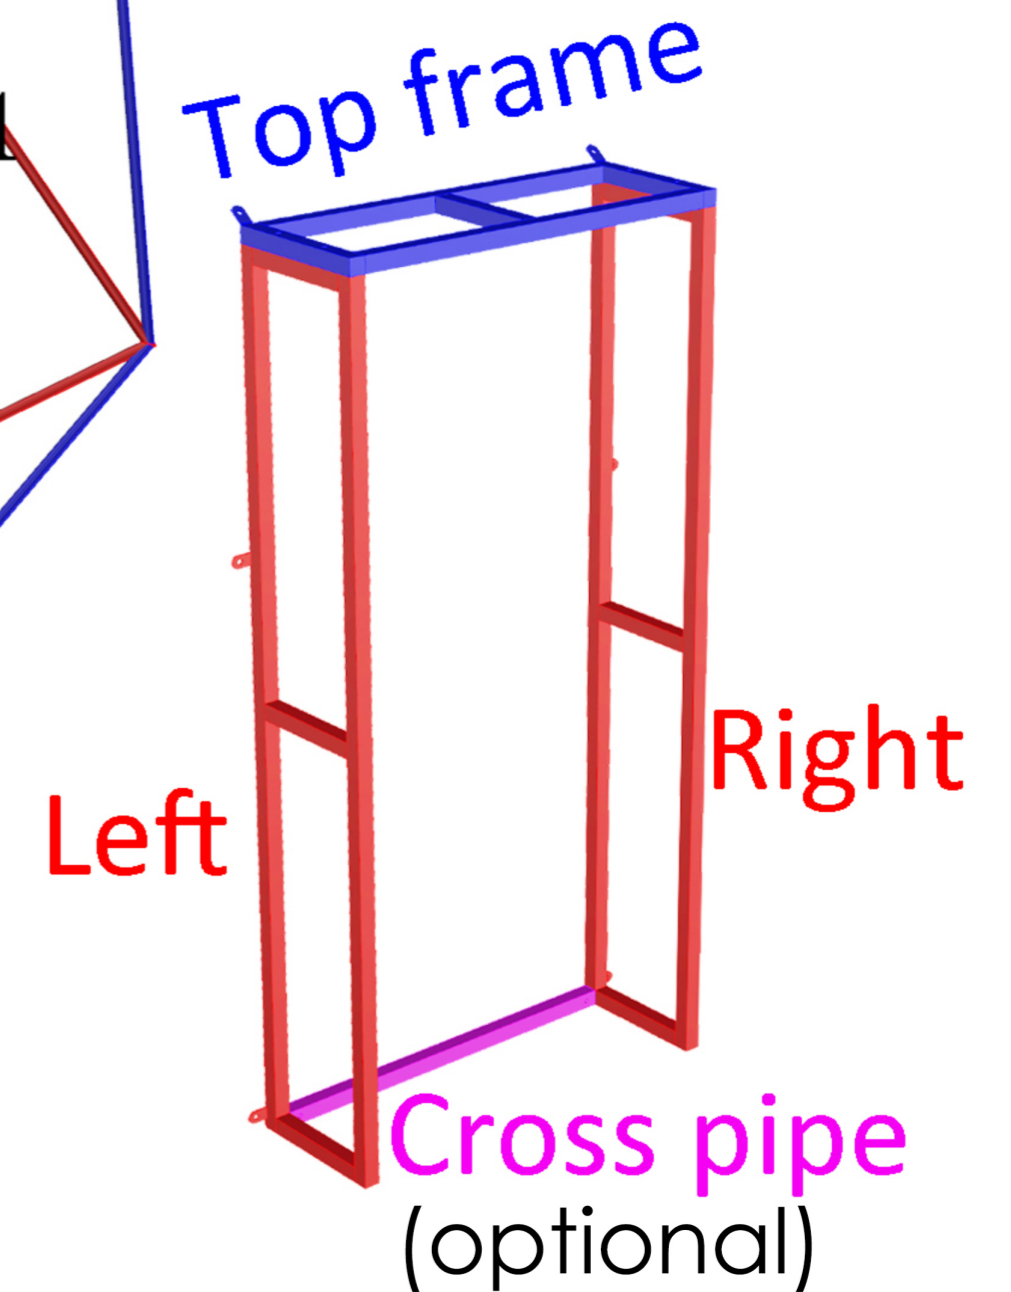


Clear bay window

5M Dome

NO.	QTY
1	44
2	38
W1	1
W2	2
W3	2
W4	2
W5	2
W6	2
W7	2
W8	2
W9	2
Tensioning Pipe Y1	8
Tensioning Pipe Y2	6
BASE	15

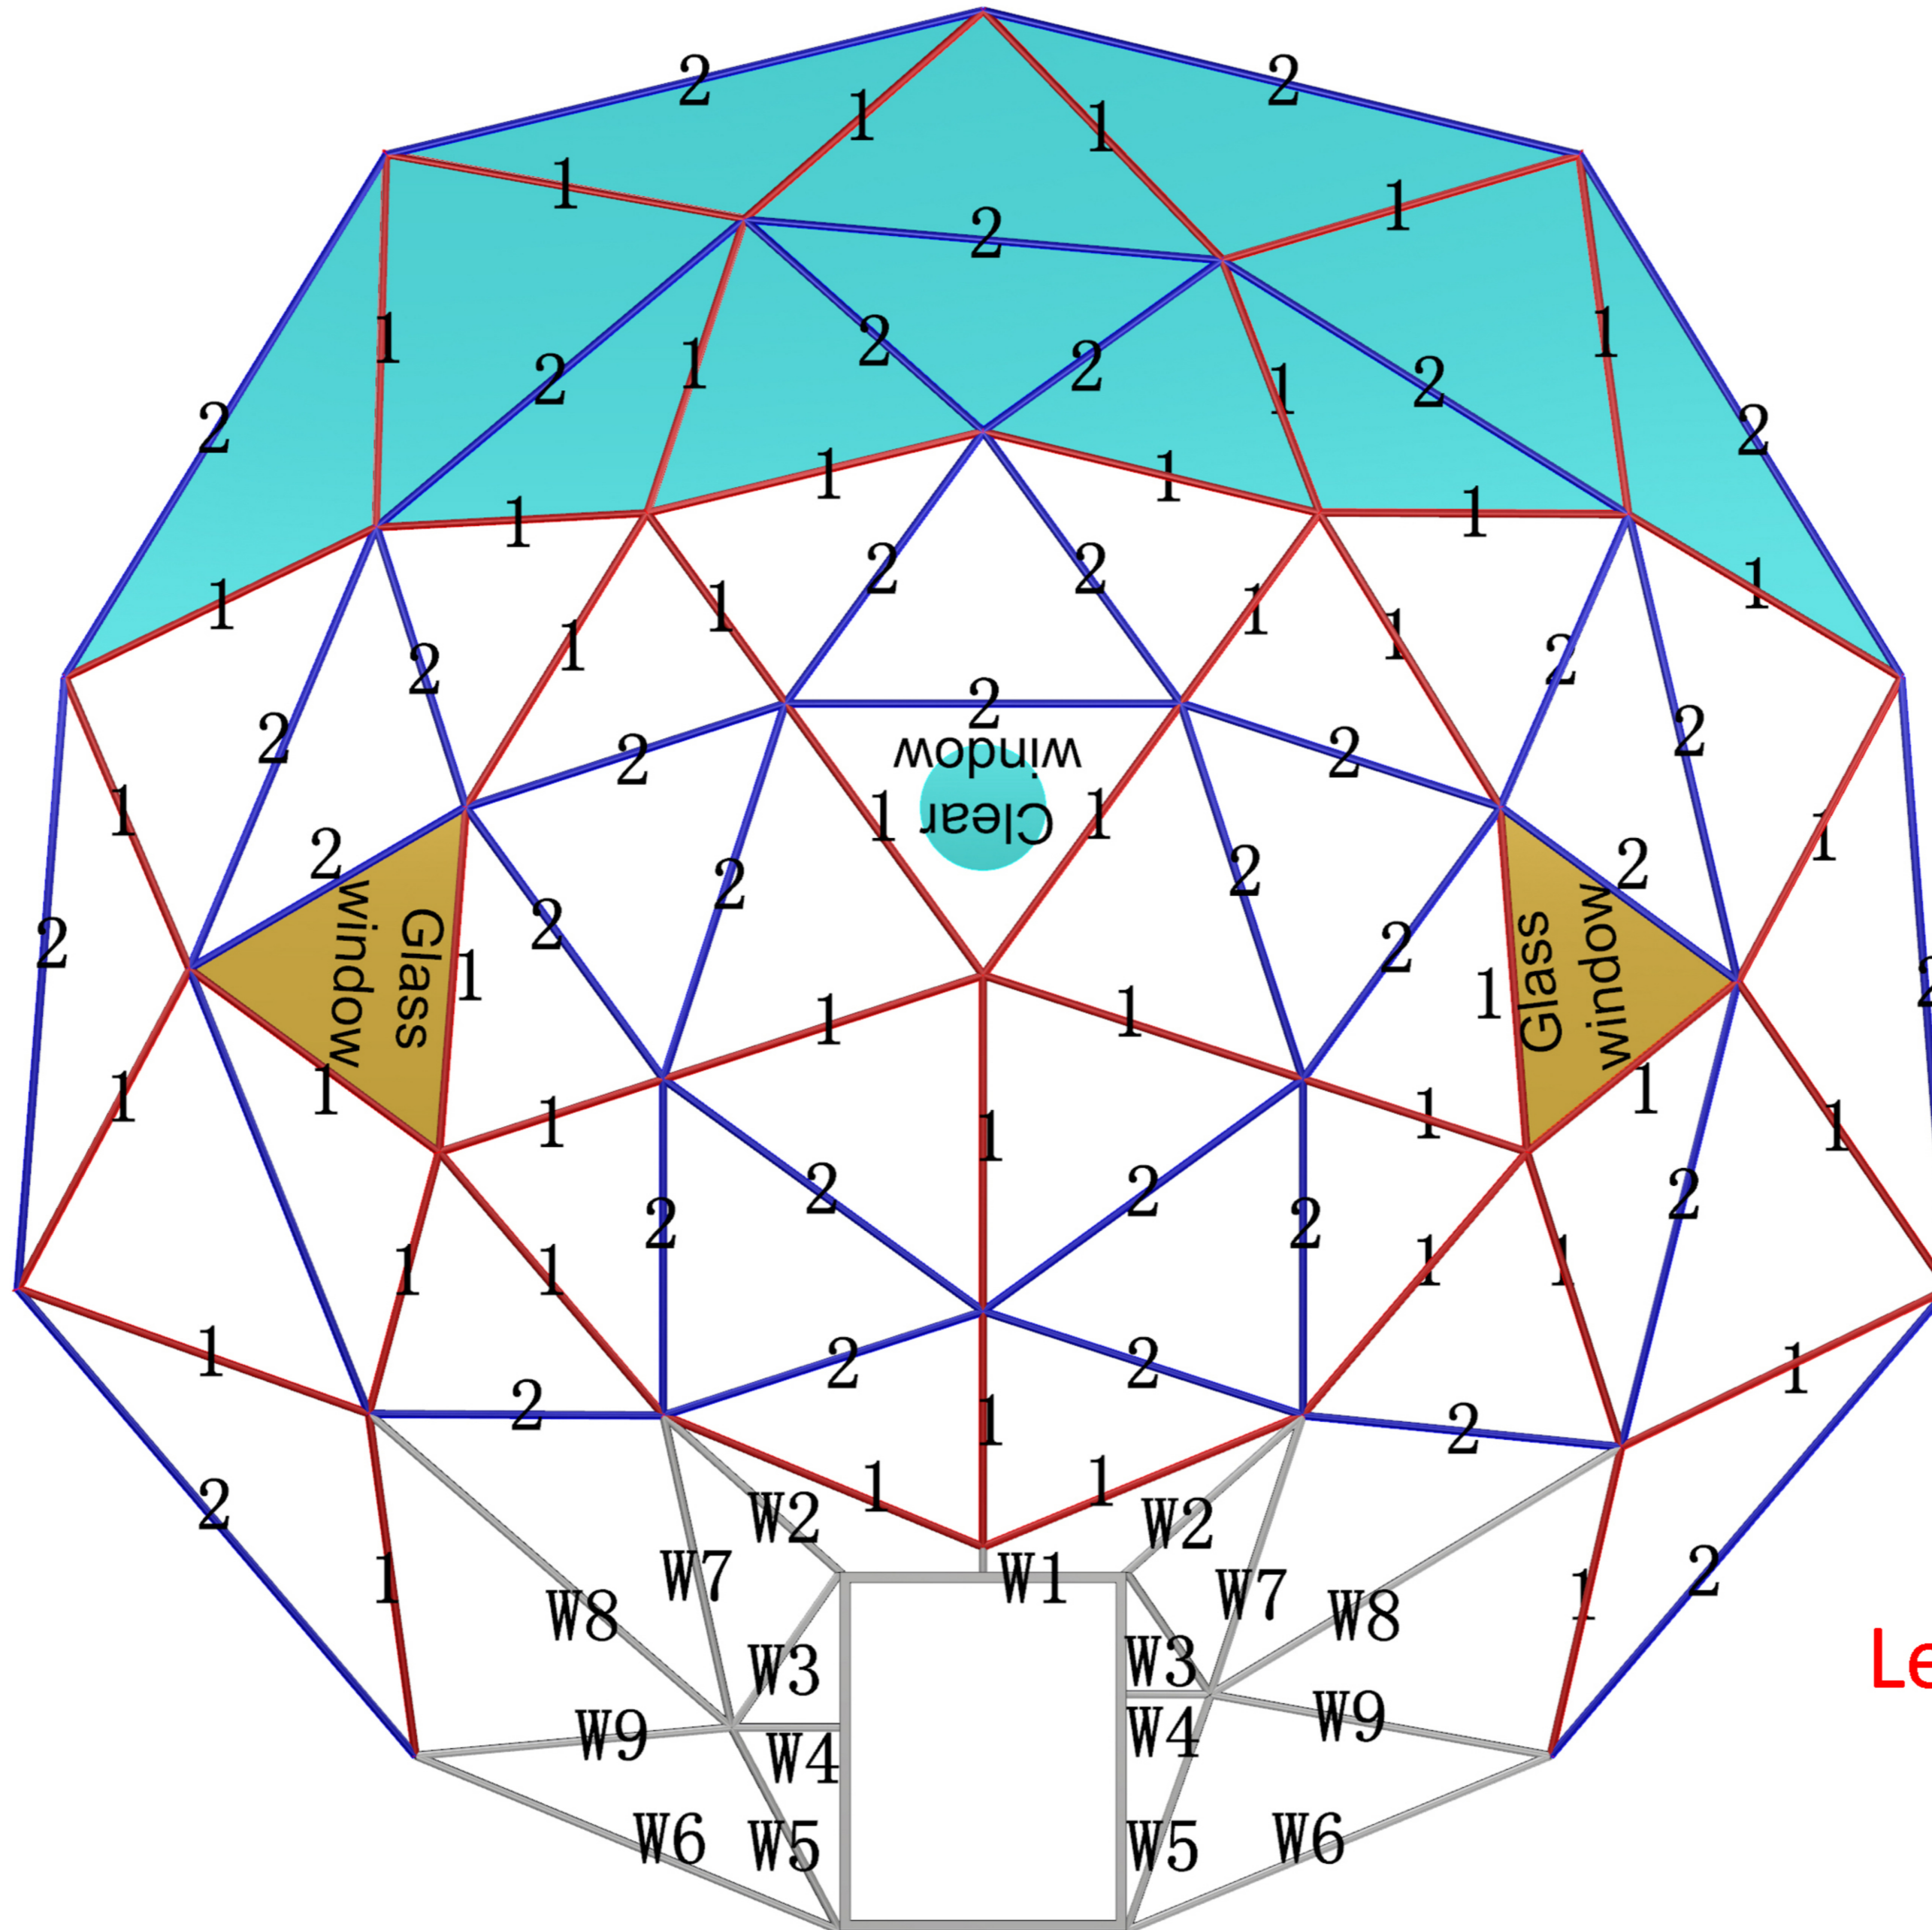


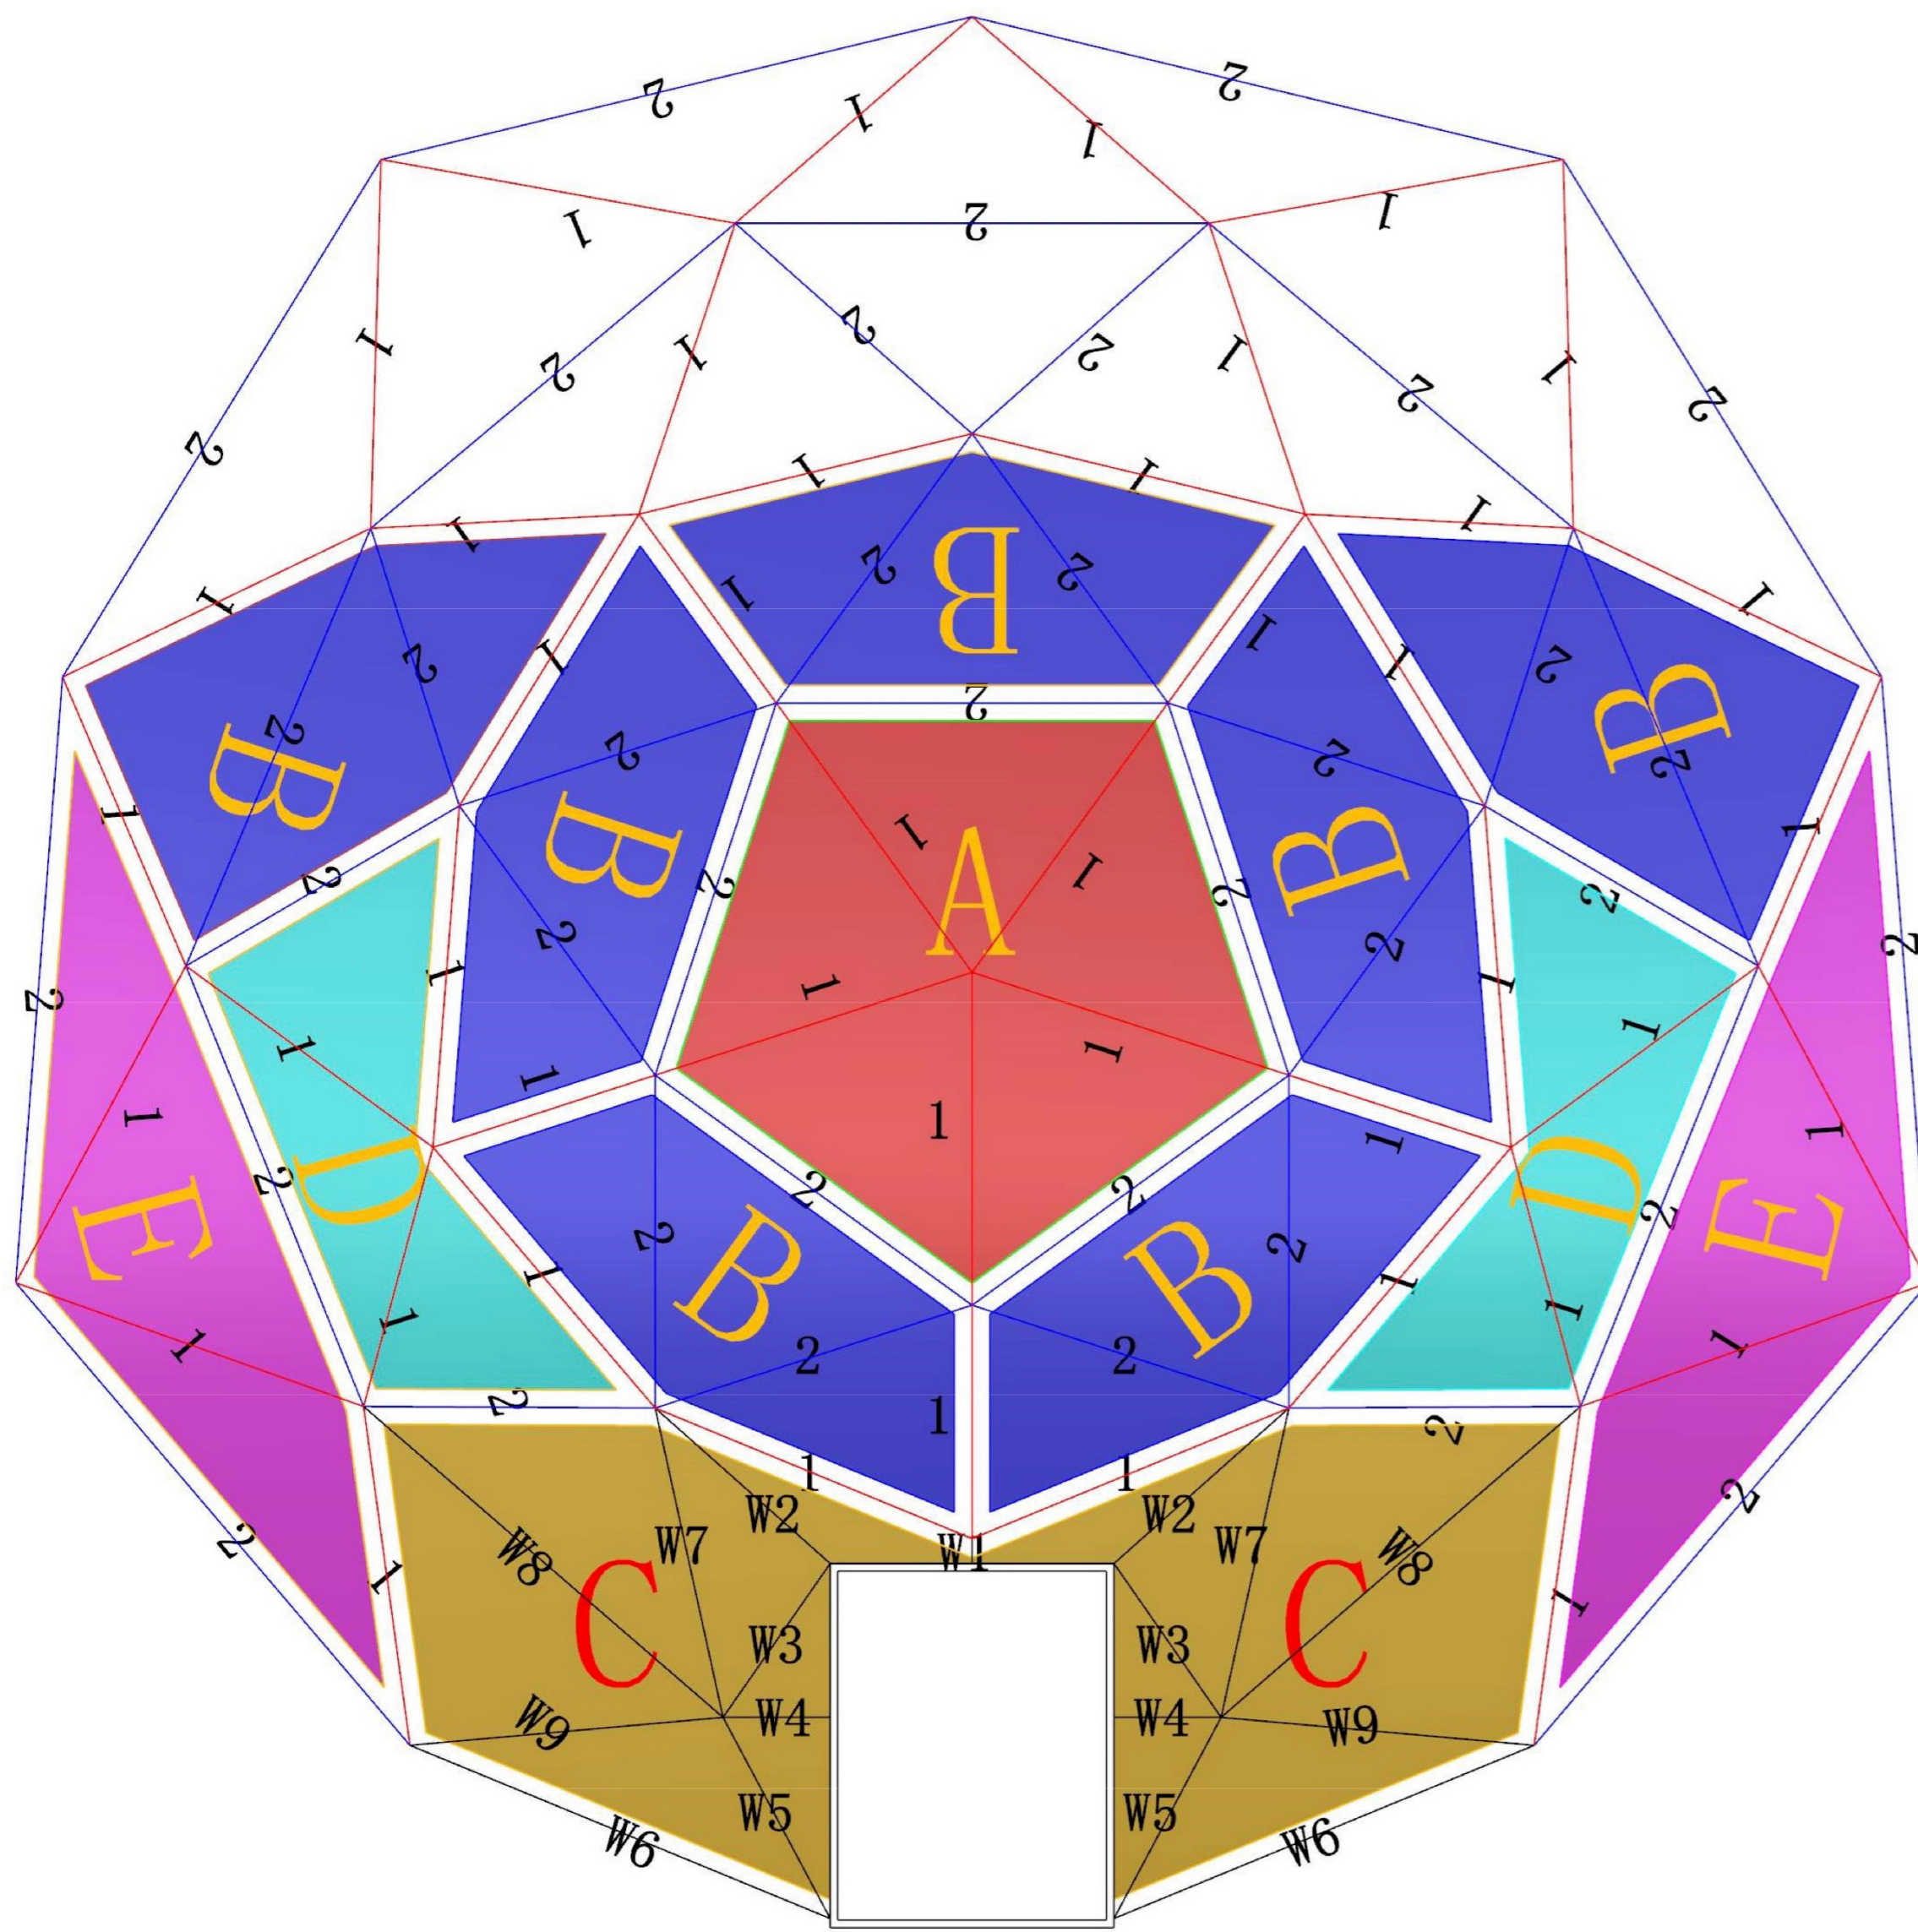









5M 2V Dome
Interior Oxford Liner Diagram

Clear bay window

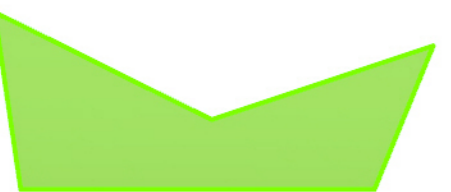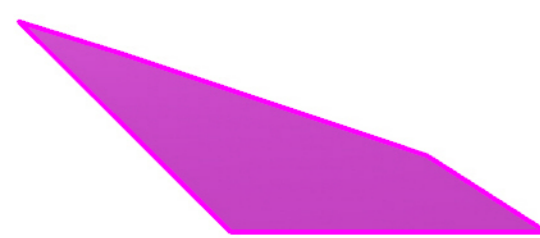5M Oxford liner

	NO.	QTY
	A	1
	B	7
	D	2
	E	2
	C	1
	Y	1

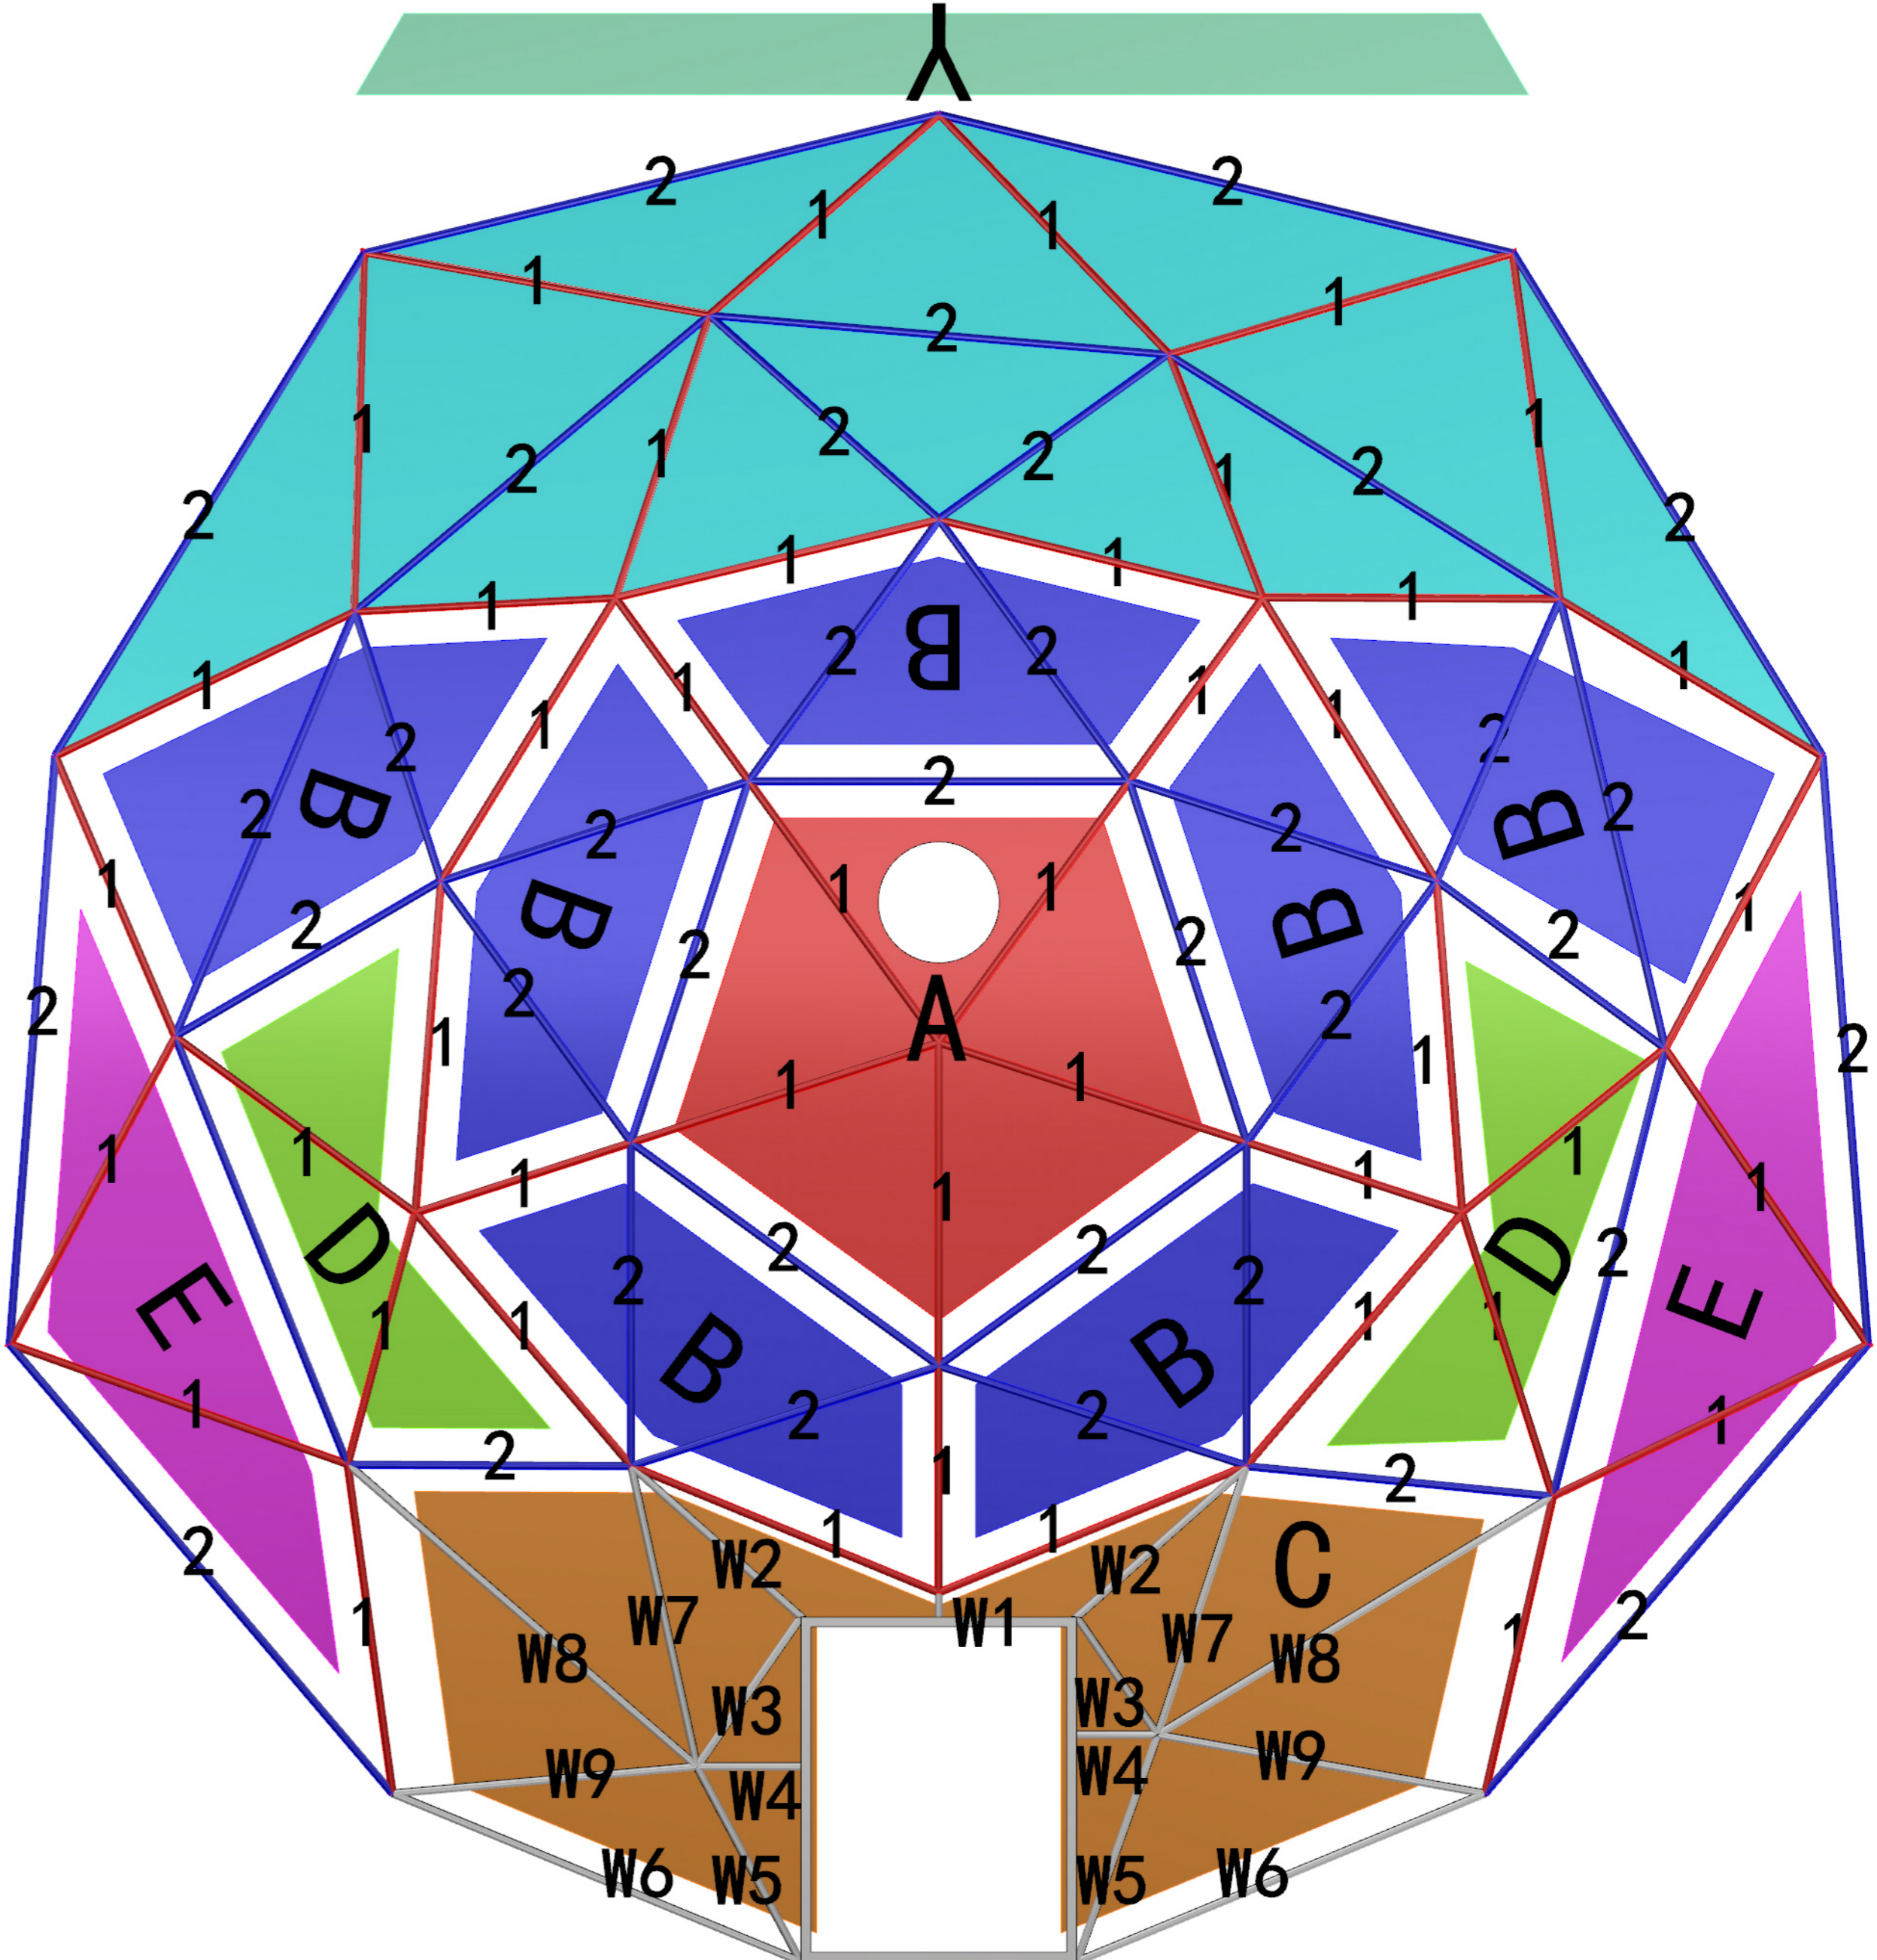

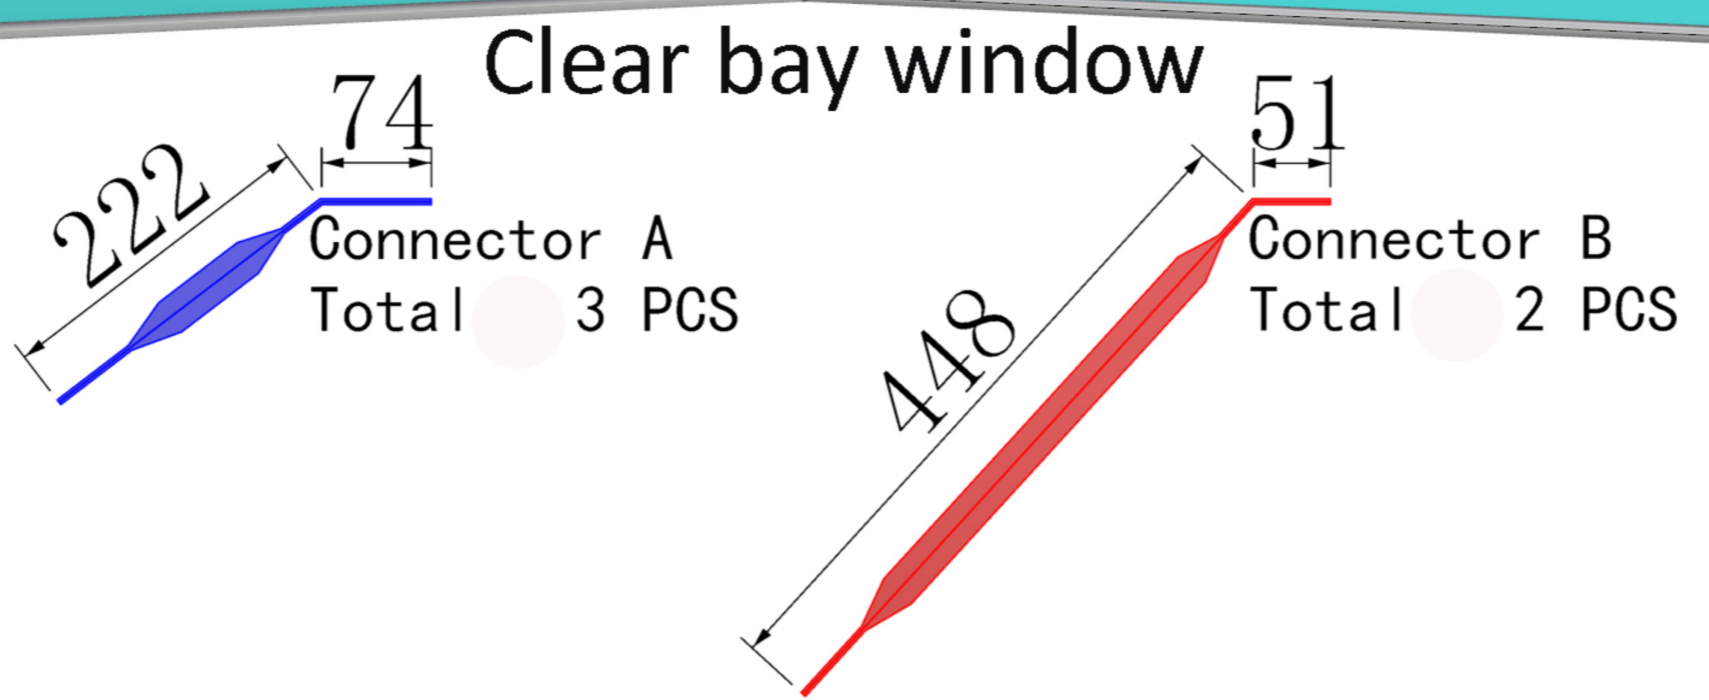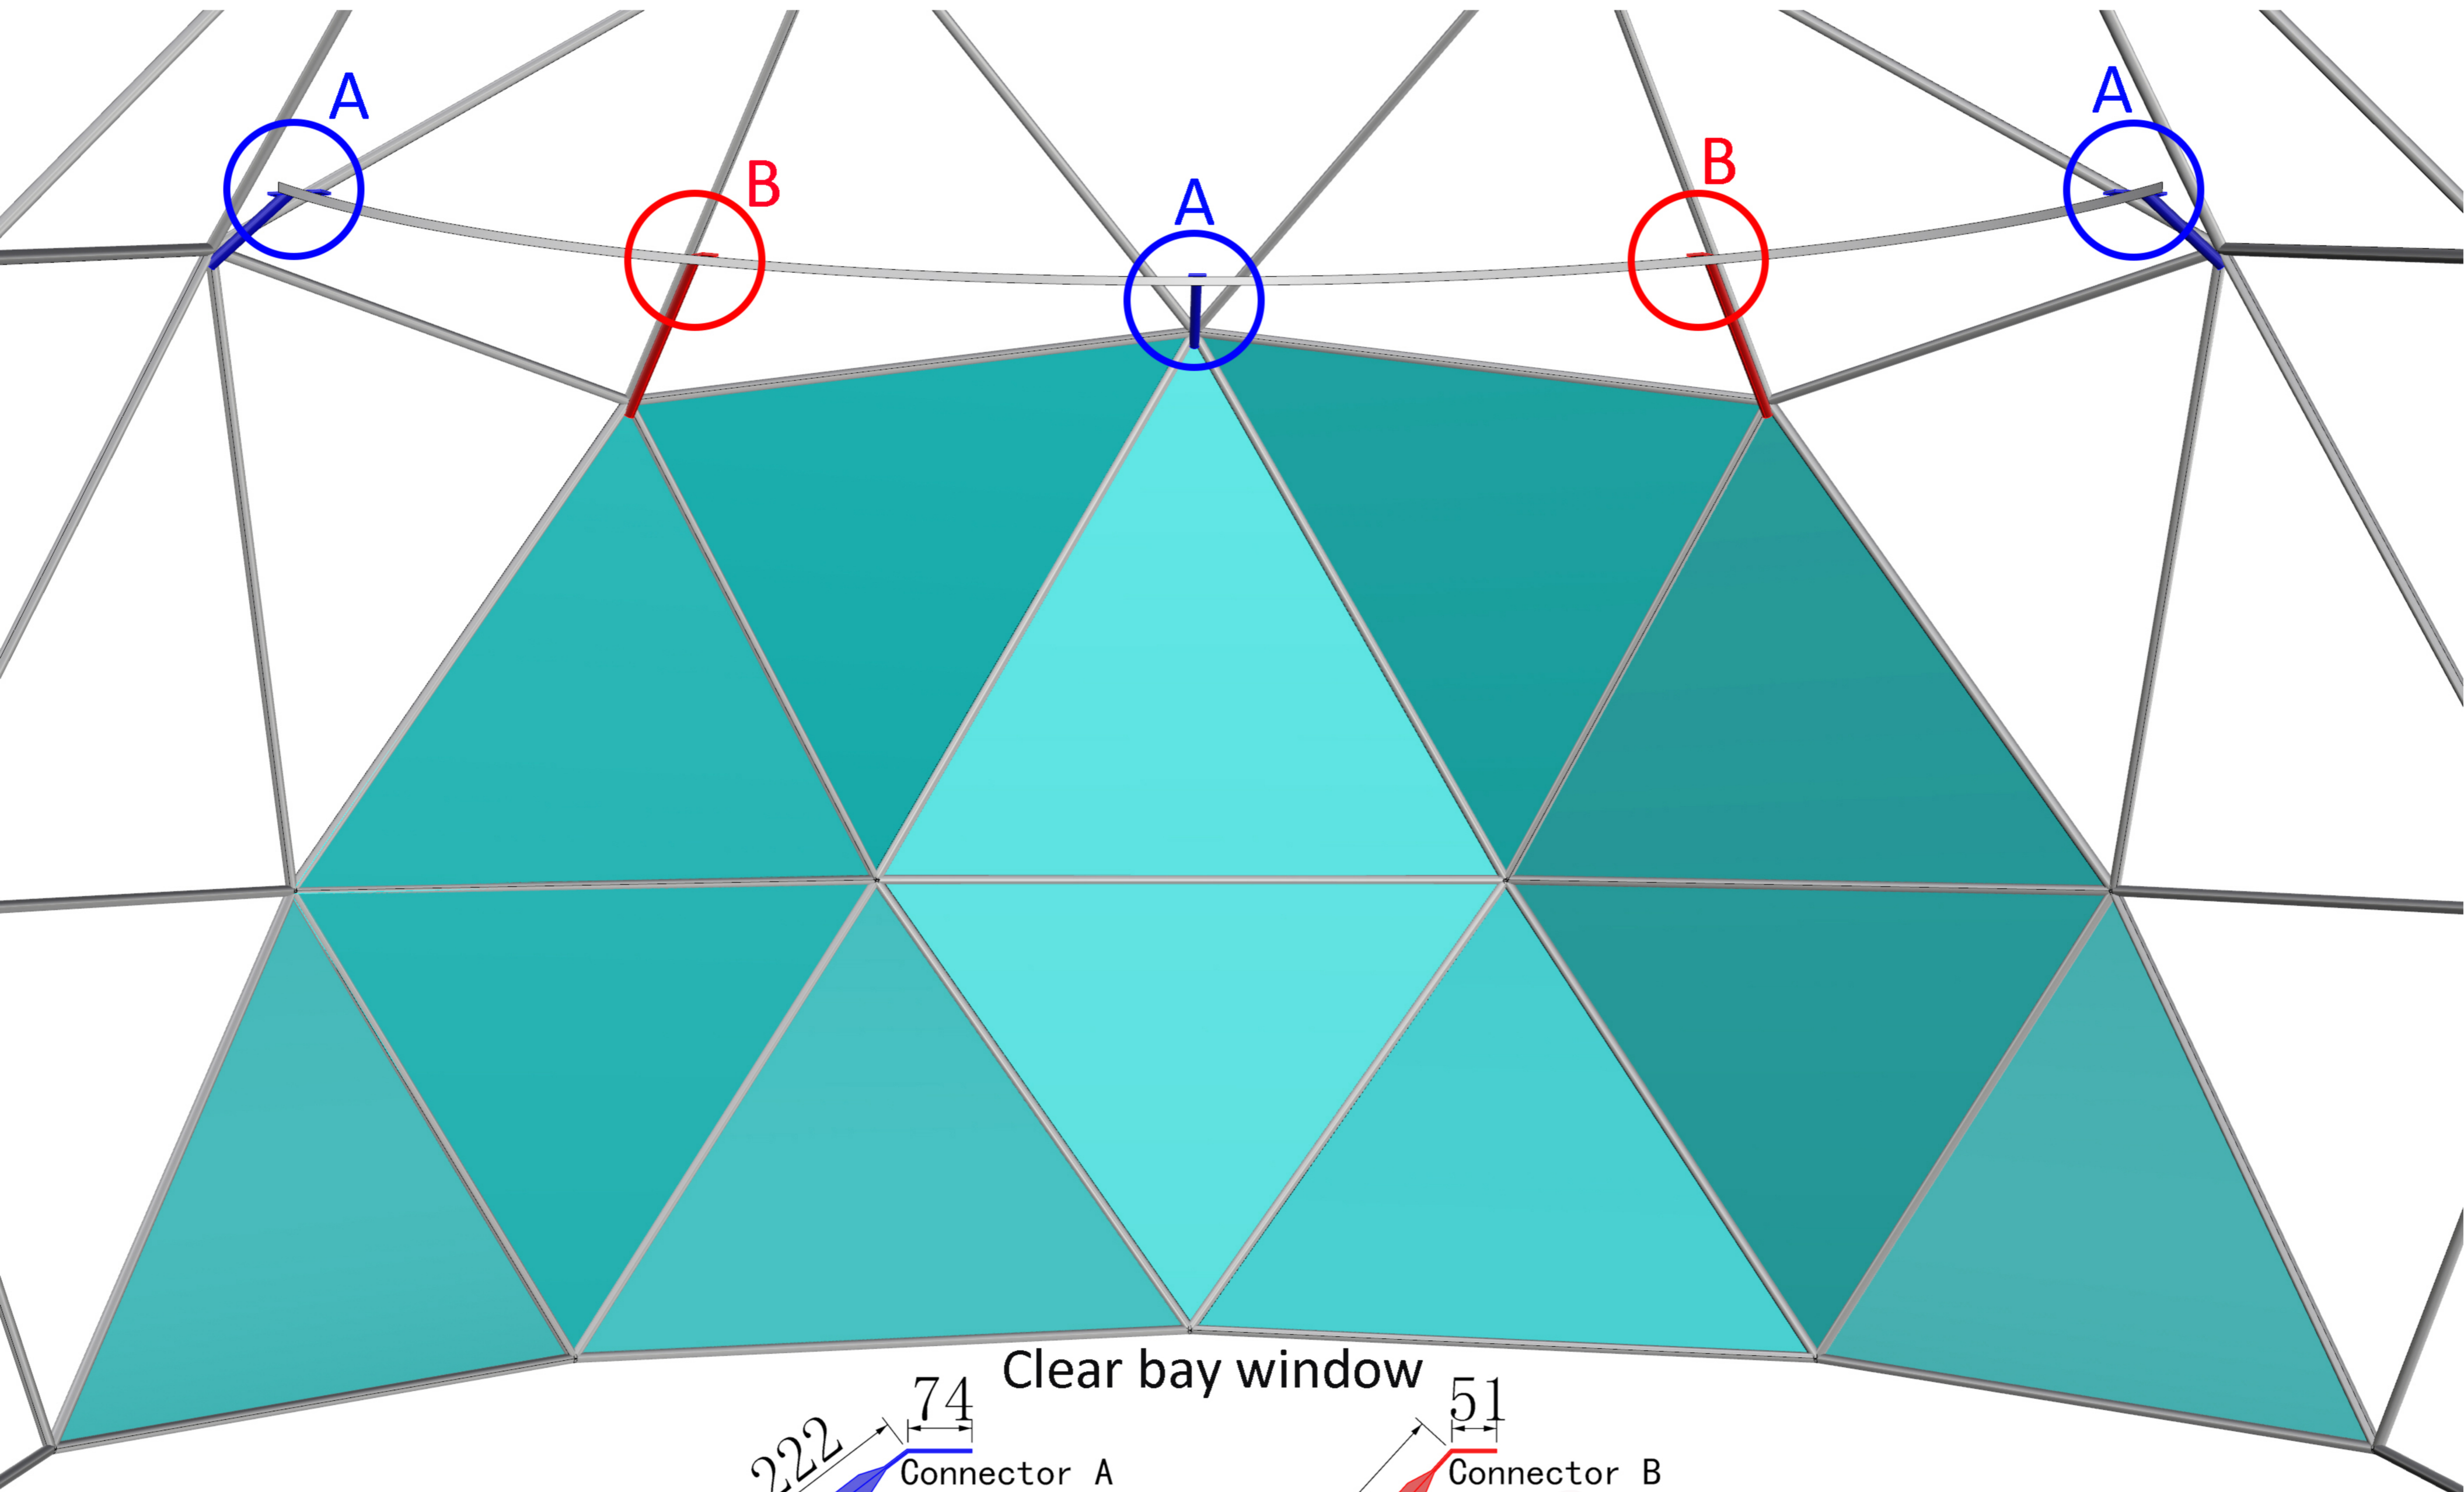

TRIANGLE GLASS WINDOW:

After the cover is fully tensioned, Install the glass window as per the drawings attached. Check our resources for in-depth, illustrated instructions.

