



6M Dome

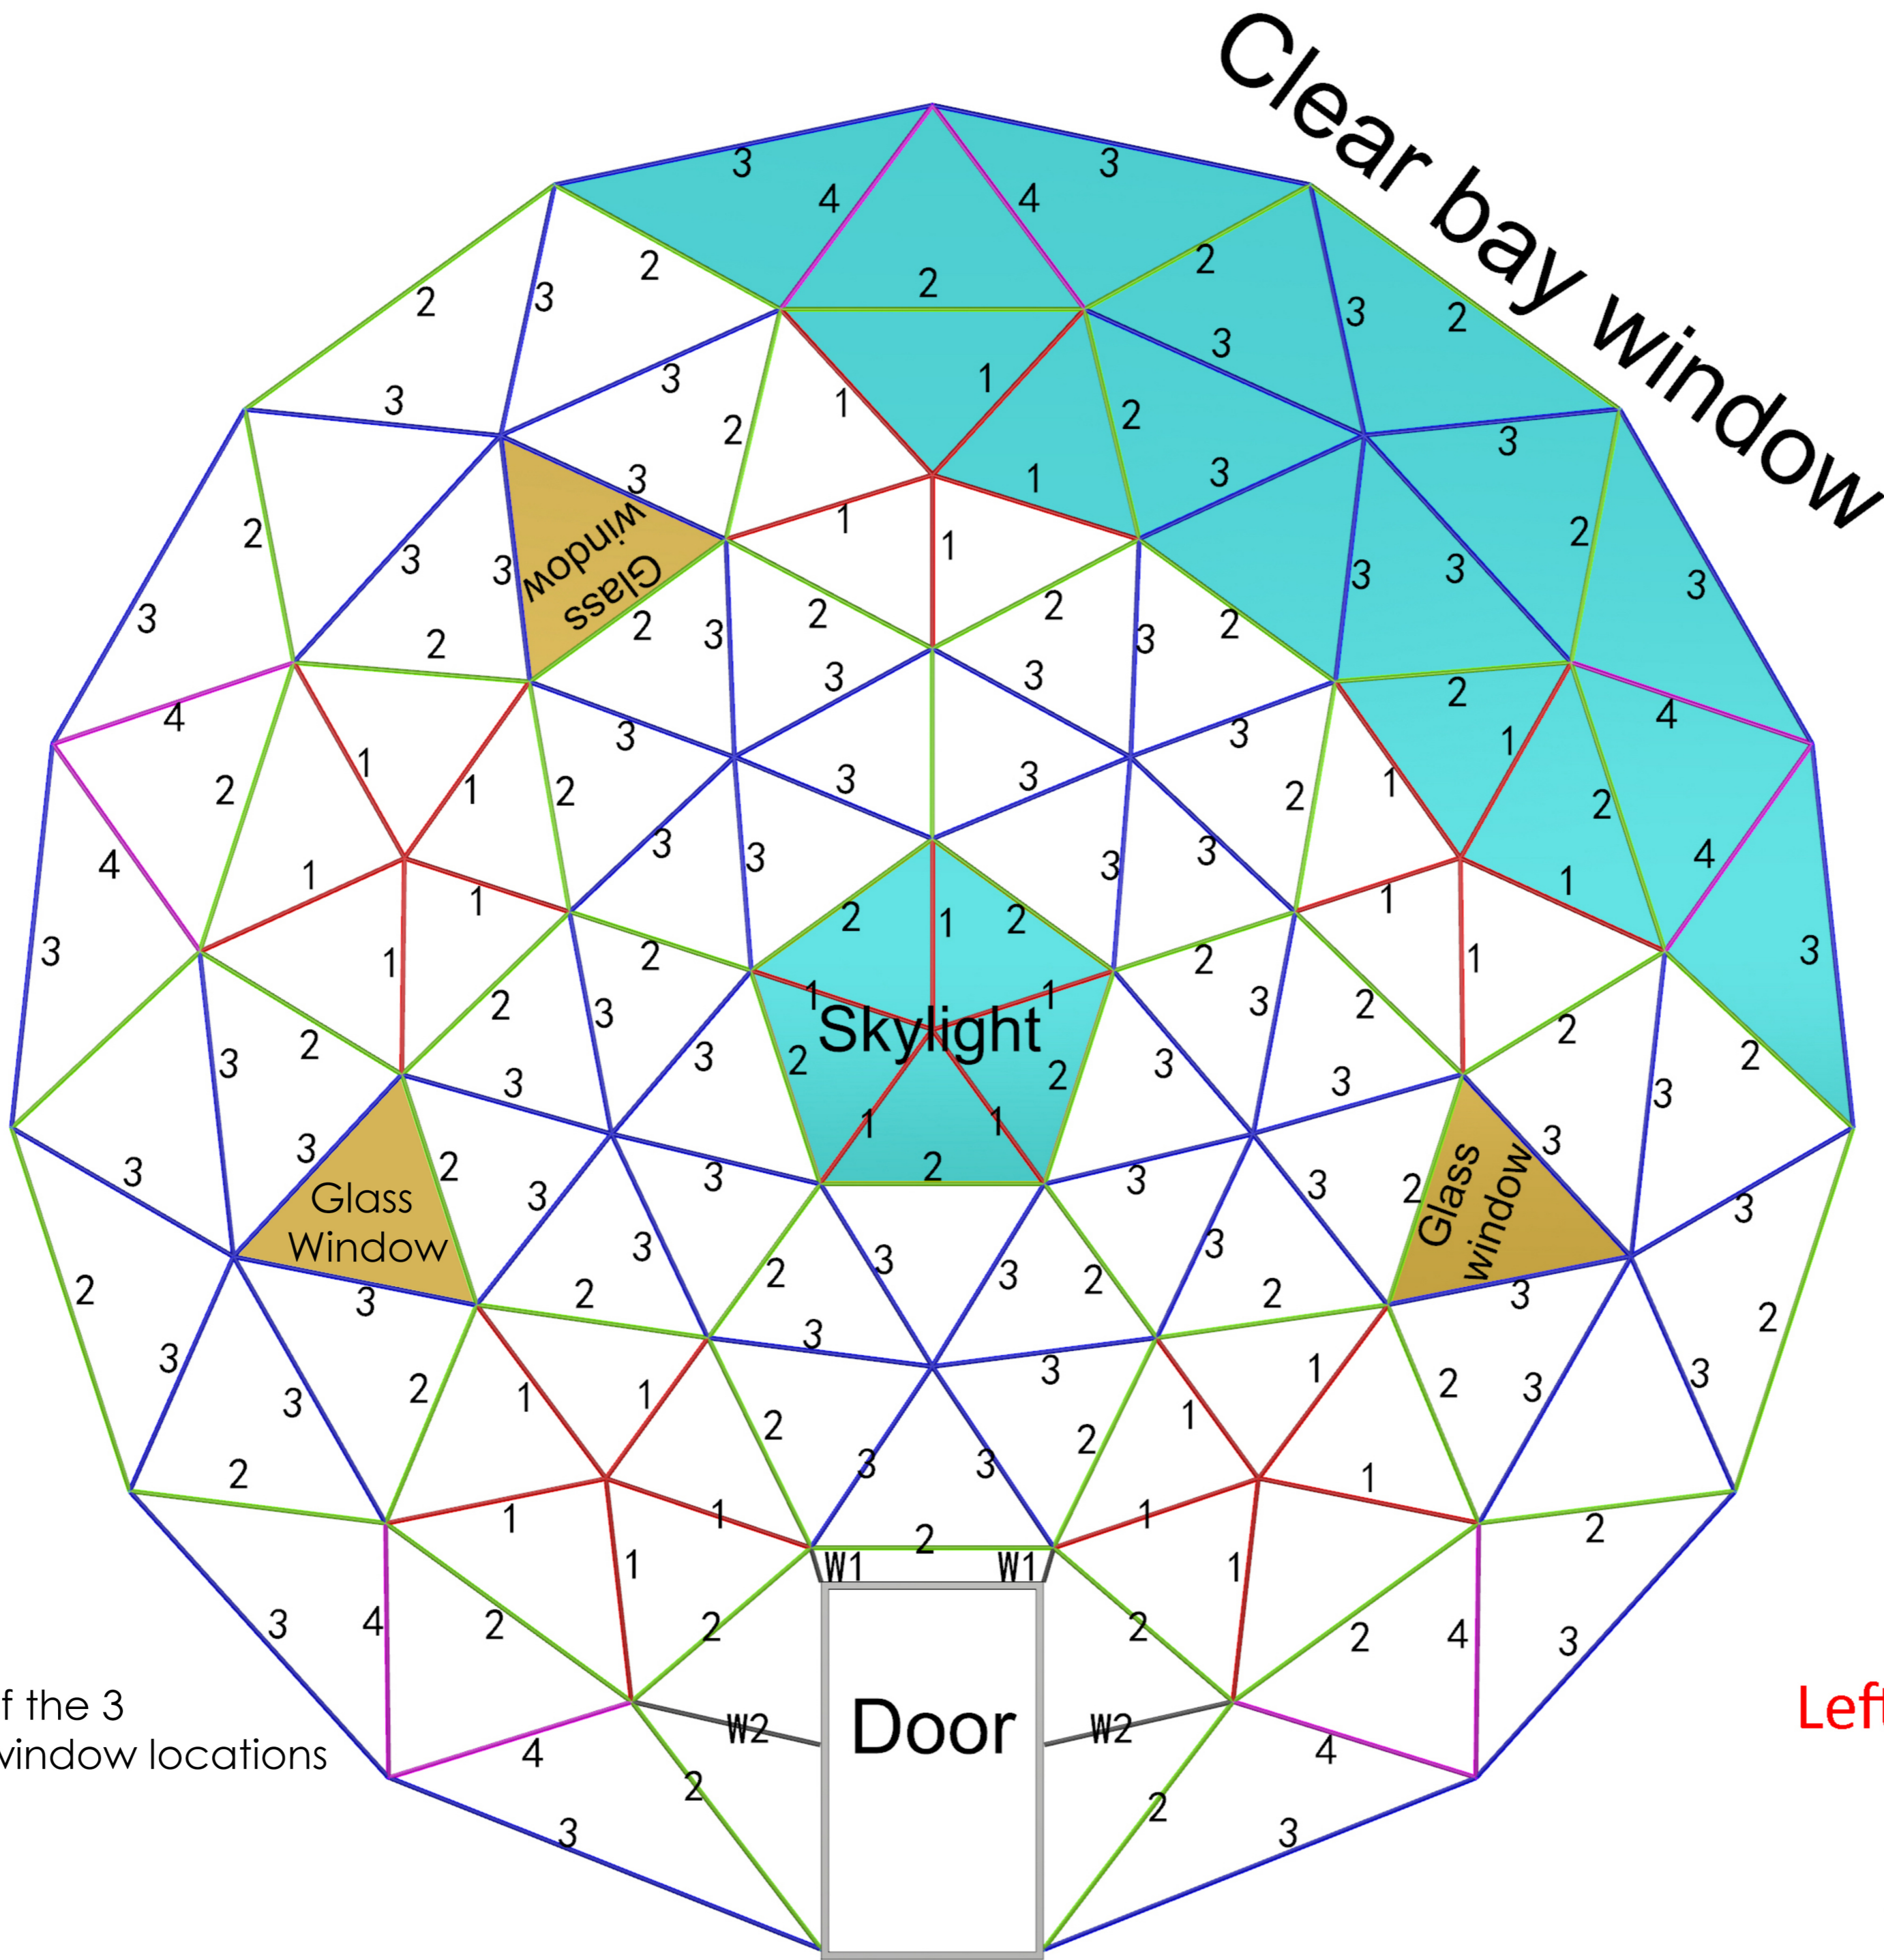



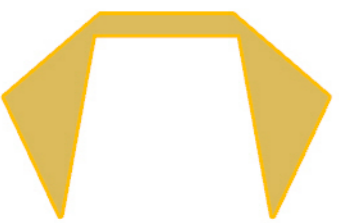

NO.	QTY
1	30
2	54
3	64
4	10
W1	2
W2	2
Tensioning Pipe Y1	14
Tensioning Pipe Y2	7
BASE	15

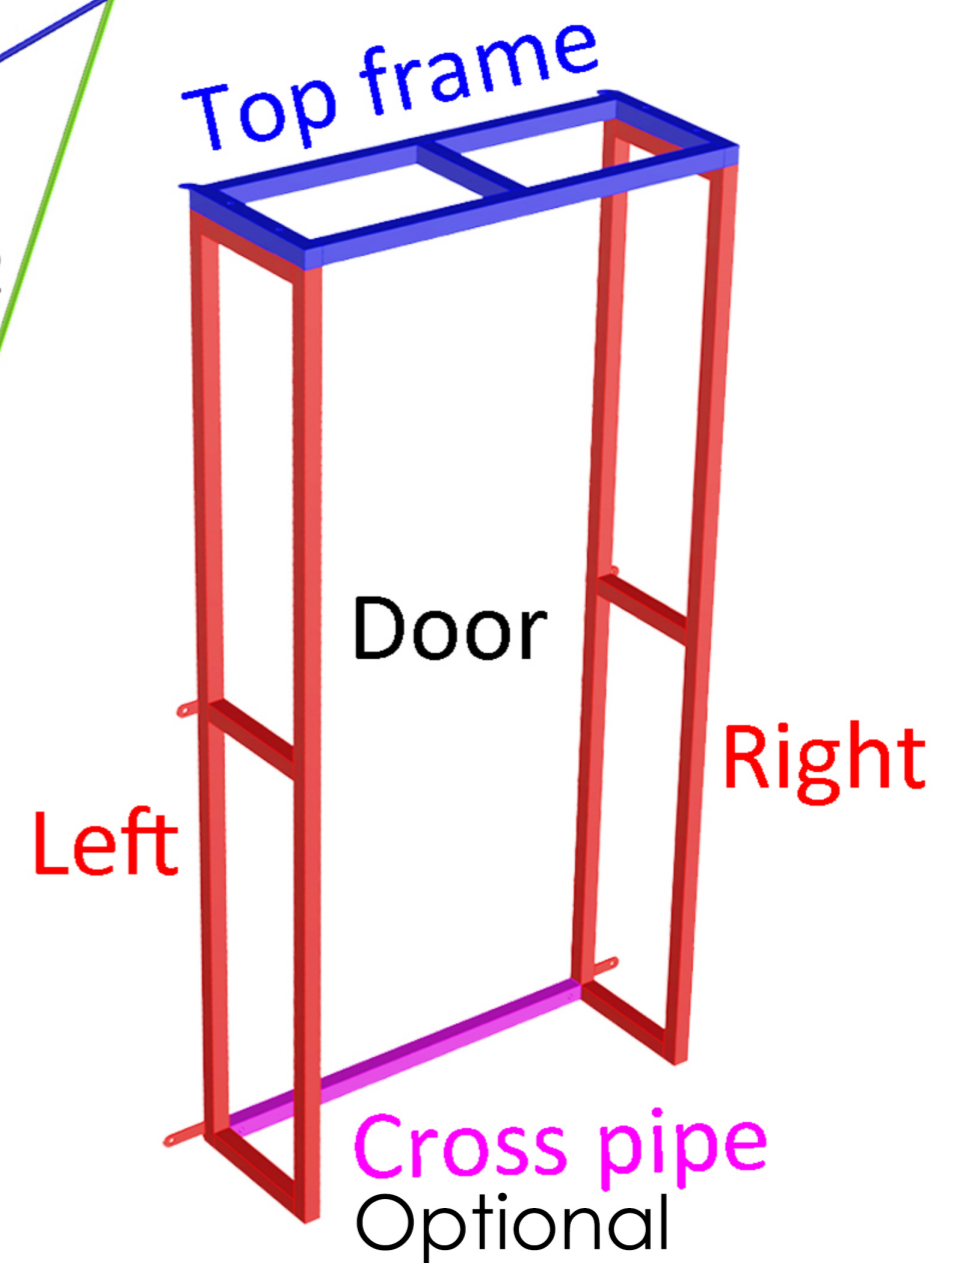



Choose 2 out of the 3 possible Glass window locations

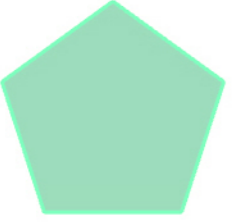



7M Oxford Liner

	NO.	QTY
	A	4
	A1	2
	B	8
	C	3
	W	1
	Y	1

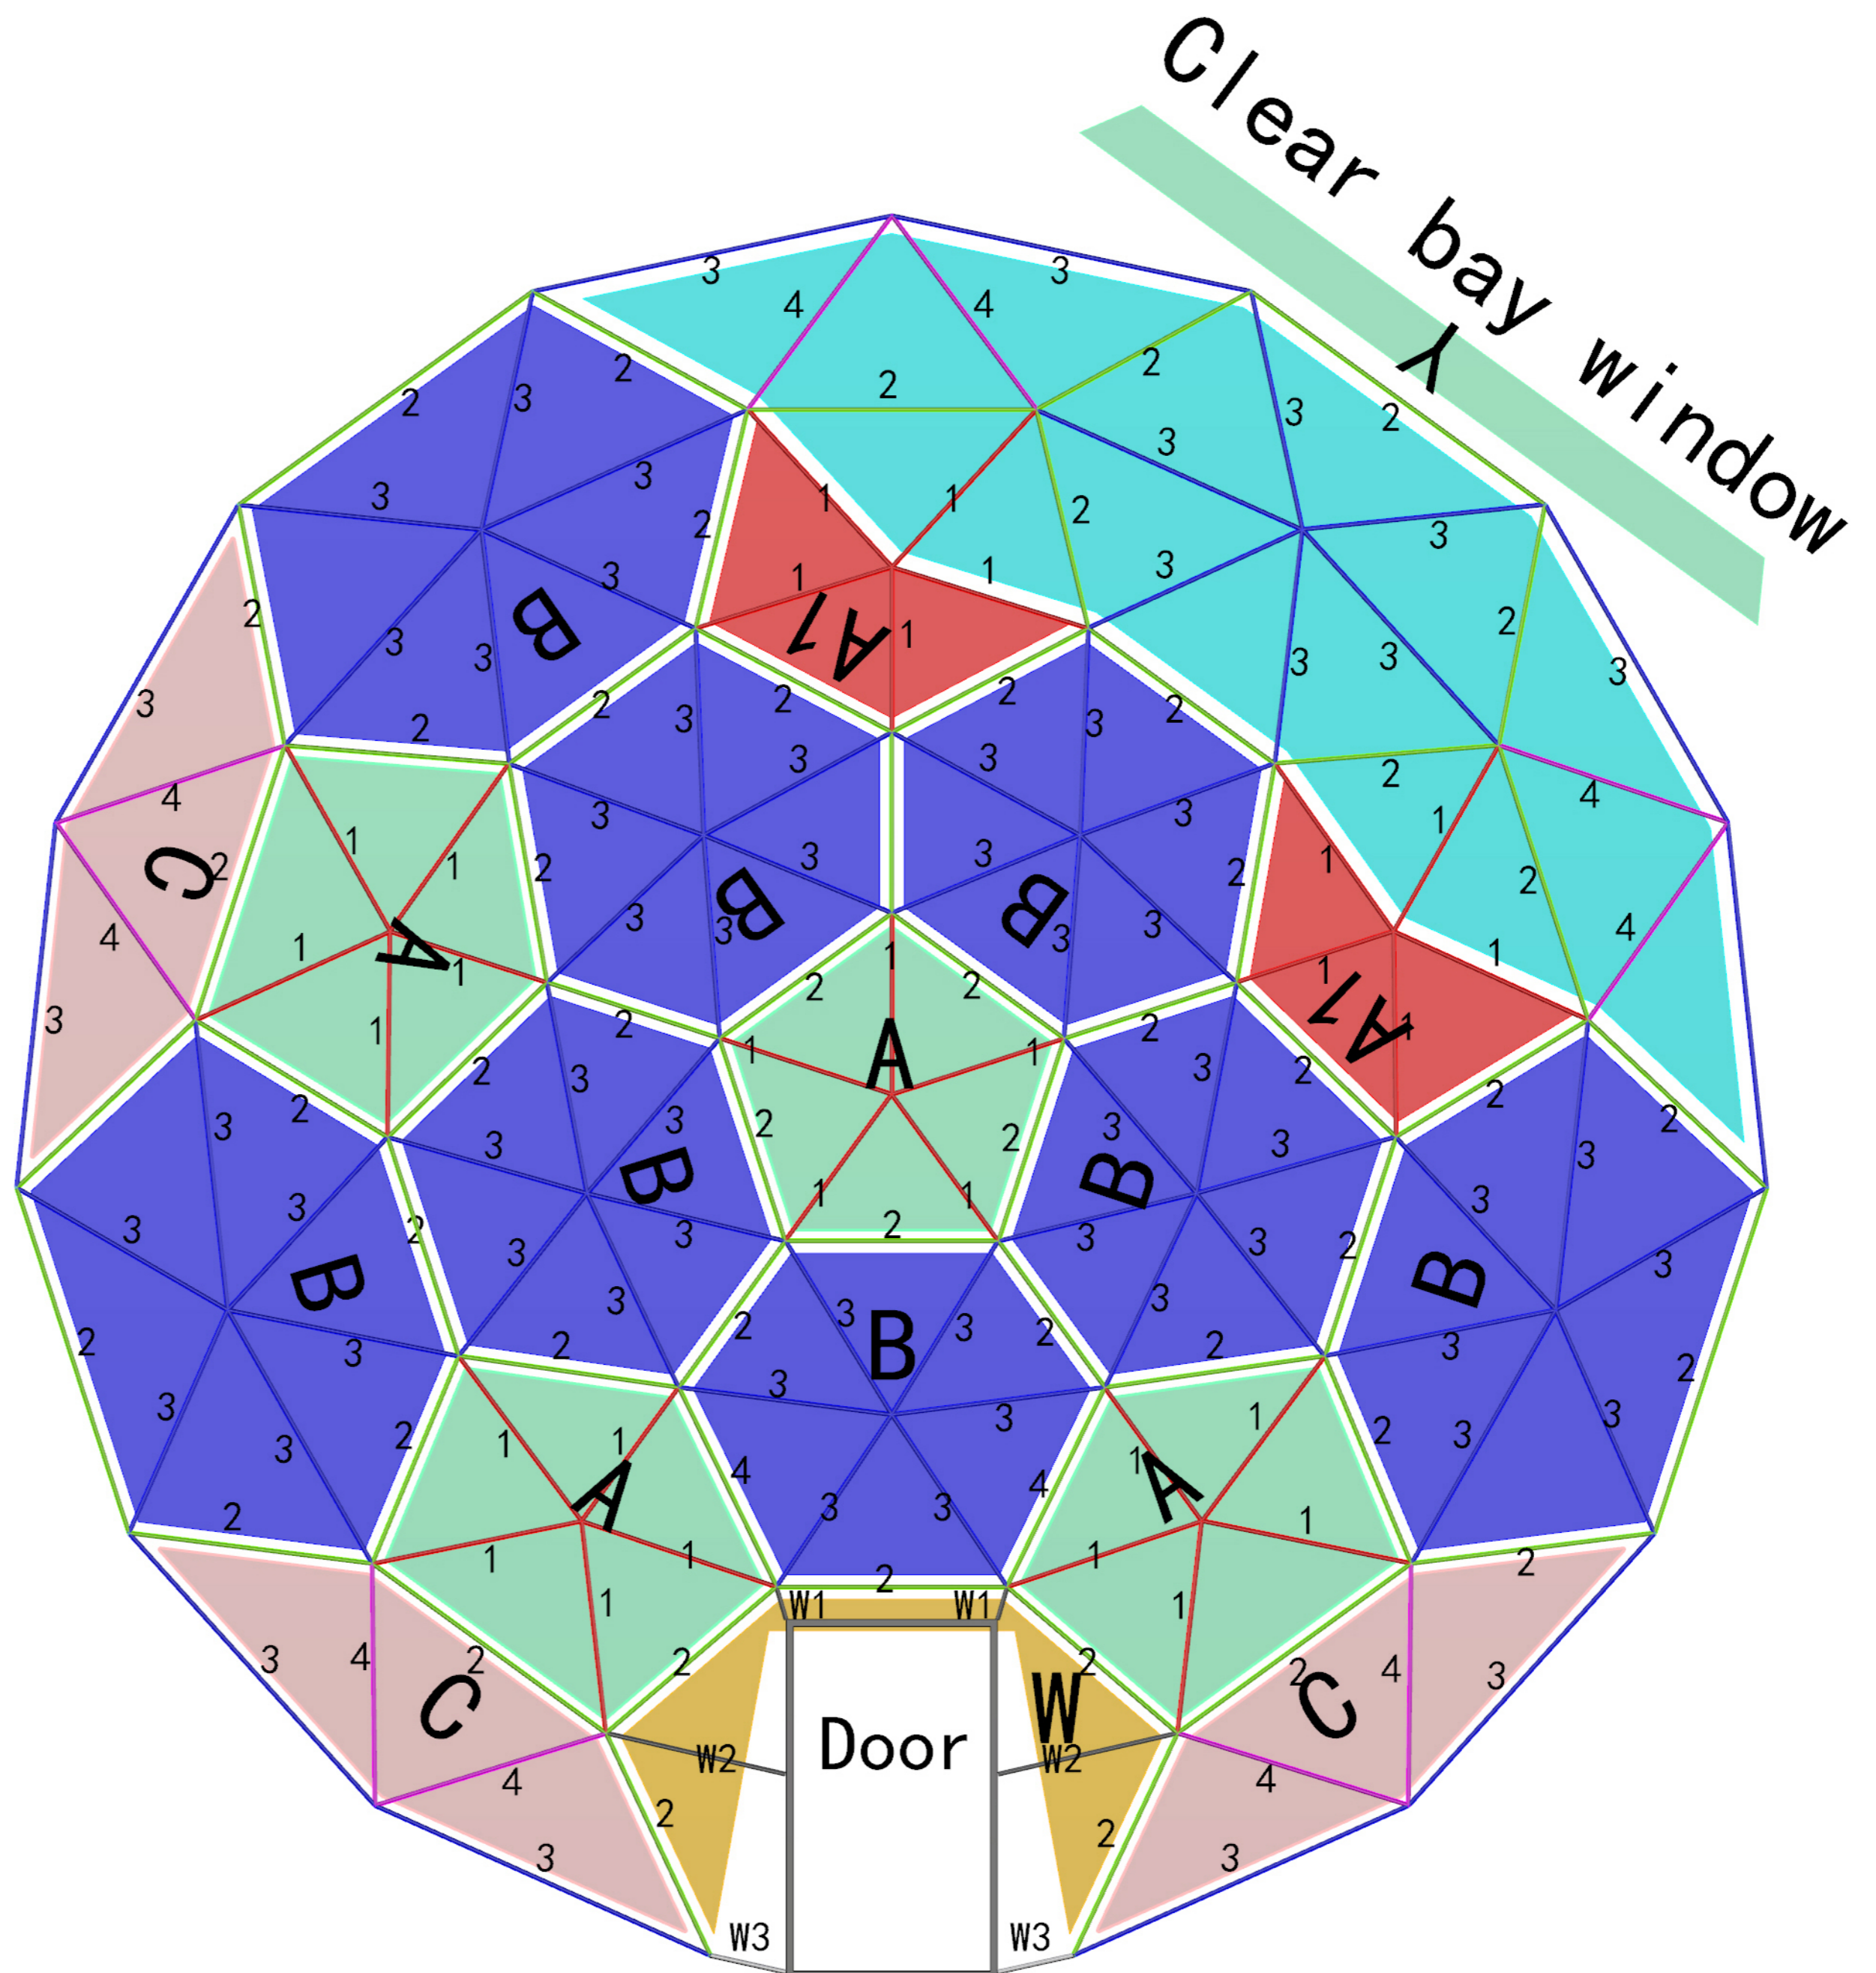

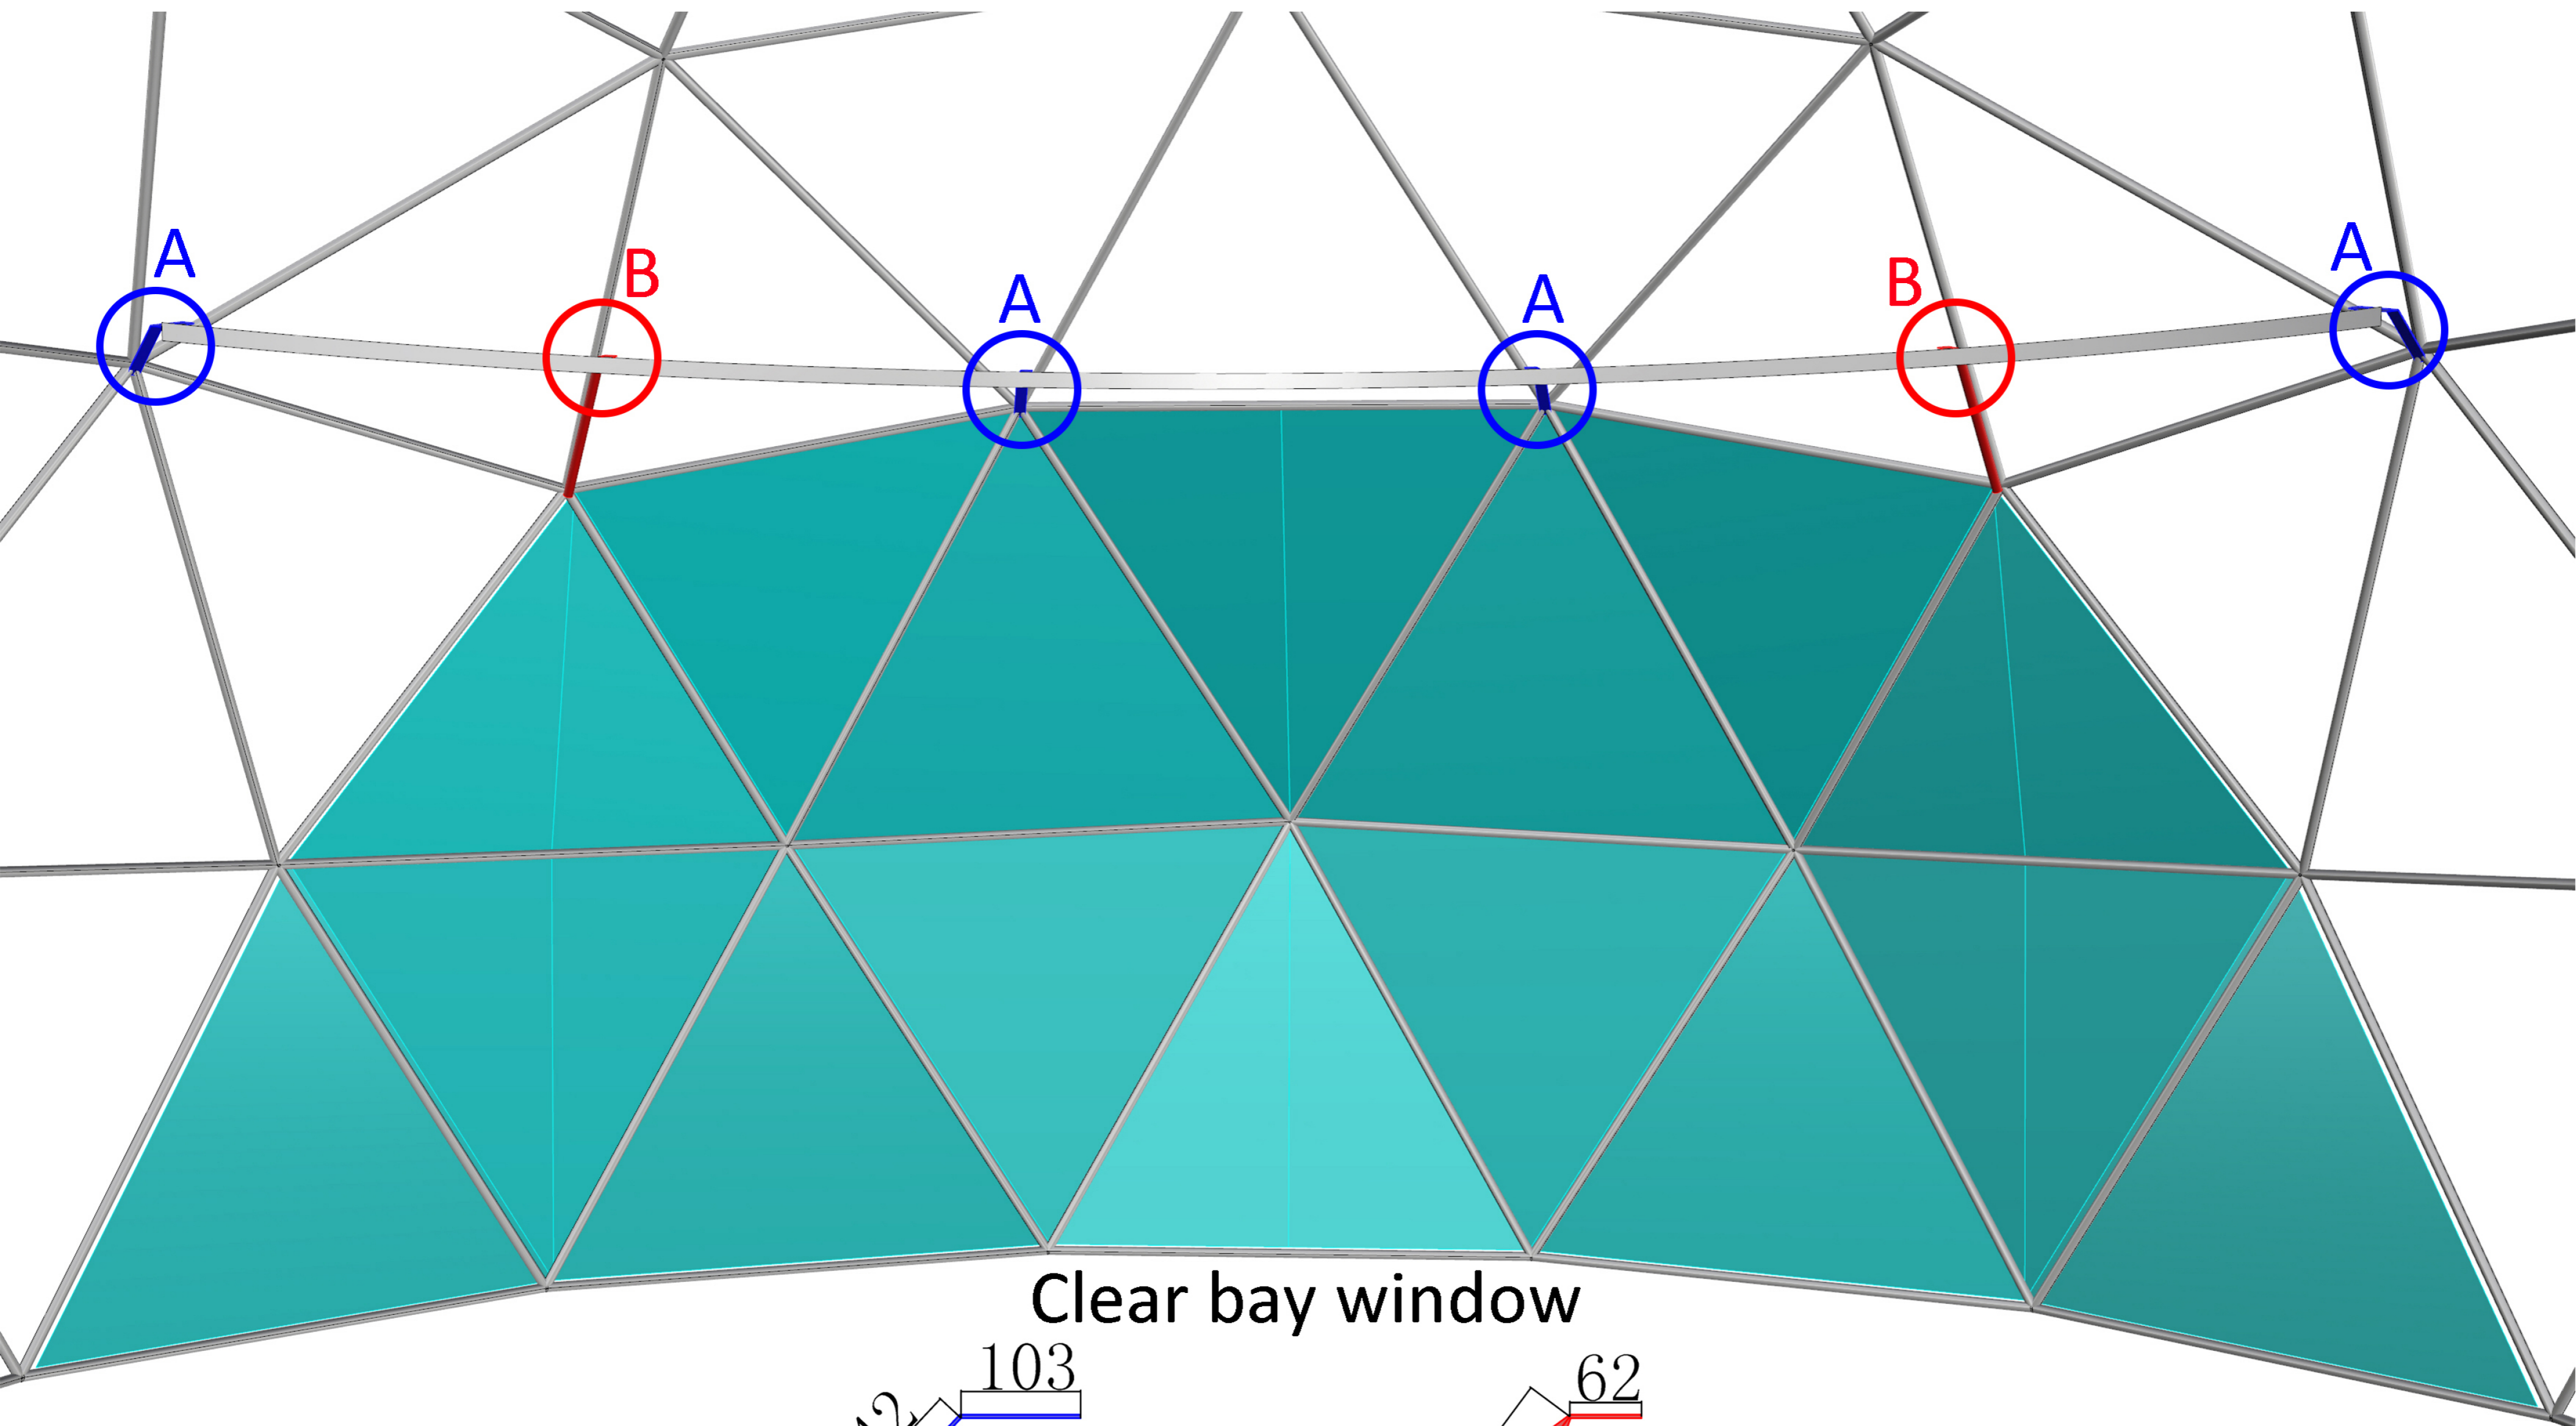

Clear bay window

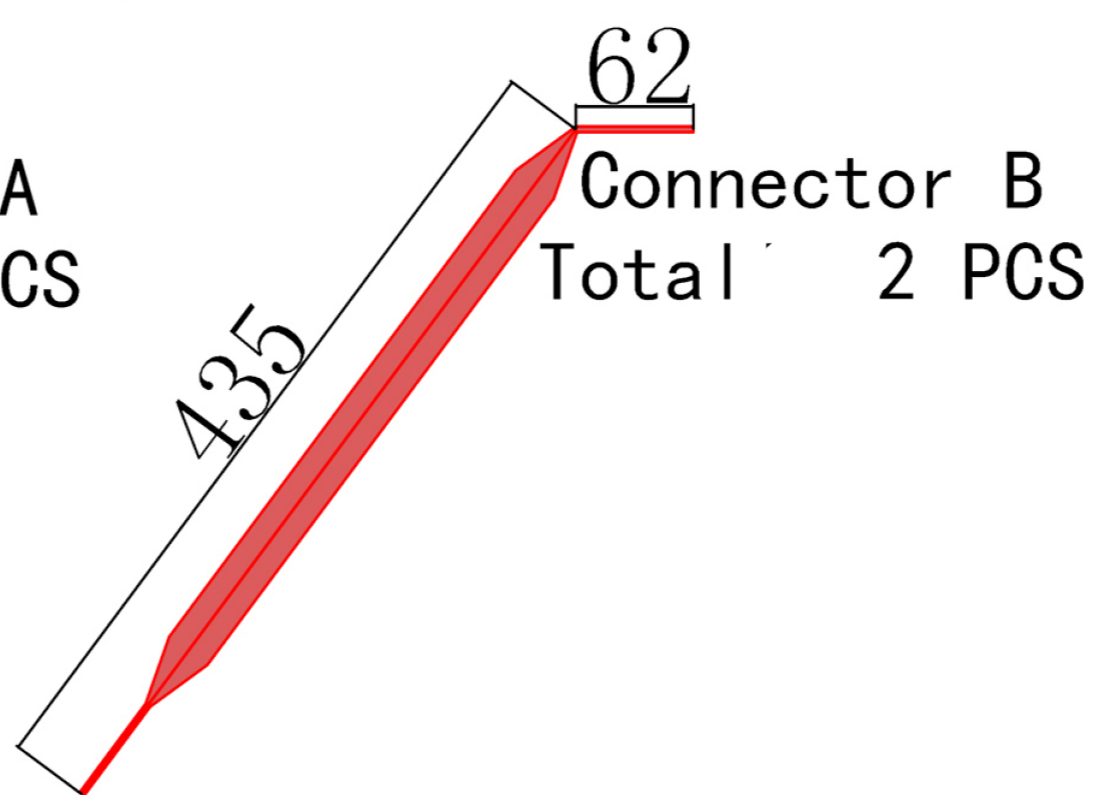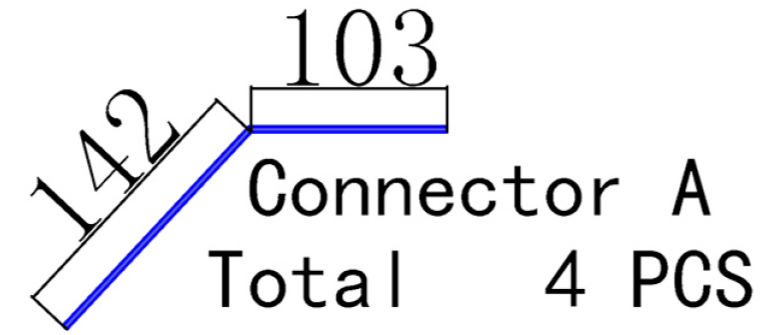

TRIANGLE GLASS WINDOW:

After the cover is fully tensioned, Install the glass window as per the drawings attached. Check our resources for in-depth, illustrated instructions.

