

## Your Kit Includes:


- -Curtains -Curtain track -Curtain hooks -Long and short bracket struts
- -Track joiner brackets, stoppers, and screws -Curtain rollers -Multidriver
- -Impact driver with 3/4"or 19mm socket bit





- Consider the hubs of your Dome above and lateral to the top of your panorama window, imagining your curtain track as eventually parallel
- Short bracket struts will be added where the distance from hubs to curtain tracks is shorter, longer ones where the distance is longer
  - 2V Domes will include 5 bracket struts
  - 3V Domes, shown, will include 6
  - 4V Domes will include 7 bracket struts
- Remove the white plastic acorn caps from these hubs, and slide correctly sized bracket struts onto these hubs with an extra nut (from your Dome's hardware bag) and your impact driver to hold them in place
- You'll want to tighten them all the way down and reattach your acorn caps later on after the curtain track is up and mounted



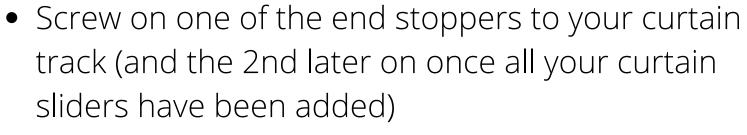






 Attach your curtain track together with the joiner brackets



• Slide on each of the curtain sliders

- Then, with the help of a partner, clip the curtain track into each of the 6 bracket struts by tilting it into their plastic teeth and pushing it up until it clicks into place
  - Be careful with the clips! They can be finicky

• Slide the curtain hooks into the pockets of the curtain, leaving 4 pockets empty in between each curtain hook

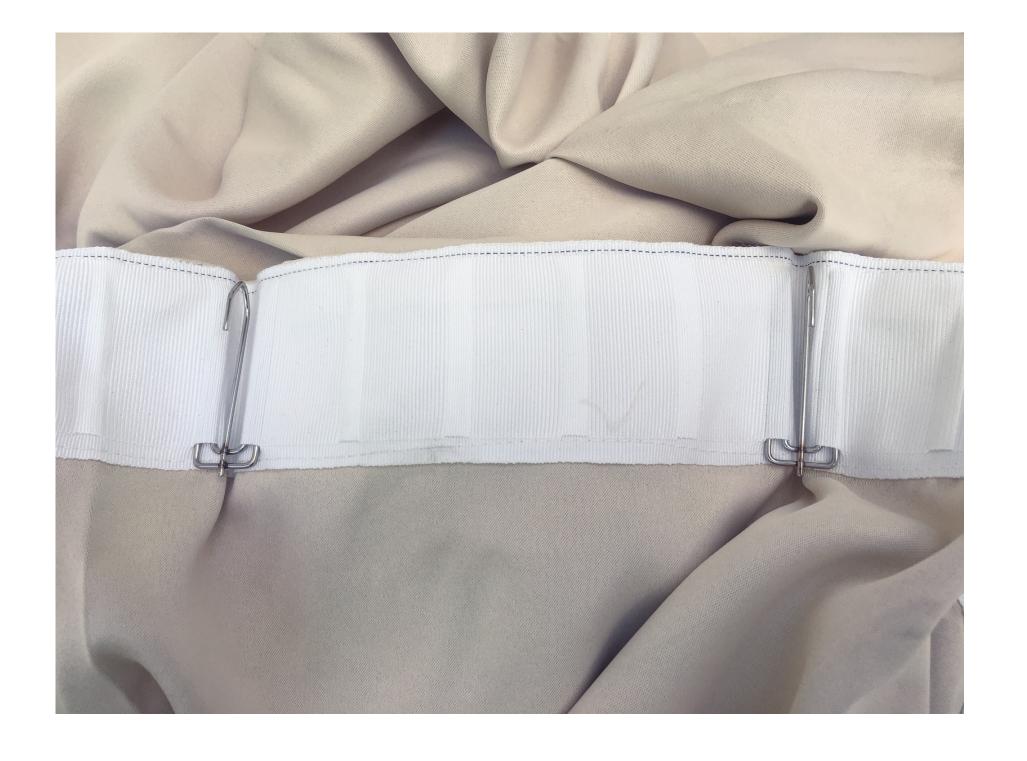



- Lastly, hang up your curtain by hooking the curtain hooks onto the curtain rollers
- Time to take 'em for a spin :)
  Nice work!