


# PROCEDURE FOR SWITCHING DIRECTION OF DOOR SWING ON PERLICK C-SERIES, 15 INCH, AND SIGNATURE SERIES CABINETS

NOTE: Changing the door mount is not advisable if you have a door with custom wood overlay. doing so may result in having a handle that is in an undesirable position.

- Required:
- Large Flat-Head Screwdriver
  - Regular Phillips-Head Screwdriver
  - Hinge Kit from Perlick
  - Plastic Putty Knife

**HINGE KITS**  
Part number 67439R to switch to Right Hinging  
Part number 67439L to switch to Left Hinging

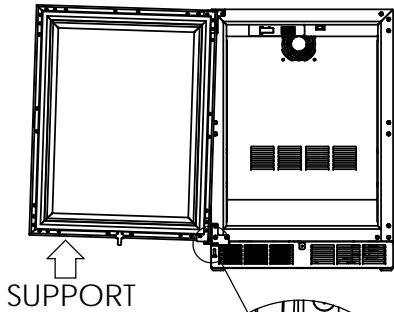

Step 2: Pull door to the side, then lower door.

Step 1: Support door in the open position as shown. Remove Hinge Pin.

Step 3: Remove Top and Bottom Hinge Brackets and save the screws for later.

Step 4: Remove the Hole Plugs from the Top and Bottom Hinge Bracket mounting holes. Then place them in the holes on the opposite side made vacant in Step 3.

Step 5: Using the screws from Step 3, install the new Top and Bottom Cabinet Hinge Brackets.

Step 6: Remove the Top and Bottom Door Hinge Brackets and the Push Plunger Bracket. Save the screws for later.



**Perlick Corporation**  
Milwaukee, WI 53223


**DOOR HINGE  
REVERSAL**

SCALE 1:24  
DRAWN DAS DATE 3/28/2011

**67439**



THIS DOCUMENT/PUBLICATION/SOFTWARE/DRAWING CONTAINS PROPRIETARY INFORMATION WHICH IS THE PROPERTY OF THE PERLICK CORPORATION. IT MAY NOT BE REPRODUCED OR TRANSMITTED IN ANY FORM, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPIING, RECORDING, OR USED IN ANY INFORMATION STORAGE, TRANSMISSION, OR RETRIEVAL SYSTEM, WITHOUT WRITTEN PERMISSION FROM THE PERLICK CORPORATION  
COPYRIGHT 2001 PERLICK CORPORATION. ALL RIGHTS RESERVED.

# PROCEDURE FOR SWITCHING DIRECTION OF DOOR SWING ON PERLICK C-SERIES, 15 INCH, AND SIGNATURE SERIES CABINETS

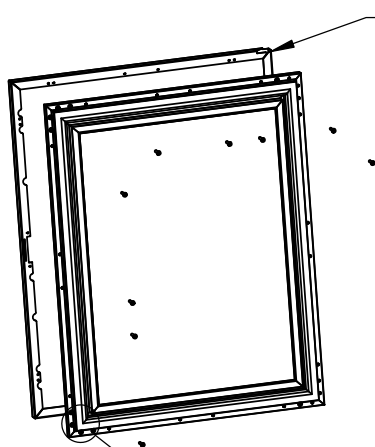


Step: 7 Remove the Front Panel from the Door Assembly by removing the inner mounting screws, 4 per side, from the perimeter of the assembly. Rotate the Front Panel 180°, the top becomes the bottom. Reattach using the same screws and mounting holes.

Step 8: Remove Perlick nameplate from Door Front using Plastic Putty Knife. Install new Perlick nameplate (included)

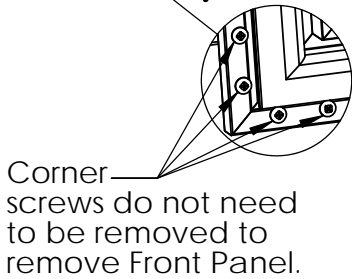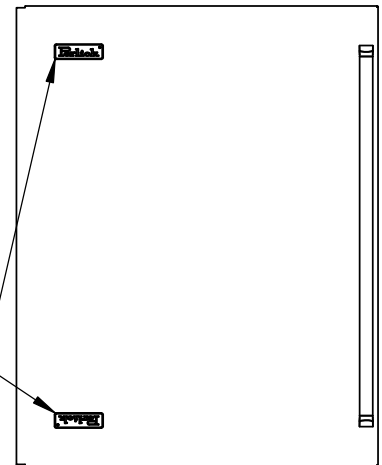


Step 9: Insert bearing into Top Door Hinge Bracket.

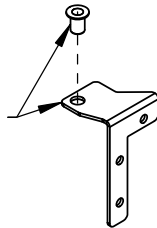


Step 10: Insert V-block into Bottom Door Hinge Bracket, see NOTE below, and attach with E-Clip.





NOTE: ORIENTATION




Step 11: Attach the Top and Bottom Door Hinges and Push Plunger using screws removed in Step 6.

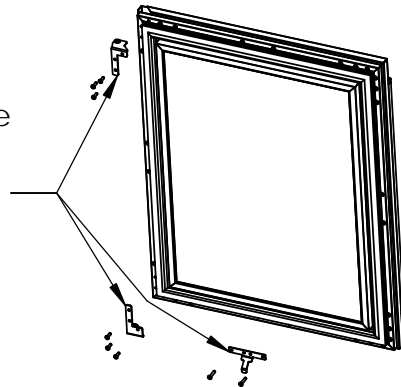

Step 12: Place Lower V-Block into Lower Cabinet Hinge with notch parallel to cabinet.

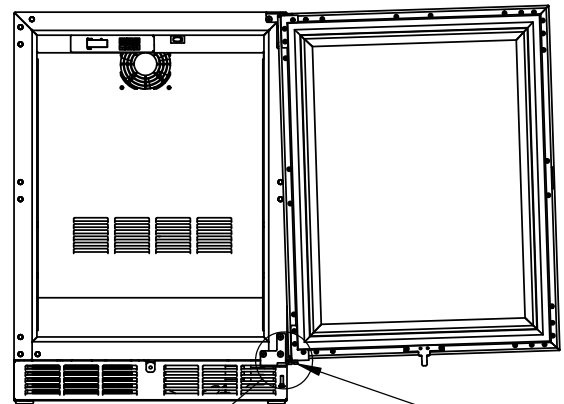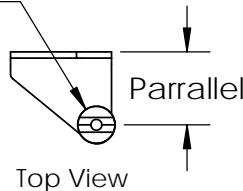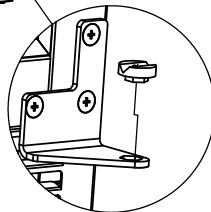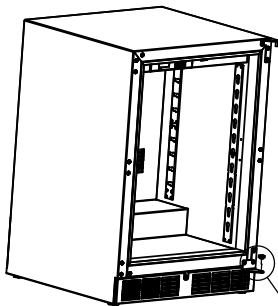

Step 13: Lift the Door Assembly and insert top pin into bearing. Then move door toward cabinet and align V-Blocks.

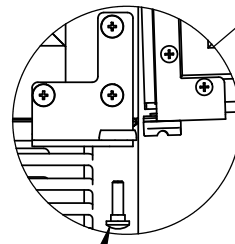

Step 14: Insert and tighten Lower Hinge Pin to complete assembly.



Perlick Corporation  
Milwaukee, WI 53223

DOOR HINGE  
REVERSAL

SCALE 1:24  
DRAWN DAS DATE 3/28/2011

67439