



emma hayes




Bloom

Non woven paper

Billowing cloud like shapes bloom and disperse through the atmosphere


- Design: Bloom
- Colour: Sage
- Pattern number: EH022BS
- Composition: 100% Non-woven paper, pearlescent finish
- Grade: Residential / light commercial
- Repeat: 81" wide (205cm)
- Roll size: Ships as a roll containing 3 panels each measuring 27" wide x 3.3yards high (686cm wide x 3m long)
- Order: by the roll
- Fire Rating: Class A, ASTM-E84
Euro Class B under the test protocols of BS EN 13823: 2002 and BS EN 13238: 2010. Classified in accordance with BS EN 13501-1: 2007.
This correlates to New Zealand Group Number 1-S according to NZBC clause 3.4 (a) using ISO 9705:1993
- Environment: Our non-woven paper is sourced from sustainable forest sources and printed using non-toxic inks
- Installation: Butt join
- Note: Paper can be hung with Bloom detail at top or bottom



Paste the wall
The adhesive should be applied to the surface that the wallcovering is being hung onto. e.g. the wall, and the paper applied dry direct from the roll. Note: The paper can still be pasted and hung in the conventional way if desired.



Spongeable
A finished wallcovering from which dirt and some water-based stains may be cleaned carefully from the front face of the paper with a damp soft cloth or sponge at the time of hanging without causing visible damage, providing it is done whilst the adhesive is still damp. No subsequent washability is claimed or implied.

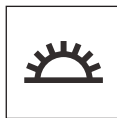

Half sun
Standard lightness. The wallpaper has a minimum rating of 3 when tested in accordance with the EN233 lightfast procedure.

Butt join
Also known as a butted seam. The wallpaper rolls are finished precisely to have no overlap. Meaning the panels simply butt up to each other for ease of installation.




Type II commercial grade and custom colourways are available on request. Please contact us for further information.



emma hayes

Example of pattern repeat
Bloom can be hung with the details at top or bottom

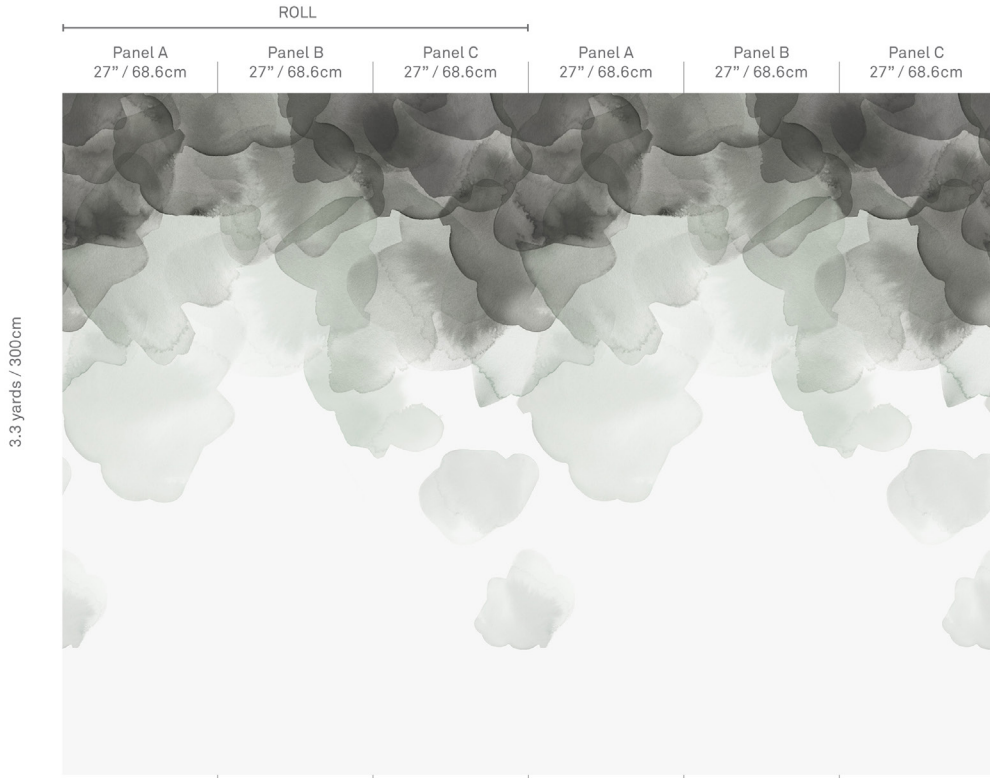



emma hayes

Hanging instructions for wallpaper panels

Please read these instructions carefully before hanging this wallcovering. It is advisable that a professional decorator is used.

INSPECT EACH ROLL

- Before cutting and hanging this wallcovering, ensure that all rolls have the same batch reference, are in good condition, have no shade variation and that no other faults are present. Please ensure that there are enough rolls to complete the job. Examination before hanging is the buyer's responsibility. No claim can be accepted for hanging incorrect wallcoverings or after wallcoverings have been cut and hung showing defects which were apparent at the time of hanging. Return any defective roll with its label to the place of purchase.
- This product consists of three panels supplied and printed as one continuous roll. Each panel measures 27" wide x 3.3 yards high (68.6cm wide x 300cm high). **Refer to the diagram enclosed.**
- **Please note: the paper can be hung with the Bloom detail at top or bottom. Please confirm desired orientation before installing.**
- Take extra care when papering around electric light switches and power points. Do not allow moisture to drip onto electrical contacts.

PREPARATION

- Walls should be clean, dry and even.
- Prepare wall by removing all traces of dirt, old wallpaper, or loose paint.
- Do not hang wallcoverings on any wall with a history of damp.
- Fill any cracks and allow to dry before hanging.
- Absorbent surfaces should be appropriately sized using a diluted wallpaper adhesive. Sealed walls, i.e. painted should be rubbed with sandpaper to create a 'key'.
- It is important that the walls are of an even and consistent colour. If they are not then consideration should be given to painting them with an appropriate colourwash. Alternatively, we recommend that walls be 'lined' horizontally using a good quality lining paper. Allow this to fully dry.

HANGING

- This is a 'paste the wall product'. The decorator should paste the wall and not the back of the wallcovering.
- We recommend the use of a light ready mixed adhesive. Evenly apply the adhesive directly onto

the wall using a brush or a short pile emulsion roller.

- Paste should be evenly applied to the wall to hang one length at a time.
- Apply the wallcovering to the wall and smooth down with a good quality hanging brush or plastic spatula.
- Do not overlap, use butt joints.
- For walls shorter than 3.3yards (300cm) the panels will need to be trimmed at either top or bottom with a sharp decorating knife.
- **Carefully wipe any excess paste from the face of the paper immediately with a clean damp sponge before it dries.**
- After hanging 2 or 3 lengths, inspect the results to ensure that there is no shading or other fault.

No claims for hanging costs will be allowed for goods hung in excess of one roll.

This information has been supplied in good faith, but without guarantee. Site conditions are beyond our control. It is the responsibility of the buyer to ensure that the environment is suitable for the wallcovering.

www.emmahayestextiles.com