



## Newport Single Panel Assembly Instructions

### **Parts Included**


- Frame x1
- Front Leg x2
- Back Leg x2
- Bolts x4
- Nuts x6

### **Step 1**

Place Bolts through Front Leg and the Frame. Secure with the Nuts provided. Use supplied Allen wrench to tighten Bolts down.

### **Step 2**

Align Back Leg to Threaded Stud. Secure with the Nut provided.

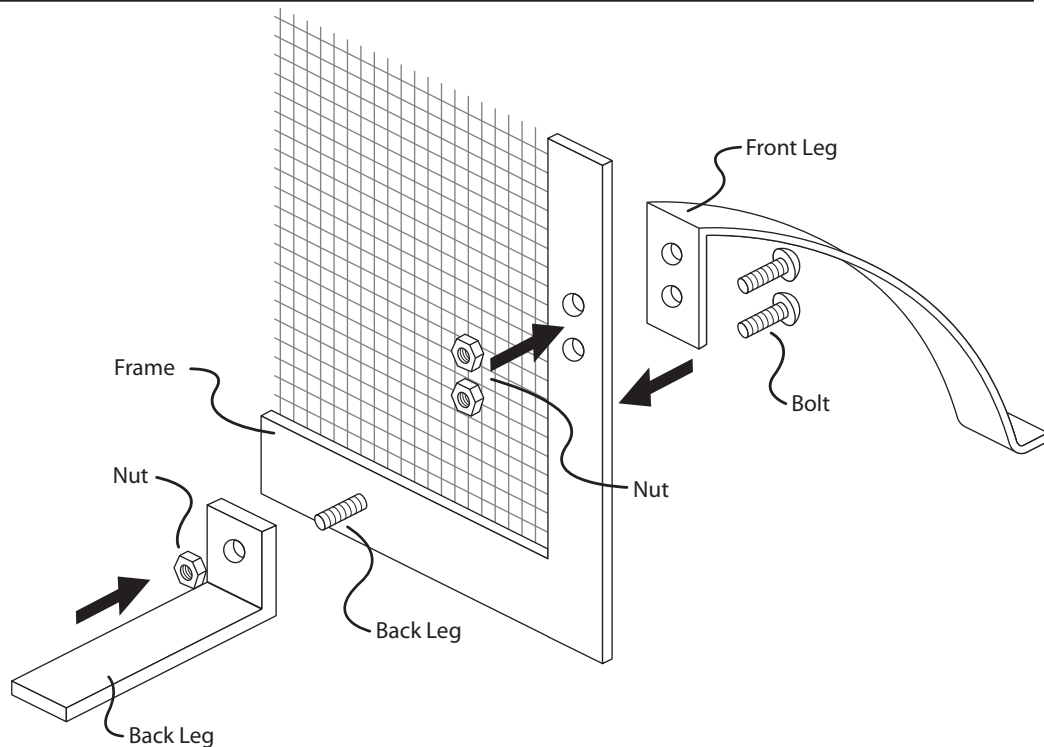

**BACK OF SCREEN FRAME SHOWN IN ILLUSTRATION**

PART# 18257