




**DO NOT DISCARD. PLEASE REVIEW THE FOLLOWING INFORMATION TO PROPERLY INSTALL YOUR BURNER.**


Firegear Outdoors "Pro Series" burners utilize a brass burners with individual injectors, pre-assembled into each burner leg to eliminate the need for a main burner orifice. Each injector has a separate brass hood to protect the injector from outdoor elements (i.e. wind, rain, dust and debris). If you find a hood misaligned or a hood has fallen off during shipping, use the guidelines below to ensure each hood is installed properly before operating the burner.

### Hoods Properly Installed

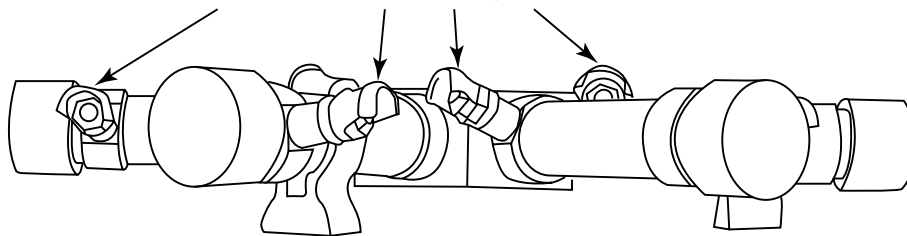


**Fig. 1** Shows hoods installed.

Install the hood over top of the injector by sliding it into position. Use the bead in the lower section of the hood, and align it with the groove in the injector, until it snaps into place. See Fig. 2. Rotate the hood to ensure it is protecting the injector opening from the elements. See Fig. 1 for proper alignment. **Note:** If there is no detent in the injector, ensure the hood is  $\frac{1}{2}$ " from the base of the injector to the bottom edge of the hood as shown in Fig. 3.

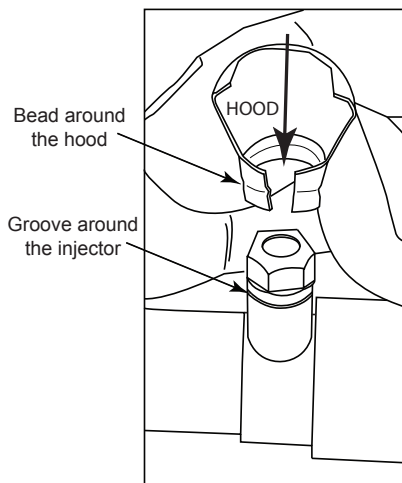

**Fig. 2** Installing hood over top of injector.

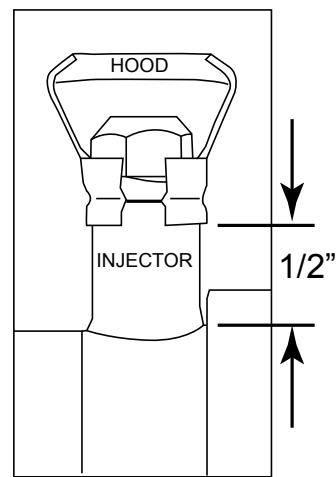

**Fig. 3** Shows  $\frac{1}{2}$ " spacing from bottom of injector.

**FOR TECHNICAL SERVICE, CALL: (800) 966-8126**

Firegear Outdoors  
17322 Gothard St  
Huntington Beach, CA 92647