





1) SLIDE THE TOP RINGS INTO THE BOTTOM RINGS

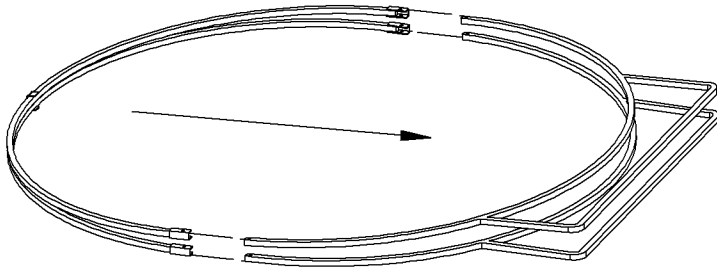

2) INSERT THE BOLTS AS SHOWN AND SECURE WITH NUTS.

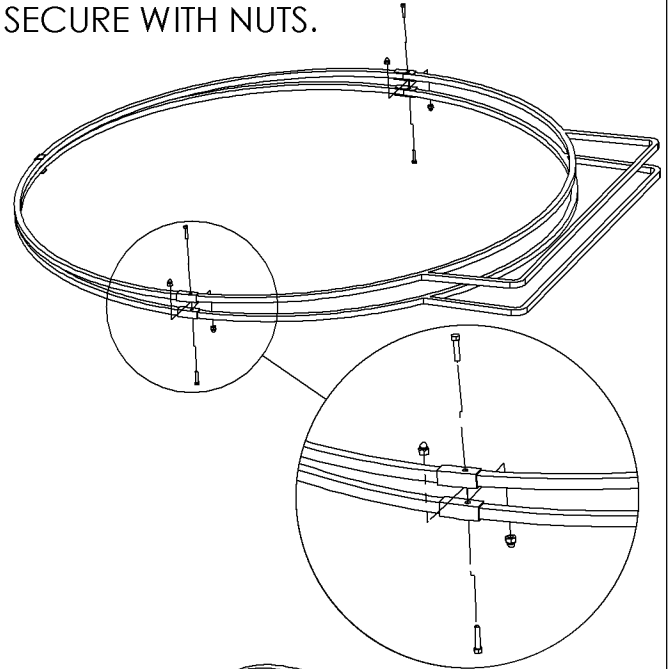

3) SPREAD THE RINGS APART AT THE BASE

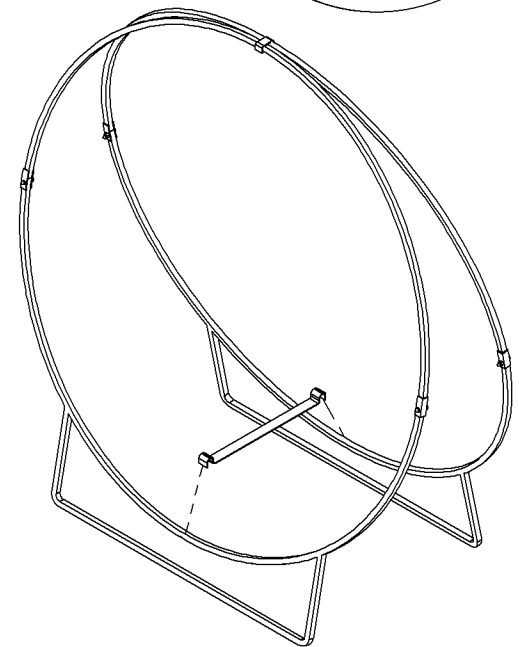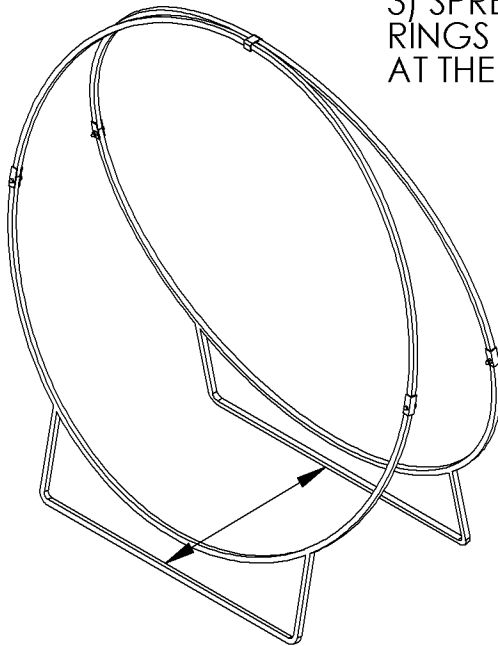

4) SLIDE THE BASE SUPPORT OVER THE TWO RINGS.

