MONESSEN

LCUF (32, 36, 42) Black Magic Glass Liner Kit Installation Instructions

Model: BMGLR32, BMGLR36, BMGLR42

⚠ **WARNING: Turn appliance OFF and allow to cool before servicing. Only a qualified service person should service and repair this insert. A qualified service person must connect and disconnect the insert to/from the gas supply. Follow all local codes.**

NOTE: Black Magic glass liner kits may be used only with the LCUF vent free firebox. Please verify the size and model number of your firebox to be certain the kit you purchased is correct.

NOTE: Some systems require removal of a screen panel, glass front log assembly or engine assembly before installation of the glass liner kit. Refer to the the LCUF Installation and Operating Instructions.

KIT CONTENTS:
• One (1) Center panel
• One (1) Left panel
• One (1) Right panel

PART NO.	DESCRIPTION
BMGLR32	Black Magic Glass Kit for LCUF32
BMGLR36	Black Magic Glass Kit for LCUF36
BMGLR42	Black Magic Glass Kit for LCUF42

TOOL REQUIRED:
Phillips head screwdriver
INSTRUCTIONS:
1. Remove logset and media.
2. Remove existing firebrick, if installed, by removing brackets at the top front of each side panel. Tilt brick into box and lift out. Repeat on other side.
3. Remove rear firebrick by removing the rear brick bracket at top center of rear firebrick. Tilt into box and lift out.
4. Use a shop vac or small brush to clean debris left from refractory panels to ensure a flat surface for the Black Magic Glass panels to sit upon.
5. Install rear Black Magic Glass panel against firebox rear wall and attach at the top with retainer brackets and screws removed from brick refractory in closer hole set. See Figure 1.

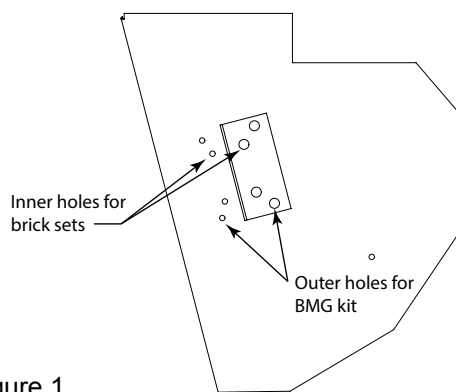Inner holes for brick sets

Outer holes for BMG kit

Figure 1

6. Place left and right glass liner panels against firebox sides and attach at the top with retainer brackets and screws removed from brick refractory in closer hole set. See Figure 2 .
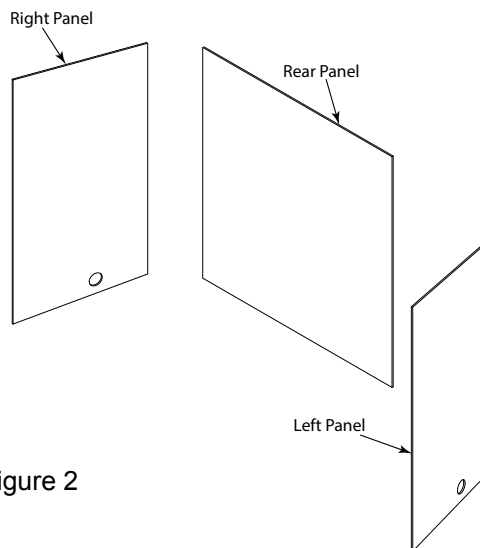7. Reinstall the log set or media.

Right Panel

Rear Panel

Left Panel

Figure 2