



CONVERTING FROM LIQUID PROPANE TO NATURAL GAS

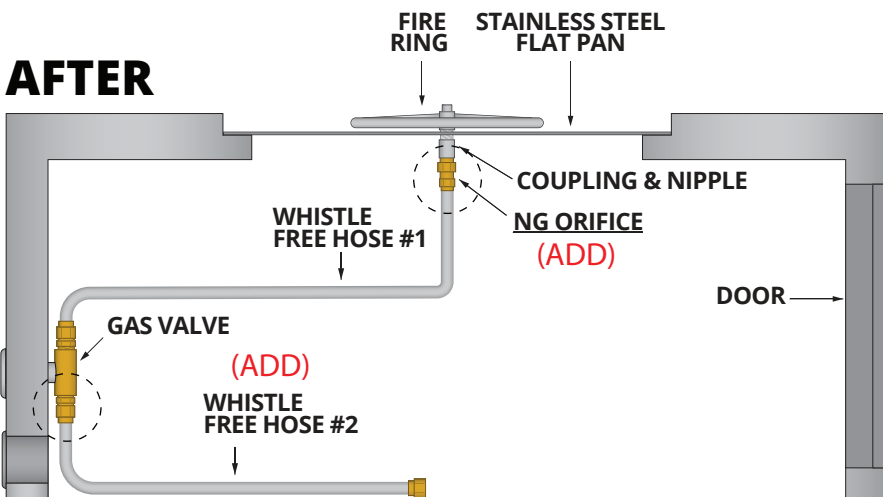

LP Orifice
(REMOVE)

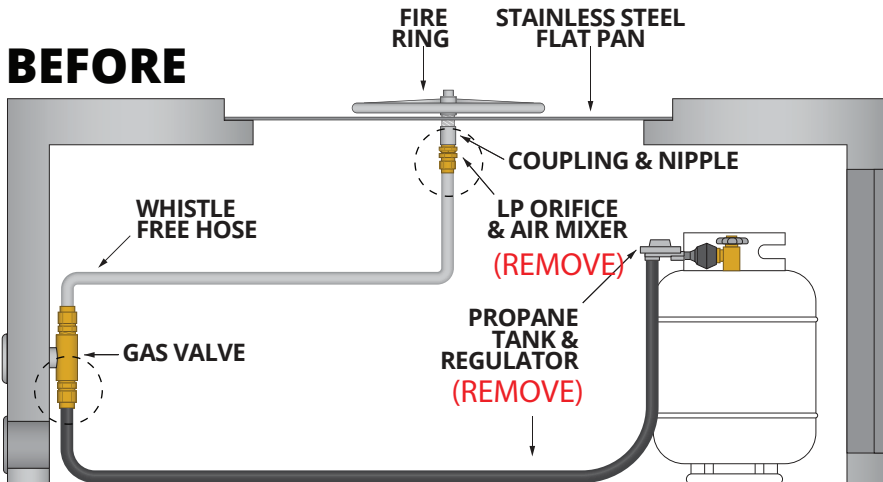

NG Orifice
(ADD)



LP Hose and Regulator
(REMOVE)

Step 1: Remove the LP AIR MIXER (Shown Above)

Step 2: Replace LP orifice with NG Orifice.

Step 3: Apply pipe dope or gas plumbers tape to all necessary connections (do not apply to flared fitting connections)

Step 4: Reconnect and tighten connections. Do not over-tighten. If too tight, the threadings can strip and damage will occur

Step 5: Remove propane hose (Shown Above) Be careful not to remove the flare fitting from the valve.

Step 6: Where you removed the LP hose, attach the flex hose. Reconnect and tighten connections. Do not over-tighten. If too tight, the threadings can strip and damage will occur

To test for leaks, apply soapy water to the connections and run gas. If bubbles appear, the connection may need pipe dope or may need tightening. Reconnect and test again until all connections are secure.