


1) PLACE THE LID OVER THE REAR POST AND PLACE THE WASHER ON TOP OF THE LID AND OVER THE REAR POST.

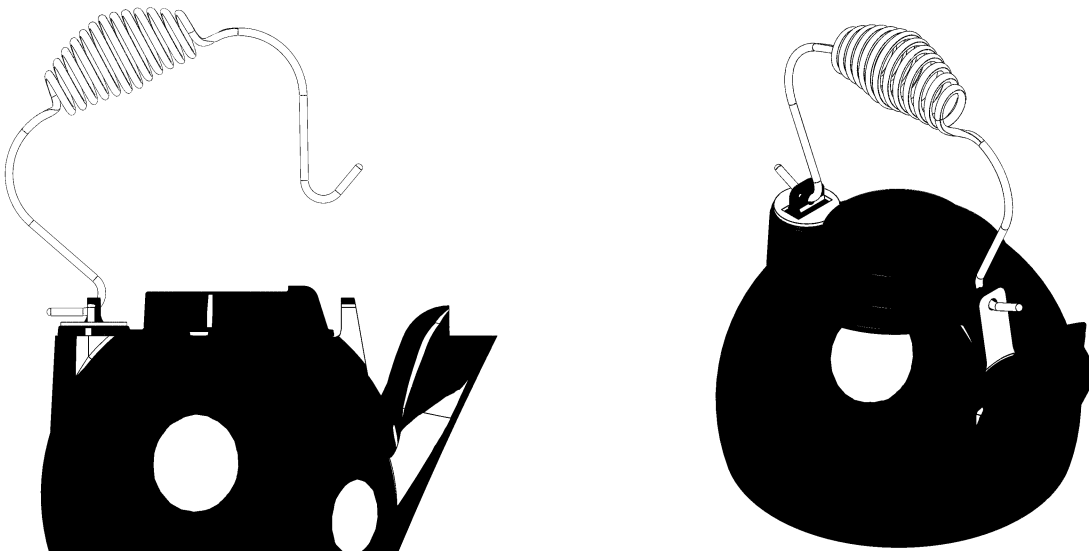

2) ANGLE THE HANDLE SO IT LINES UP WITH REAR HOLE. BEND HANDLE SO THAT IT LINES UP WITH THE FRONT HOLE CAREFULLY TO PREVENT CHIPPING. THE LID CAN BE SLID OPEN TO THE SIDE TO GIVE MORE ROOM FOR THE HANDLE.