

INTAKE TUBE

Installation Guide for 96030025

Model fitment:

2021 Can-am X3 Turbo R models

2020-2021 Can-am X3 RR models

PARTS LIST



1 INTAKE TUBE
1 BARB FITTING

1 CLAMP

**PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION.
THE IGNITION MUST BE TURNED OFF BEFORE INSTALLATION.**




196030025.01



INSTALLING THE INTAKE TUBE


- 1 Slide the drivers seat forward or remove.
- 2 Remove the 2 bolts behind the seat holding the air box in place.
- 3 Remove the center engine access panel by pulling outwards. This panel is held in place by rubber grommets.

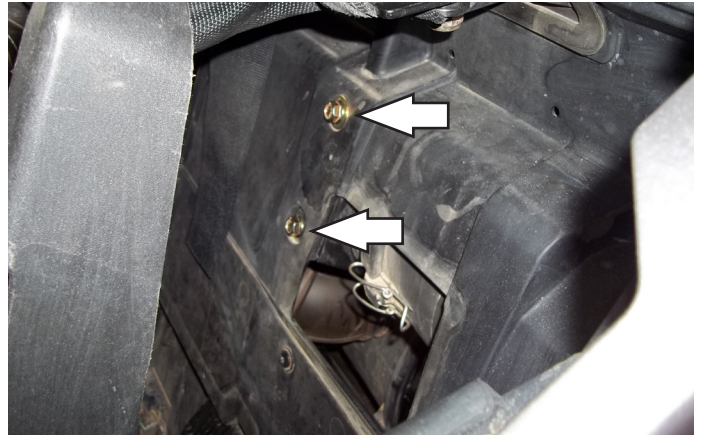

REMOVE AIR BOX BOLTS

- 4 Loosen the clamp on the small hose going into the intake tube, from the crankcase breather, and remove the hose.
- 5 Loosen the clamp on the intake boot to the turbo housing.

This image is shown with the Dynojet wastegate actuator and charge tube in place

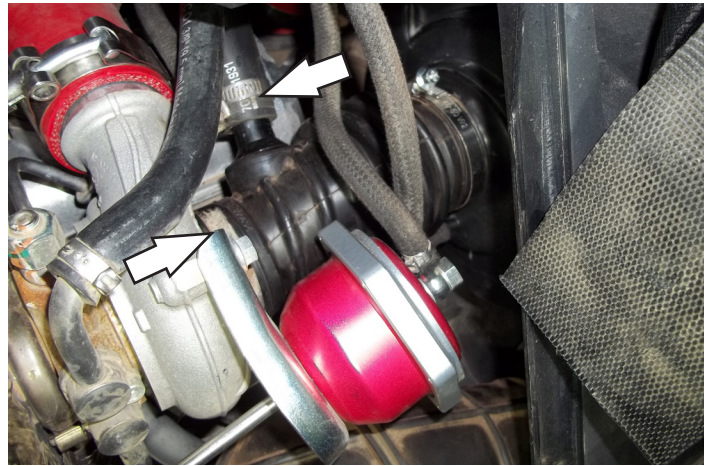

LOOSEN CLAMPS

- 6 Remove the clutch cover intake hose.
- 7 Loosen the clamp for the airbox intake hose
- 8 Remove the airbox assembly



REMOVE AIR BOX

INSTALLING THE INTAKE TUBE

- 9 Install the hose coupler into the Dynojet tube using the supplied clamp.
- 10 Install the Dynojet tube onto the turbo using the stock clamp.



INSTALL TUBE

- 11 Install the airbox using the stock clamp.
- 12 Connect the crankcase breather hose to the Dynojet tube using the supplied clamp.
- 13 Reinstall the access cover



INSTALL AIRBOX



PUSH THE LIMIT

2191 MENDENHALL DRIVE, NORTH LAS VEGAS, NV 89081 - 800-992-4993 - DYNOJET.COM

© 2016-2020 DYNOJET RESEARCH ALL RIGHTS RESERVED