

Part number 1898-7027-01

2018-19 Ford Mustang RTR

Performance Pack Spoiler Lip


GT and EcoBoost Models

Component Identification



1. RTR Spoiler Lip 1
2. Adhesion Promoter (not shown) 2


NOTE: This installation is best performed with the help of an assistant. RTR recommends “Dry Fitting” the Spoiler Lip onto the OEM Spoiler first, to familiarize yourself with the way in which the two parts mate.

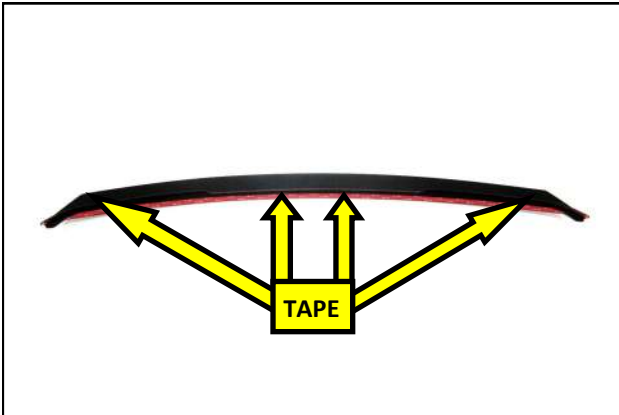


1. The RTR Spoiler Lip is intended to be installed on the trailing edge of the Performance Pack trunk spoiler. The RTR Spoiler Lip mounts to the OEM spoiler using high bond double sided tape. Proper surface preparation is very important.



2. Along the upper edge, place a cut in the Tape Backer on each side approximately 1/3 of the way in, at the transition.

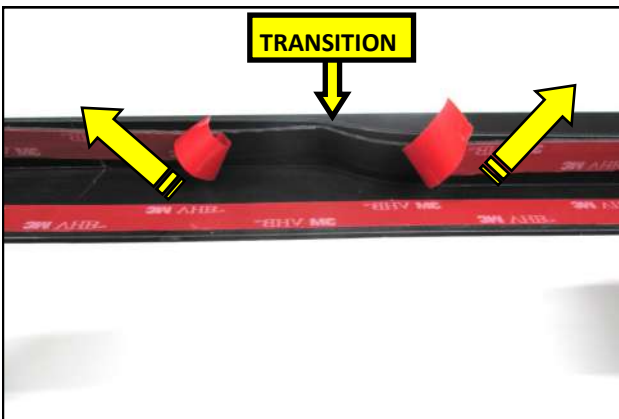


3. Peel approximately one inch of the backer away on each side of the cut as shown.

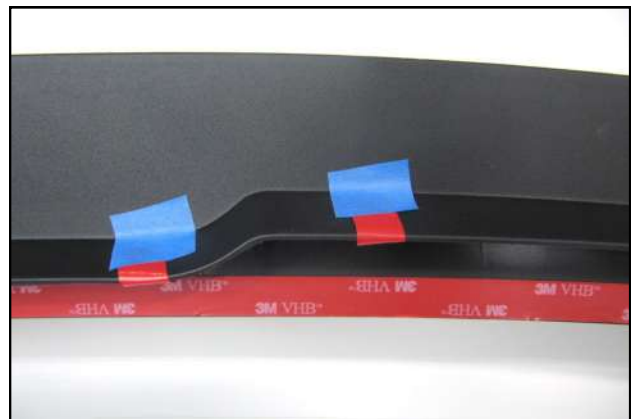


4. Wrap the peeled edges around the RTR Spoiler Lip and tape the edges down on the opposite side.




5. Peel and tape the backer on the outer edges of the RTR Spoiler Lip as shown.

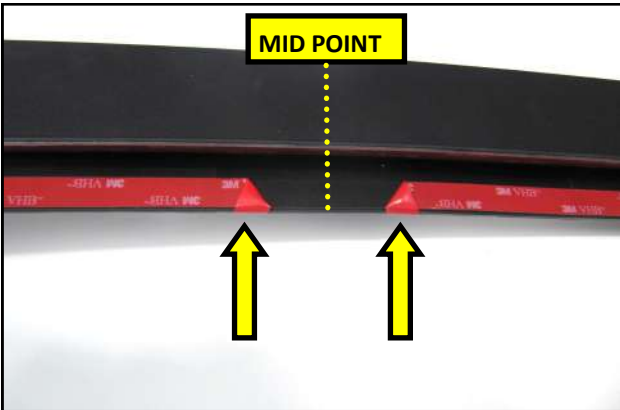


7. Peel approximately one inch of the backer away on each side of the cut as shown.

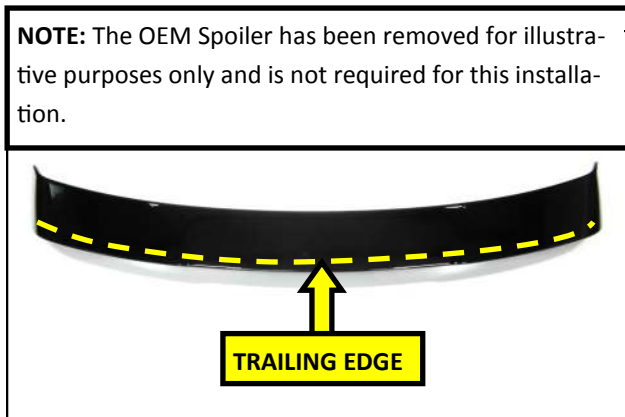


9. Using a mild soap and water solution, clean the OEM spoiler of any and all dirt and dust. When completely dry, wipe the top and bottom of the trailing edge using the supplied Adhesion Promoter.

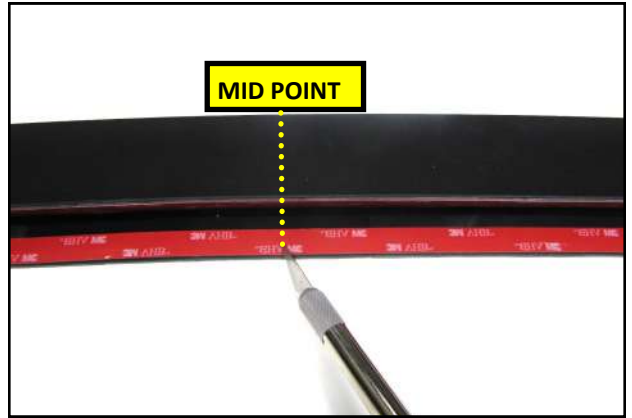


6. On the opposite side of the RTR Spoiler Lip, create another cut line in the backer at the mid point of the Spoiler.

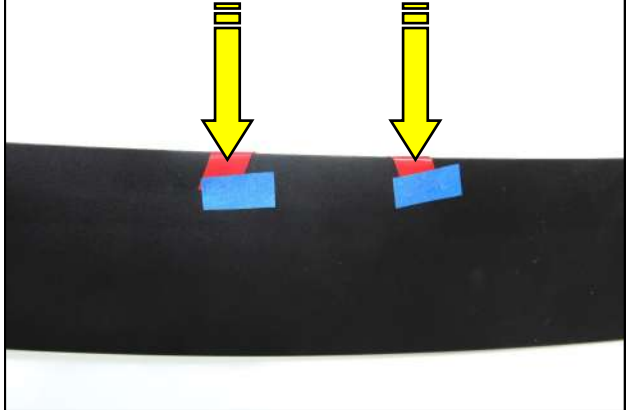


8. Wrap the peeled edges around the RTR Spoiler Lip and tape the edges down on the opposite side.

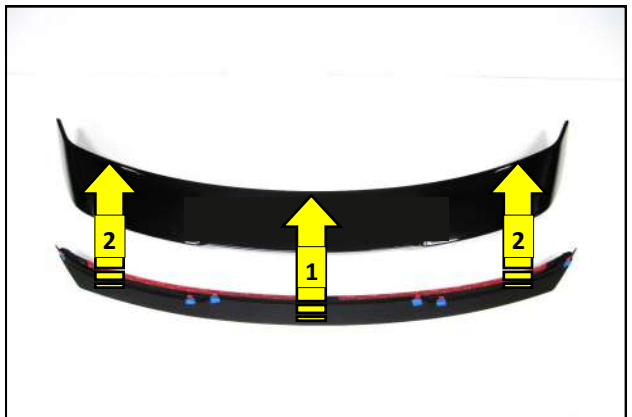


10. With the help of an assistant, slide the RTR Spoiler Lip onto the OEM spoiler. Firmly seat the center section first, then bring the edges in and onto the sides of the OEM spoiler. NOTE: Precise alignment is critical for a successful install.

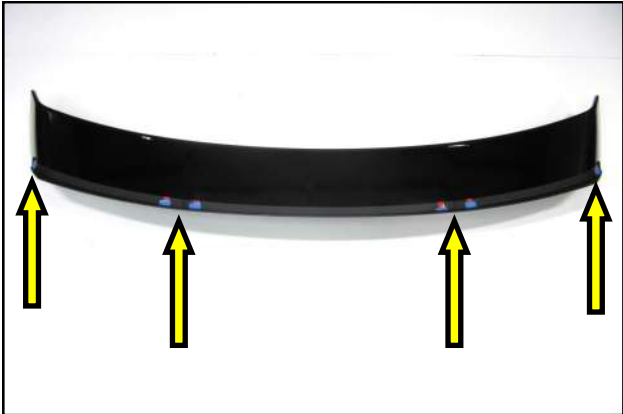

11. With the RTR Spoiler Lip in place, begin removing the tape backer from underneath the Lip.

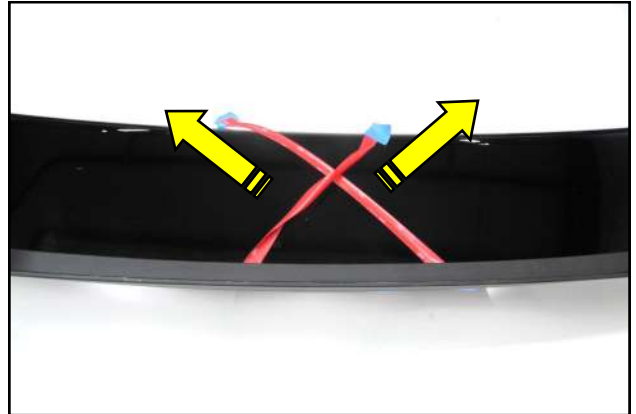

12. Pull the backer from each end of the strip until it is completely out from underneath the RTR Spoiler Lip then press firmly to bond the entire section of tape.

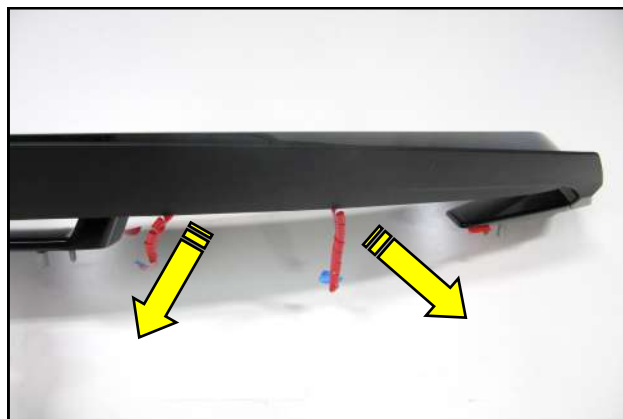

13. Pull the backer out from underneath the lower portion of the RTR Spoiler Lip and press firmly to bond the tape to the OEM spoiler.



14. Installation is now complete.

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK