





2021-22 Ford Bronco
Accessory Adapter Kit
Part number 14025.0014.99.A
Component Identification

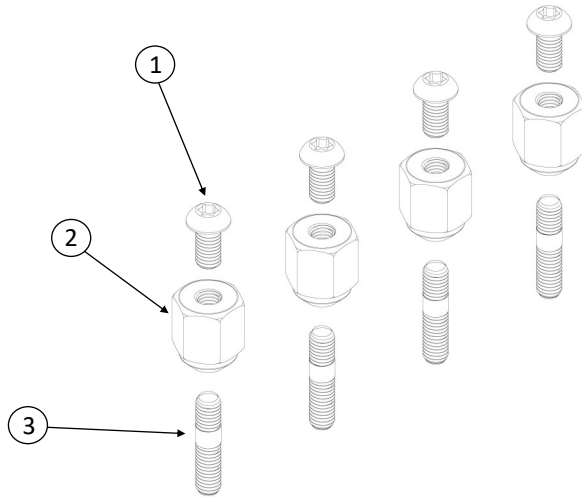


1.	M8 Button Head Cap Screw	4
2.	Adapter Nut	4
3.	M8 Stud	4


NOTE: This kit is intended to allow for accessories to be mounted to a vehicle equipped with OEM tailgate hinges. This kit is hardware only and does not include any accessories.

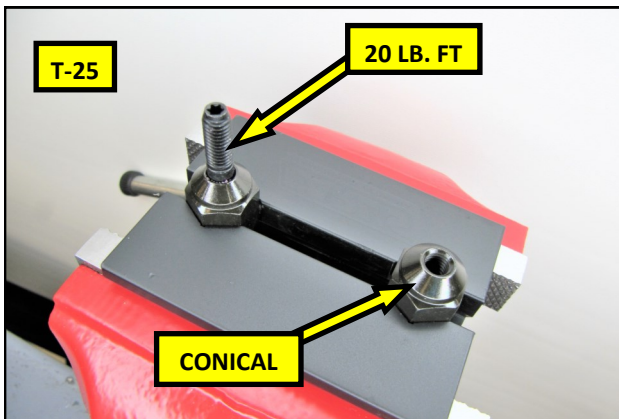


1. Place the Adapter Nuts into a soft jawed vice, conical side up, and thread the M8 Studs into them. Using a T-25 TORX® driver, torque the Studs to 20 Lb. Ft. Install the Studs into all four of the Adapter nuts.

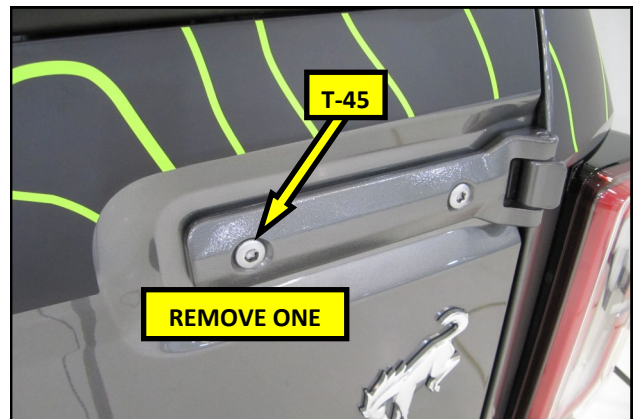


2. With the tailgate closed, use a T-45 TORX® driver to remove one hinge bolt from the tailgate.

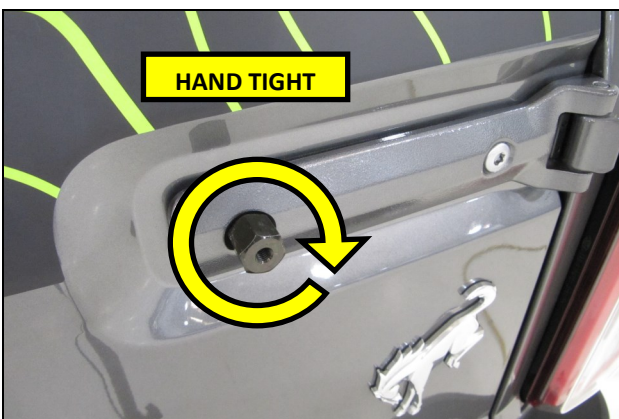


3. Thread the Adapter Nut with stud into the bolt hole from step 2 hand tight.

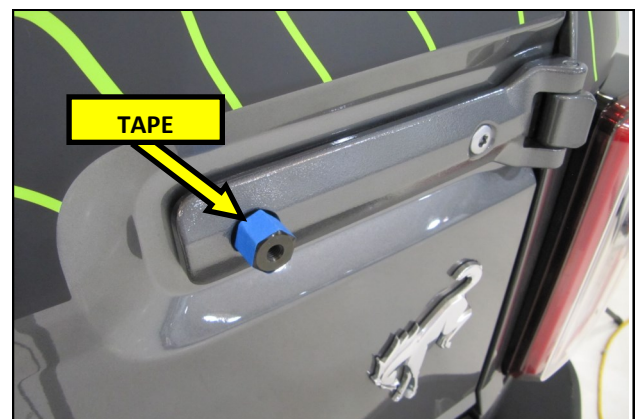

4. Wrap the Adapter Nut with a protective layer of painters tape or equivalent.

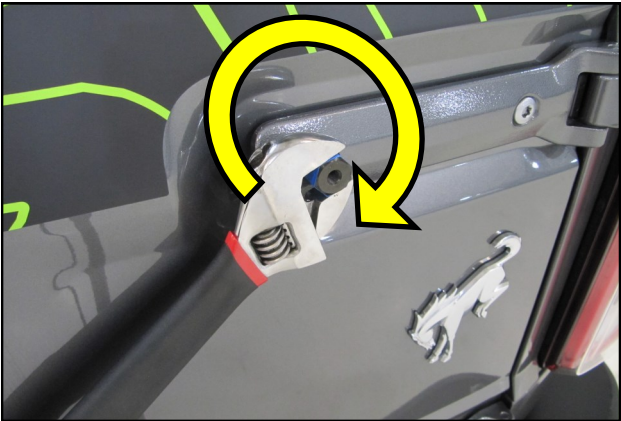


5. Using an adjustable wrench, snugged down onto the wrapped Nut, tighten the Adapter Nut to approximately 30 Lb. Ft. If need be, the tape can be removed and torque wrench with a 20 MM socket can be used.

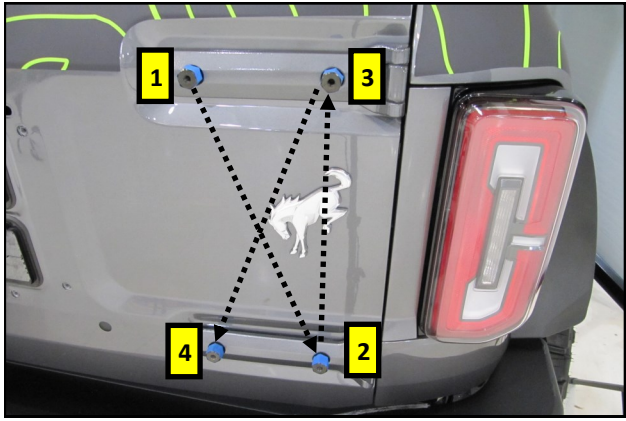

6. Repeat steps 2-5, one at a time for the three remaining hinge bolts in an alternating pattern. Remove the tape when complete.



7. With the Adapter Nuts installed, use the supplied M8 x 1.25 x 16 Button Head Screws to secure the selected accessory to the vehicle. Longer screws may be required depending on the accessory.

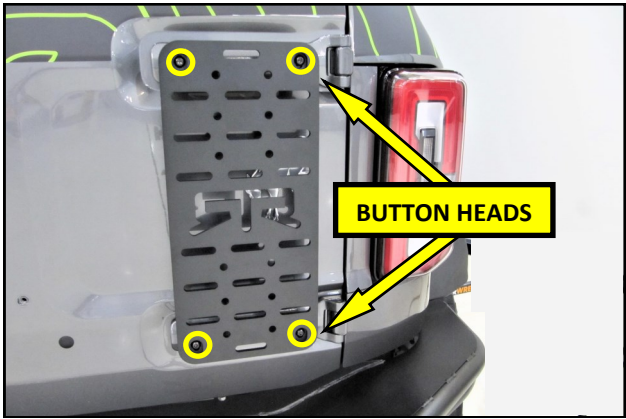

8. Completed install showing the RTR MOLLE Accessory Plate on the OEM tailgate hinges using the Adapter Kit. The RTR MOLLE Accessory Plate, PN **14021.0011.14.B** can be purchased separately at [RTR Vehicles.com](http://RTRVehicles.com)