




## 2021 Ford Bronco

### RTR Foot Rests

#### Part numbers:

**14151.0001.14A Front**

**14151.0002.14A Rear**

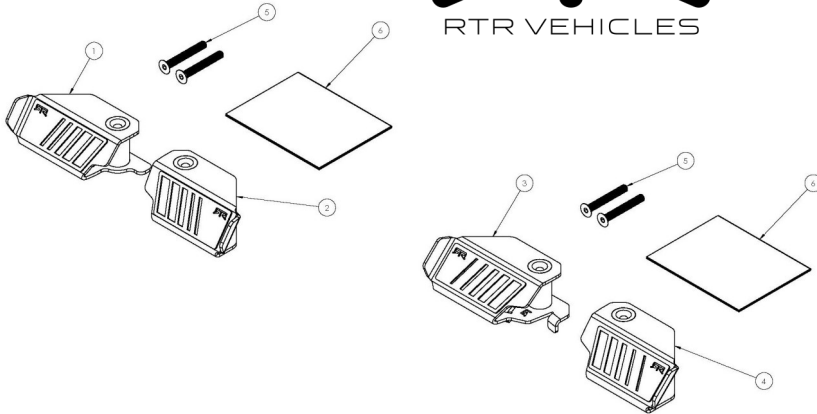

#### Components Identification

1.	Front Foot Rest Left	1
2.	Front Foot Rest Right	1
3.	Rear Foot Rest Left	1
4.	Rear Foot Rest Right	1
5.	Bolts	2 (per set)
6.	Instructions	1


**CAUTION:** The RTR Foot Rests are solely intended to be used as rests and are not to be used as steps or be stood on. Significant and costly vehicle damage can occur if used improperly.

**NOTE:** Prior to installing the RTR Foot Rests, the doors need to be removed from the vehicle. Ford has produced a video illustrating the proper door removal and storage procedure. This video can be viewed by scanning the QR code below or on the vehicle's center display screen.




**1A.** Ford Bronco™ Door Removal and Installation | Ford How-To | Ford Video


**1B. NOTE:** Push the start button once to put the vehicle in accessory mode. Once the center display is on, select Features.

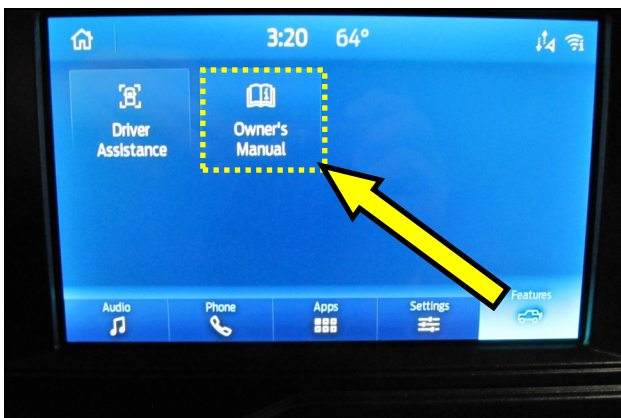


**2.** Select Owners Manual.

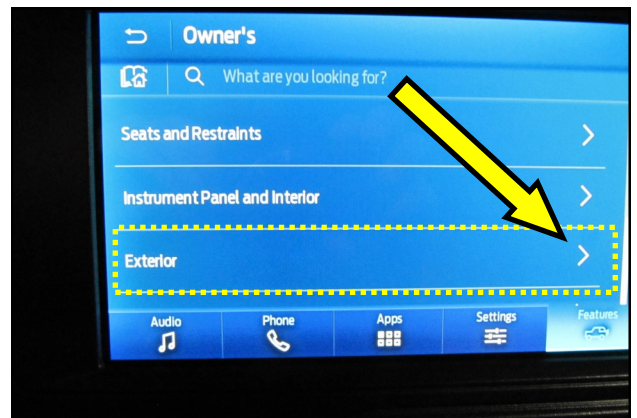


**3.** Select Exterior.

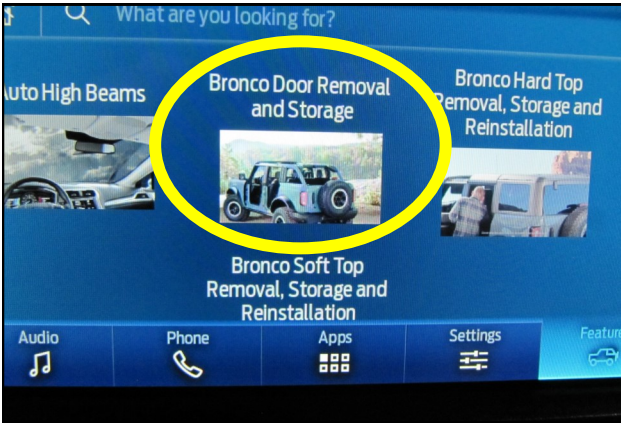

4. Select “**Bronco Door Removal and Storage**” and following the video, remove the appropriate doors for your application.

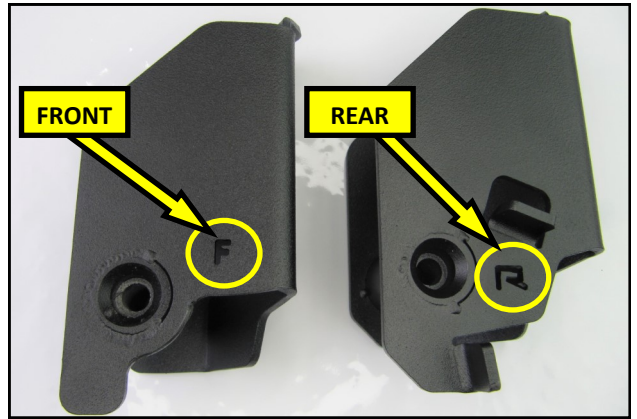


5. The RTR Foot Rests are marked on the bottom for ease of identification.

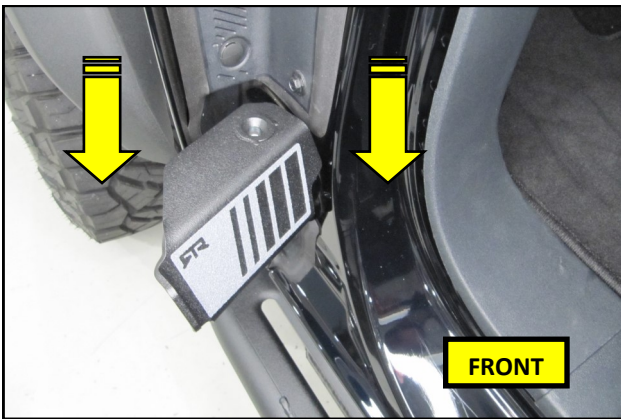

6. **NOTE:** Installation the Front and Rear RTR Foot Rests is essentially the same procedure. Steps 6 and 7 apply to both positions.

With the doors removed, place the Left and Right RTR Foot Rests onto the hinges as shown.

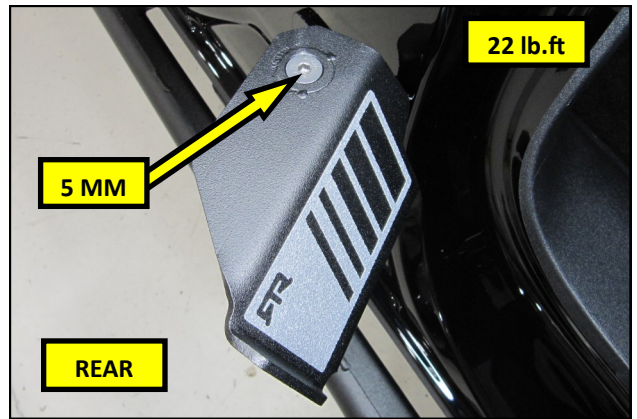

7. Using a 5MM Allen socket or equivalent, secure the Foot Rests to the hinges with the supplied bolts. Torque the Bolts to 22 lb.ft.



8. **NOTE:** A key design feature of the RTR Foot Rests is that they can be easily folded inboard, when needed, for additional clearance.