




**2015-2024 Ford Mustang
RTR Puddle Lamps
Part number CM-17370-RTR**

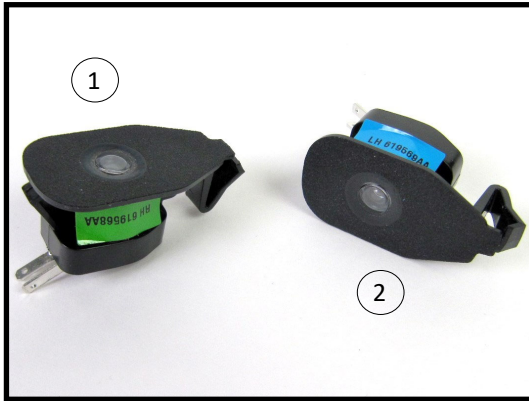

Component Identification

- | | | |
|----|------------------------|---|
| 1. | Puddle Lamp RH (Green) | 1 |
| 2. | Puddle Lamp LH (Blue) | 1 |


NOTE– This product is intended to be used on vehicles originally equipped with the OEM puddle lamps.




1. Disconnect the Negative terminal of the Battery. Locate the puddle lamp in the bottom of the mirror housing. **NOTE:** The mirror assembly has been removed for illustrative purposes only.



2. Using a jewelers screwdriver or equivalent, carefully depress the locking tab in the puddle lamp and pry it out of the housing.

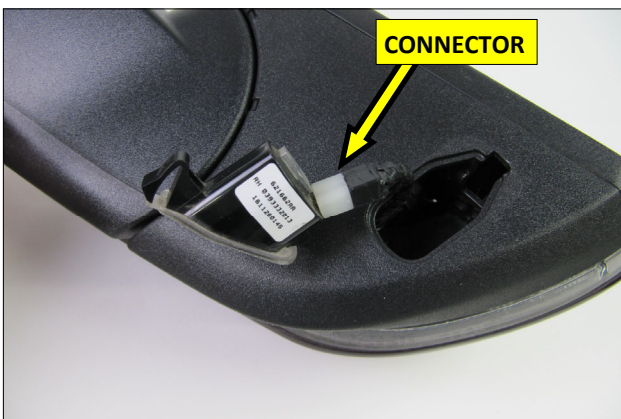


3. Disconnect the Lamp from the wire harness and set it aside.

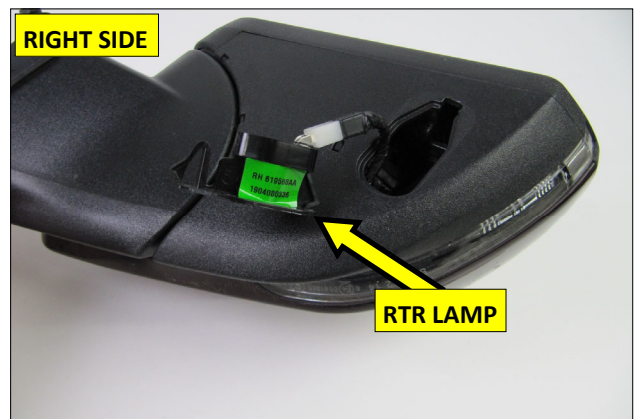

4. Connect the respective RTR Puddle Lamp to the harness. **NOTE:** The Right Hand Lamp is marked in Green and the Left Hand Lamp is marked in Blue.



5. Using both hands, carefully guide the front of the Lamp into the housing while pulling the rear of the Lamp slightly upward.

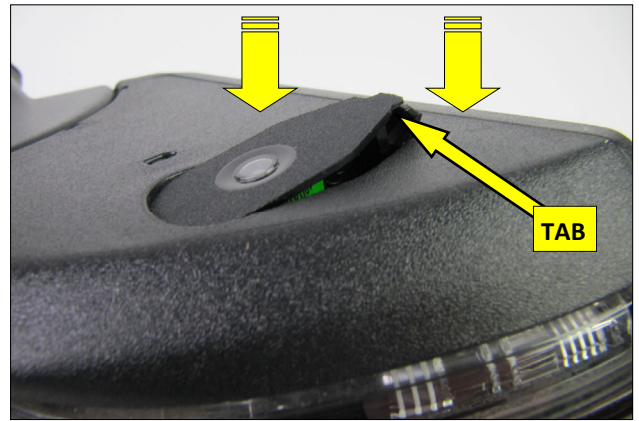

6. With the front of the Lamp in place, gently guide the Rear of the lamp down and into the housing.



7. Press firmly onto the back of the Lamp, compressing the locking tab, until a distinct click is heard indicating full engagement of the locking tab.



8. Underside view of mirror assembly with properly installed Puddle Lamp.

9. Repeat steps 1-7 on the opposite side of the vehicle. Re connect the Negative battery terminal and perform a function check of both Puddle Lamps.