


TOOLS LIST


C8 SIDE SKIRTS INSTALLATION

- TWO POST LIFT
 - ALTERNATIVELY, TWO FLOOR JACKS AND RACE RAMPS
- 7MM ¼ INCH DRIVE SOCKET
- 14 INCH DRIVE RATCHET

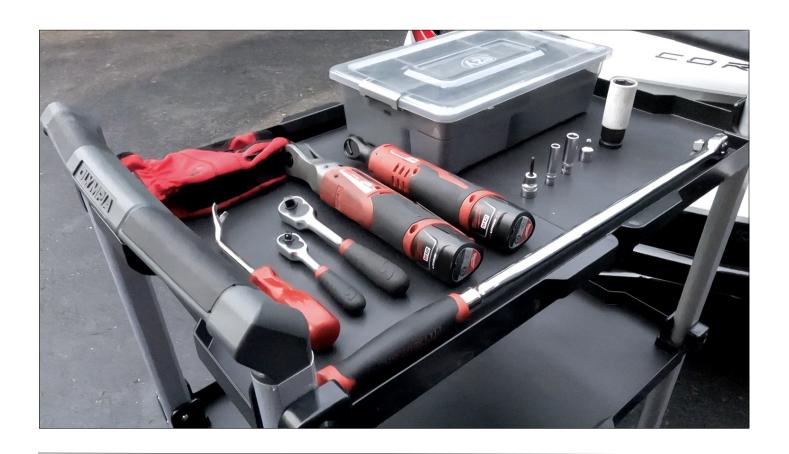

LIFT CAR TO ACCESS UNDERSIDE OF ROCKER PANEL

TOOLS...RACE RAMPS AND FLOOR JACKS

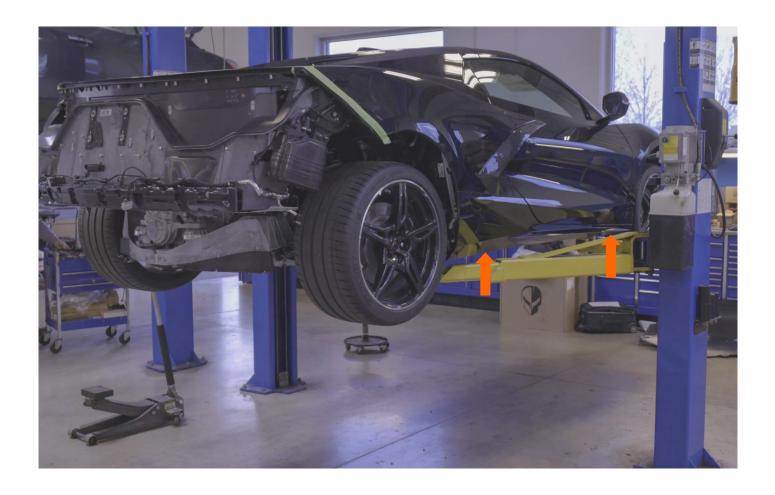


REMOVE THREE 7MM FASTENERS FROM UNDERSIDE OF ROCKER PANEL -REPEAT ON OTHER SIDE-

TOOLS...7MM SOCKET






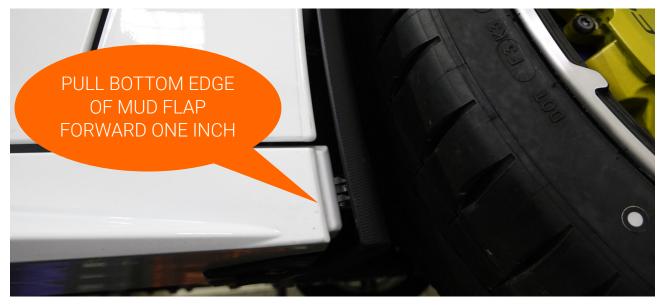


PEEL TAPE BACKING ABOUT ONE INCH ON BOTH ENDS AND TAPE TO THE OUTSIDE EDGE OF SIDE SKIRT WITH MASKING TAPE

TOOLS...MASKING TAPE




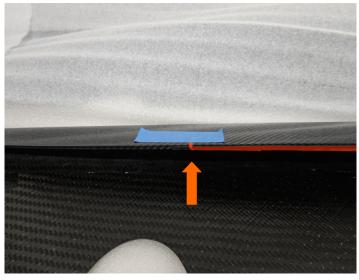

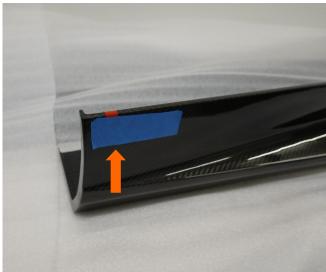


PREPARE MOUNTING SURFACE
CLEAN SURFACE TO REMOVE WAX OR DIRT PREVENTING ADHESION

TOOLS...3M ADHESION PROMOTER

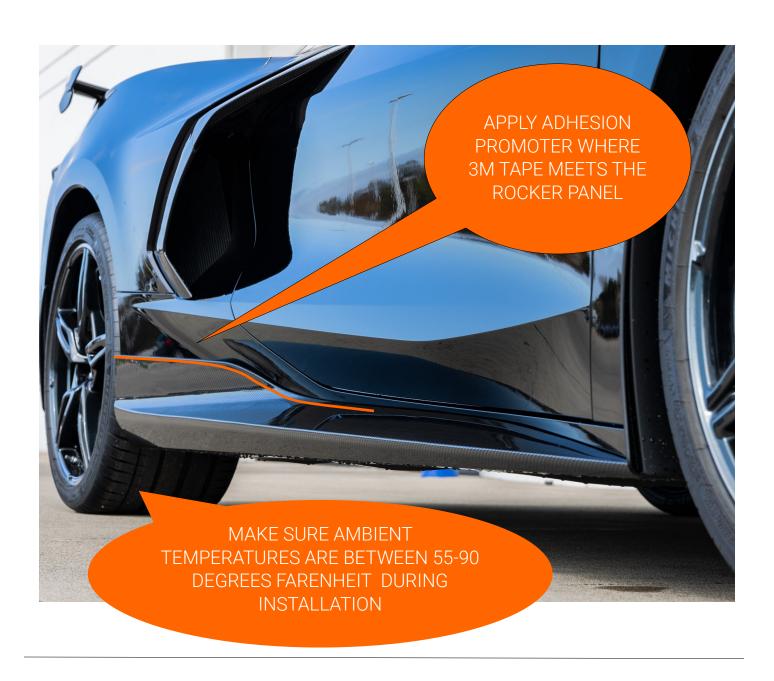

INSTALL SIDE SKIRT BY SLIDING THE FORWARD EDGE BETWEEN ROCKER PANEL AND MUD FLAP TAB. ALIGN REAR END OF SIDE SKIRT WITH FASTENER HOLES AND REINSTALL 7MM FASTENERS


TOOLS...7MM SOCKET

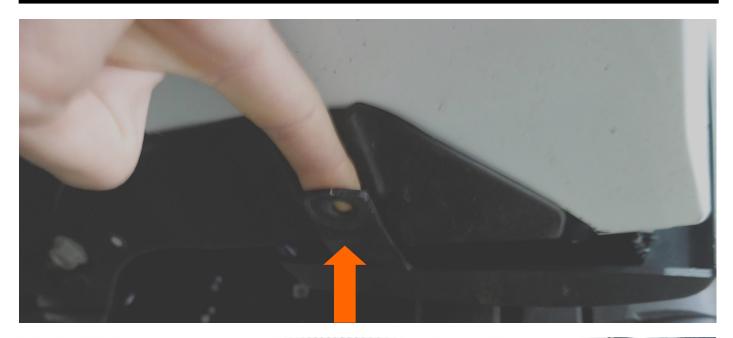




PUSH SIDE SKIRT FLUSH AGAINST ROCKER PANEL AND SLOWLY PULL TAPE BACKING WHILE HOLDING SIDE SKIRT IN PLACE -DOUBLE CHECK FOR ANY GAPS BEFORE PULLING TAPE-

TOOLS...NONE

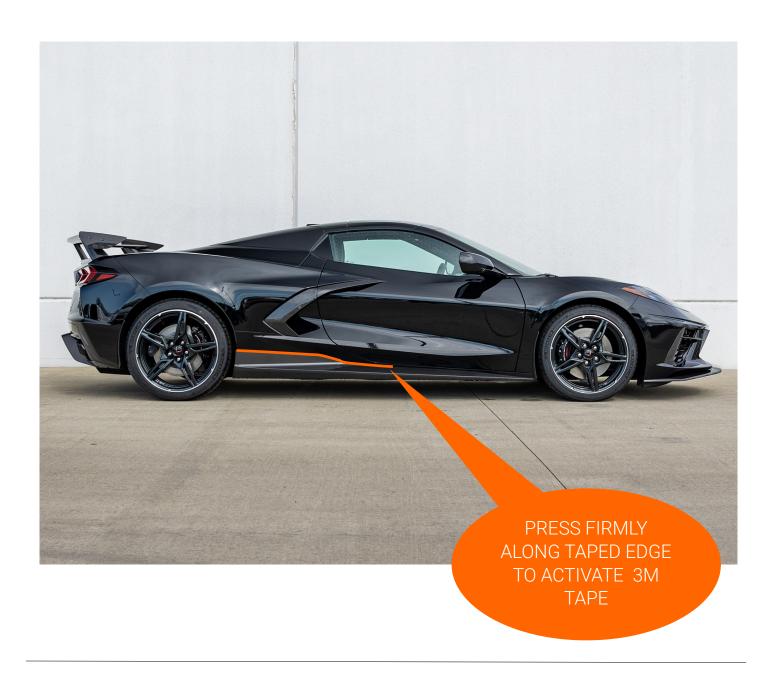

FUNCTION | FIT | FINISH





© @rsctuning

sales@rsctuning.com



470 Schrock Rd Suite D
Columbus, OH 43229

