



JW off road is not responsible for any damages or misuse of our mounts. Or user error.

BEFORE CONTINUING BE SURE TO KNOW

We are not liable for any damages this may cause.

Tools needed:

4mm Allen key, Phillips screwdriver

Includes Hardware.

Step 1

Remove 3rd row upper handles.

Pop off bolt covers to expose both phillip screws and unbolt.

(SAVE FACTORY BOLTS SINCE THE WILL BE RE USED)



Step 2

Build you Cubby.

Lay your 36" x20" panel down and place the 1" rails across the longer side and place and stand the 2" rails across the shorter end.

ADD ALL T NUTS THROUGH THE EXTRUSION RAIL NEEDED TO MOUNT ALONG THOSE SECTIONS.



ADD THE 4 CORNERS to combine the rails together.

“make sure you square out all ends, leave a bit loose”








Step 3

Once you have the corners added, T nuts placed, Start adding the allen through bolts and washers.

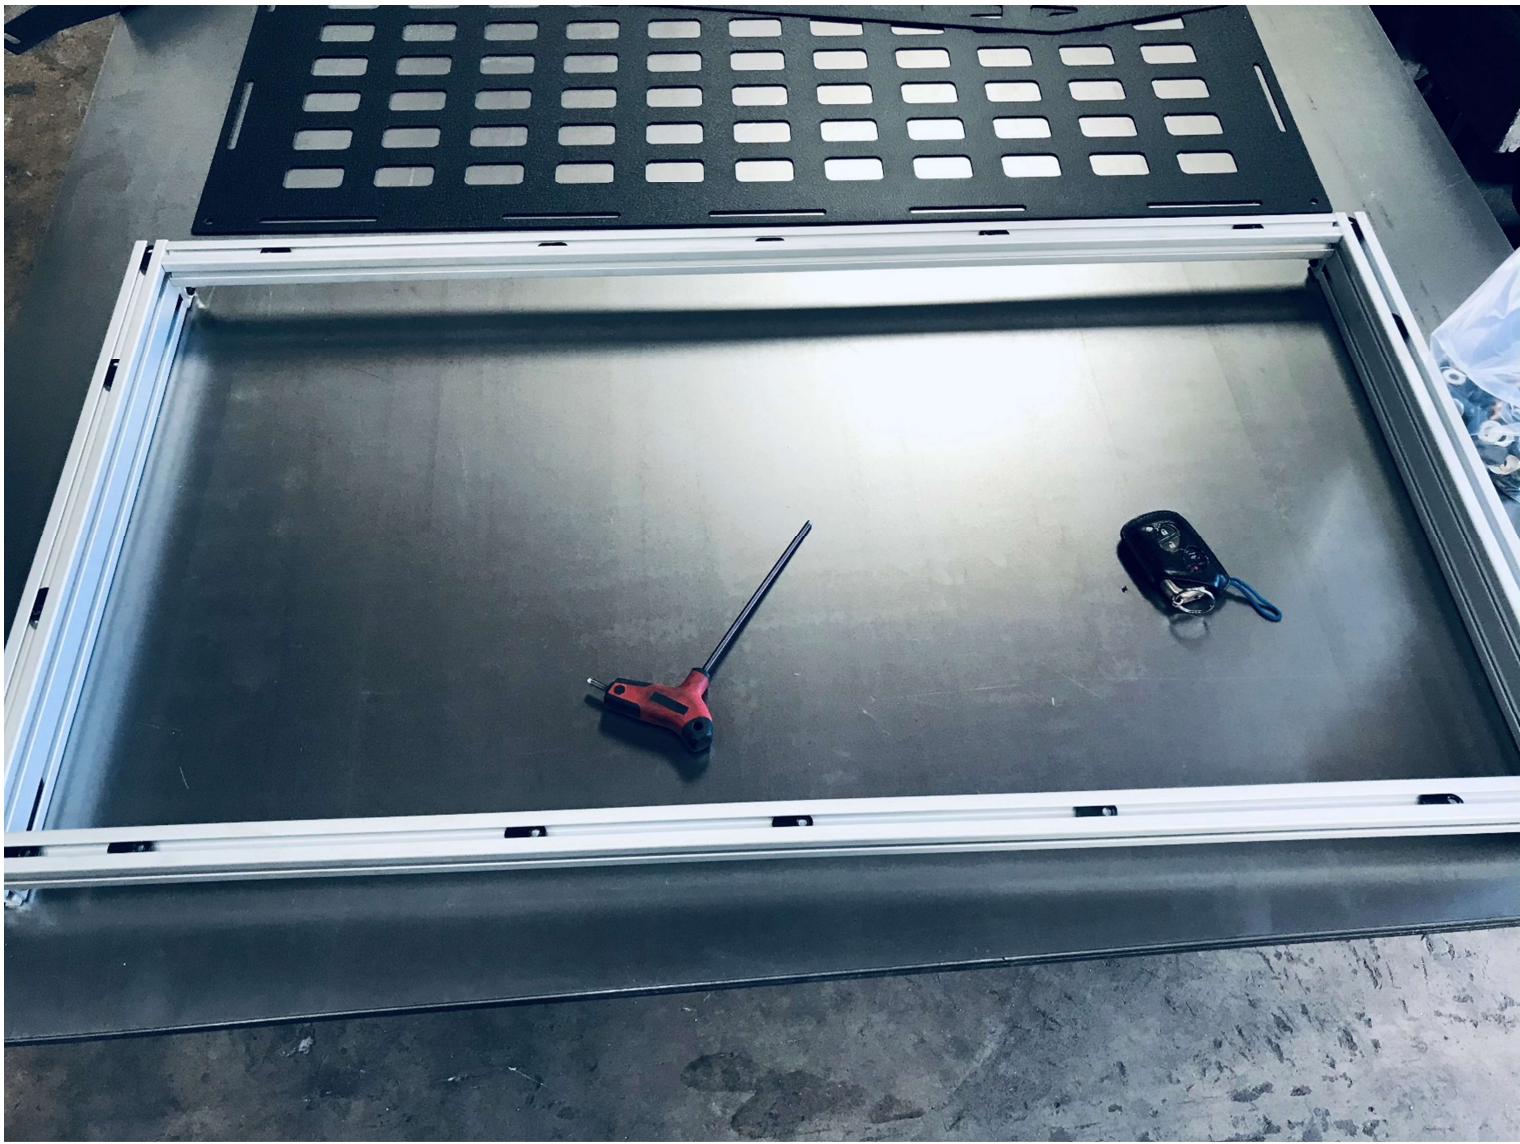





Step 4


**ADD THE BACK PLATE AND FRONT
FACE CORNERS**





Once you have your cubby built, mount up the side hangers that will be bolting up to where your factory handles sit.



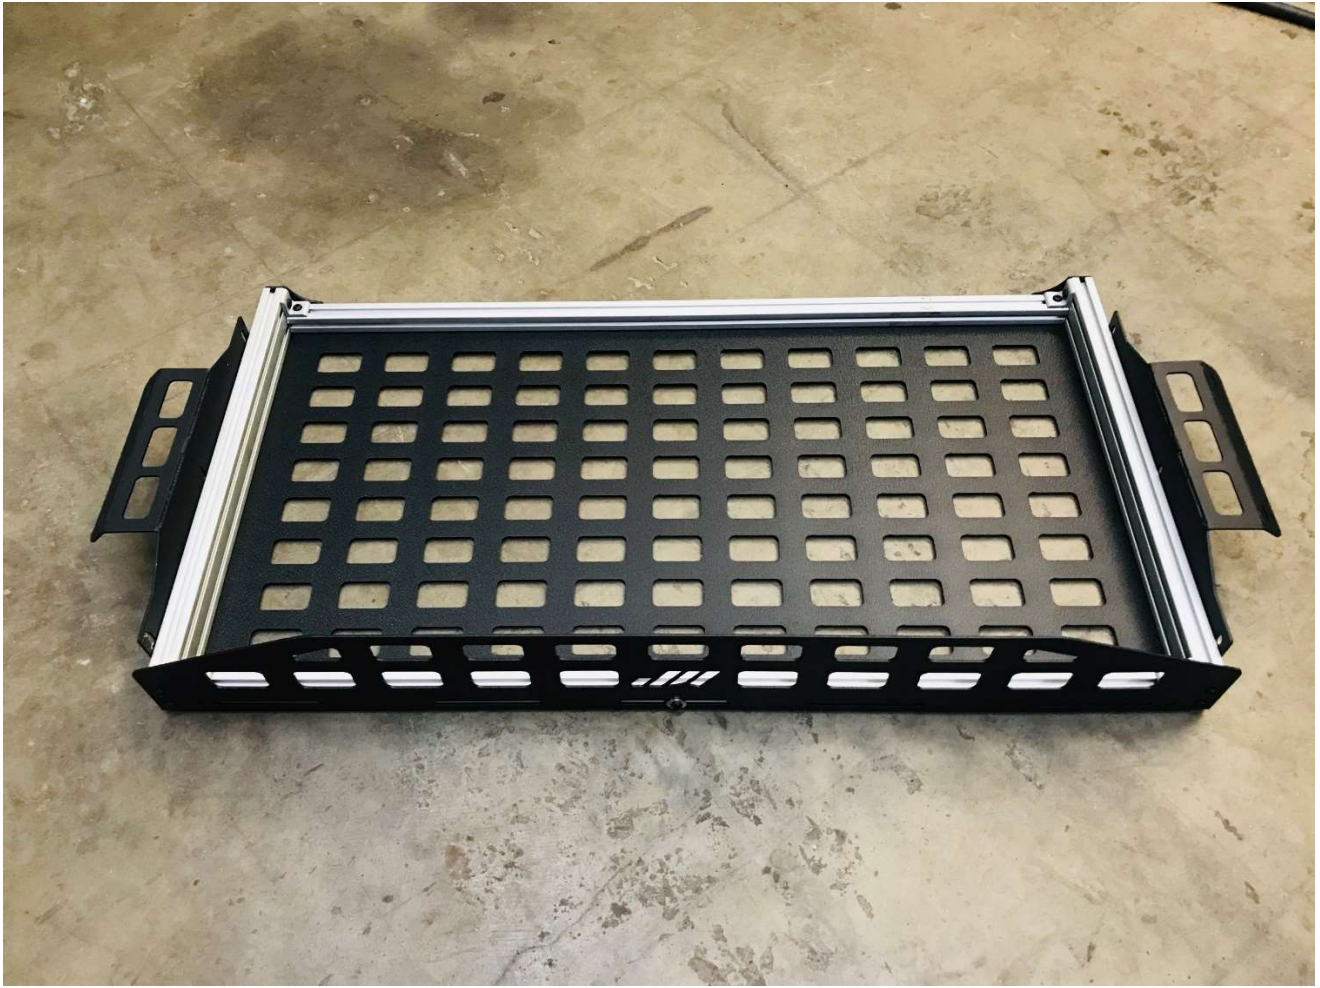

**ONCE YOU HAVE YOUR CUBBY PUT
TOGETHER
TIGHTEN ALLTHE BOLTS AND INSTALL.**



WARRANTY

Under normal and reasonable use, Mounts produced by JW Off Road are warranted against STRUCTURAL DEFECT in material as long as the ORIGINAL owner/purchaser owns the mount with receipt. Some areas on the mount may include blemishes as it should be, as it is made 100% in house and working fab shop.

This warranty is limited to the **repair or replacement** of mounts, at the discretion of JW Off Road, for any mounts determined to be defective and covered under warranty. Installation costs, transportation costs or loss of use is not covered under this warranty. Accessories determined to be defective in workmanship or materials while the mount is under warranty will be repaired or replaced. Mounts will not be replaced due to defects in accessories.