

GX 460
INNER DOOR SKIN SUPPORT
2010-CURRENT GX460





TOOLS NEEDED

- 13MM SOCKETS OR WRENCHES (
- 10MM SOCKET
- SKINNY ARMS ☒☒



OUR INNER DOOR SKIN SUPPORT IS TO REINFORCE THE TIRE CARRIER FOR ROUGH TERRAIN DRIVING.



HARDWARE INCLUDED

- GX460 UPPER INNER DOOR SKIN SUPPORT BRACES.
- HARDWARE KIT FOR BRACE

STEP 1

AT THIS POINT YOU SHOULD HAVE YOUR HOLES ALREADY DRILLED FOR THE CARRIER. IF NOT PLEASE GO BACK AND LOOK AT THE INSTRUCTIONS ON HOW TO DO SO.

TAKE THE UPPER INNER DOOR SKIN SUPPORT, AND PLACE IT INSIDE OF THE DOOR WITH THE 90 DEGREE SIDE FACING THE OUTSIDE OF THE DOOR.

PUT THE GRADE 8 BOLTS THROUGH THE HOLES THAT YOU DRILLED.



STEP 2


USING TWO OF THE 3/8TH ANGLED WASHERS, ONE GRADE 8 WASHER, AND ONE LOCK WASHER, SNUG THE WASHERS ONTO THE CARRIER.



STEP 3

REPEAT THE PROCESS ON THE OUTSIDE OF THE DOOR SKIN.

(NOTE THE RED ARROW REPRESENTS THE OUTSIDE OF THE DOOR SKIN)

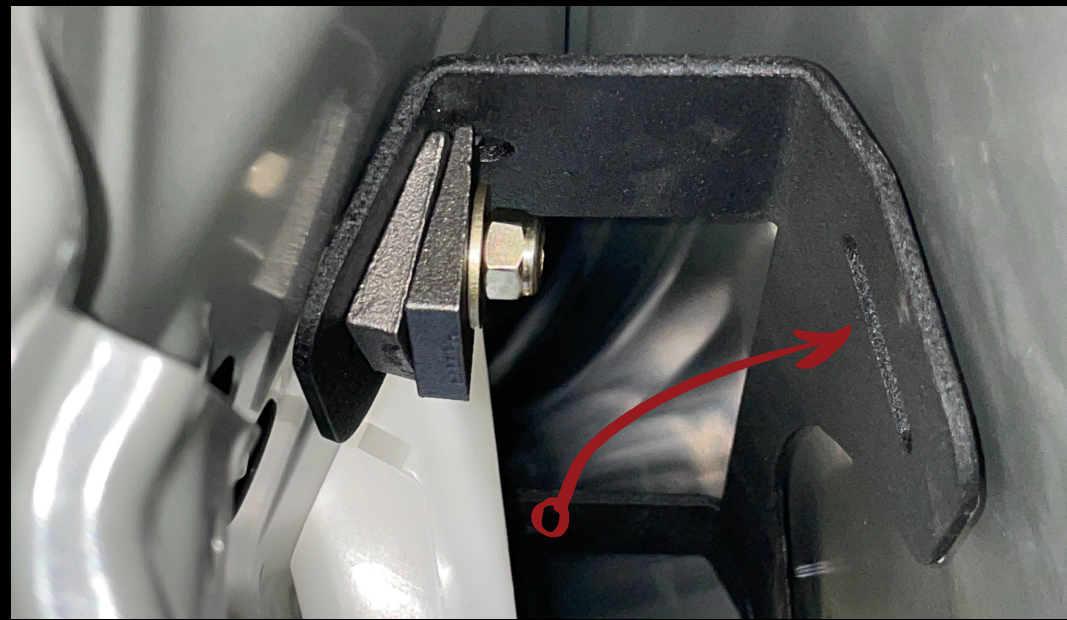

STEP 4

NOW THAT THE UPPER DOUBLE SKIN SUPPORT BRACKETS ARE IN PLACE, PLEASE CHECK AND HAND TIGHTEN ALL BOLTS.

NOT TIGHTENING THE BOLTS MIGHT CAUSE DAMAGE TO THE DOOR

IF ANY QUESTIONS PLEASE GIVE US A CALL @ 909-313-0819.

