JW OFFROAD

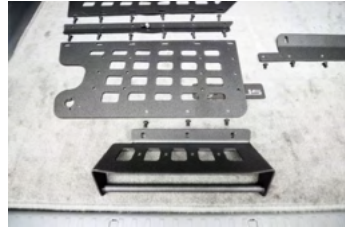## GX470 INTERIOR MOLLE PANEL

1) Get your 11mm wrench and 5mm allen wrench (fig 1)

2) Grab the upper panel, joiner plate, the lower panel and your hardware. (fig 2)
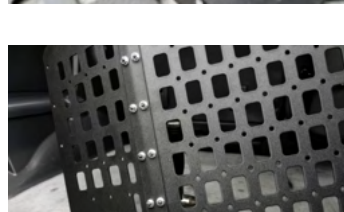
3) Hand tighten (keep loose) the 5mm allen bolts

4) Should look like figure 3

5) Bolt the hanger to the upper panel, dont tighten bolts all the way, the bracket should be able to slide a little bit so you can adjust accordingly when mounting. (fig 4)

6) Remove 3rd row set mounting lid, grind down, 3 points extruding from plastic tab so it can clear new radius rod.

7) Remove rear grab handle

8) Use OEM grab handle bolts to mount the hanger in the OEM grab handle position.

9) Mount the radius rod in the 3rd row mounting point. Once in place, screw into the molle panel. (fig 5)

10) Tighten all bolts

11) Replace 3rd row plastic cover (fig. 6)