

## GX470 ROCK SLIDER INSTRUCTIONS

### TOOLS NEEDED


12MM, 13MM, 19MM Socket and ratchet

### INCLUDED HARDWARE

Drivers side - 3 19mm bolts and washers, 7 13mm bolts

Passenger side - 5 19mm bolts and washers, 5 13mm bolts

#### 1) REMOVE OEM STEPS

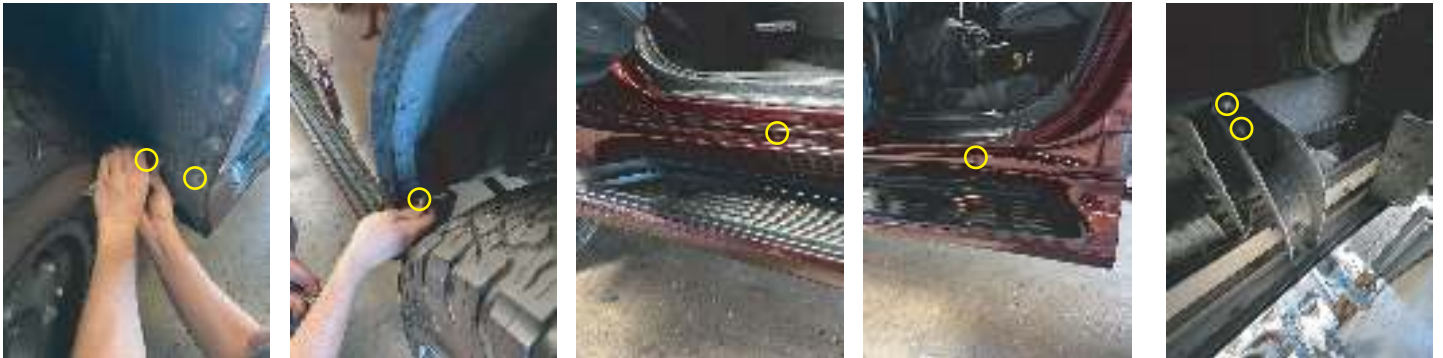

2) REMOVE KDSS SKID PLATE (SEE FIG 1) (FIG 2 SHOWS REMOVED PLATE)

3) CUT SKID PLATE (SEE FIG 3)



\*INSTALL SKILL LEVEL



2 OUT OF 5

### BEFORE CONTINUING, BE SURE TO KNOW

JW OFFROAD IS NOT RESPONSIBLE FOR ANY DAMAGES, MISUSE OF OUR MOUNTS, OR USER ERROR

## PASSENGER SIDE

REMOVE BRAKE LINE BOLT (FIG 1)

- LIFT SLIDER INTO PLACE
- NEED 5 19MM THROUGH BOLTS, WASHERS AND NUTS & 5 13MM BOLTS THREAD INTO FRAME
- SEE FIGURE 2, 3, & 4 TO SEE HOLES USED
- FIGURE 5 SHOWS BACK OF THE FRAME



BACK

FRONT



## DRIVERS SIDE

**FRONT**

THROUGH BOLT



4) LIFT SLIDERS INTO PLACE, BE CAREFUL OF KDSS LINES.

5) NEED 3 THROUGH BOLTS, WASHERS, NUTS AND 7 13MM BOLTS THAT WILL THREAD DIRECTLY INTO THE FRAME.



**\*\*PUT KDSS SKID  
PLATE BACK ON**