

ATTACHMENT OF CONDENSER AIR PLENUM


1. Separate the frame and plenum by removing the four (4) bolts.

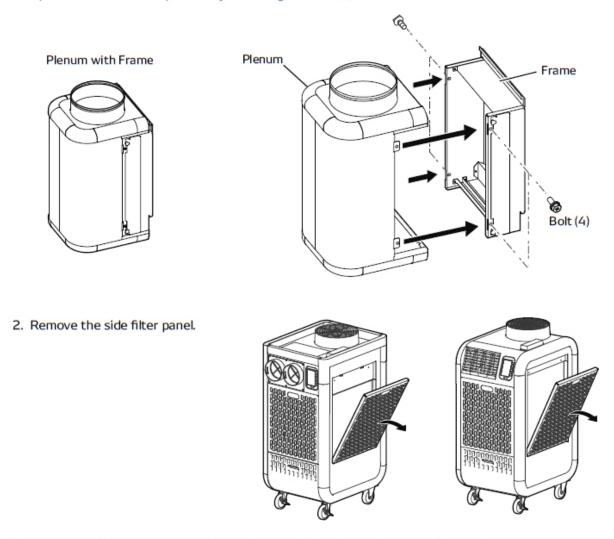


3. Attach the frame to the side of the unit by placing the tabs to the edge of the lower opening and secure the frame with the two (2) bolts supplied with the plenum.

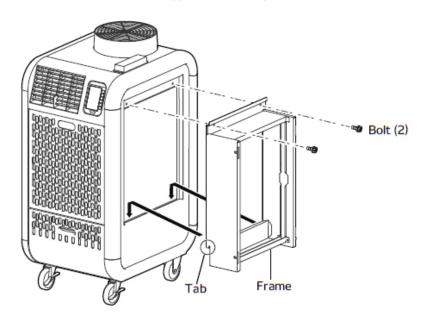


4. Insert the four (4) brackets of the plenum into the slots of the frame and secure the plenum to the frame with the four (4) bolts, which were removed in step 1 on page 3.

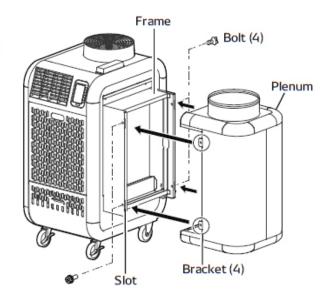


5. Remove the two (2) knob bolts and remove the plate from the plenum by lifting upward.

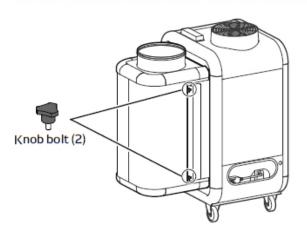

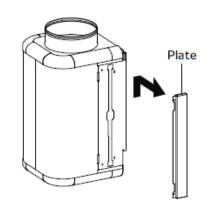

6. Insert the filter panel into the plenum as shown.

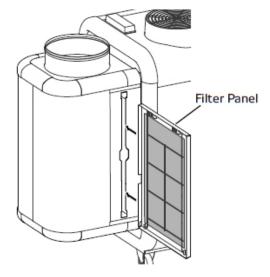

7. Reinstall the plate and secure it with the two (2) knob bolts.



Do not lean on the unit or move the unit when attaching the air plenum. This may cause injury or damage to the unit due to toppling.