


- |                  |                  |
|------------------|------------------|
| <b>A</b> = n. 2  | <b>G</b> = n. 2  |
| <b>B</b> = n. 1  | <b>H</b> = n. 1  |
| <b>C</b> = n. 1  | <b>I</b> = n. 4  |
| <b>D</b> = n. 14 | <b>L</b> = n. 8  |
| <b>E</b> = n. 1  | <b>M</b> = n. 4  |
| <b>F</b> = n. 1  | <b>N</b> = n. 16 |



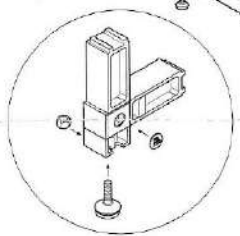

## ASSEMBLY

Insert the sides **A** in the base **B**.

Assemble the back **C**, fixing it to the sides **A** with relative plugs **D**.

Fit the top **E** at a distance of 1,5 cm from the rabbet to allow the door to be inserted.

Assemble the door **F** and lower the whole top **E** to the rabbet, fixing it with the relative plugs **D**.

Apply the door stops **G**, lock **H**, adjustable feet **I** and bolt cap **L**.

Fit the shelves **M** at the required height with the corresponding hooks **N**.



## MONTAGE

Die Seitenwände **A** in den Boden **B** einsetzen.

Die Rückwand montieren **C** und dazu mit den dafür vorgesehenen Stiften **D** an den Seitenwänden **A** befestigen.

Die Abdeckung **E** aufsetzen und einen Abstand von ca. 1,5 cm bis zum Anschlag lassen, damit die Tür eingesetzt werden kann.

Die Tür **F** montieren und die Abdeckung **E** bis zum Anschlag aufsetzen und mit den dafür vorgesehenen Stiften **D** befestigen.

Türanschläge **G**, Schloss **H**, höhenverstellbare Füße **I** und Schraubenabdeckungen **L** anbringen.

Die Einlegeböden **M** mit den entsprechenden Haken **N** auf der gewünschten Höhe einsetzen.