


Svelte

Installation Guide

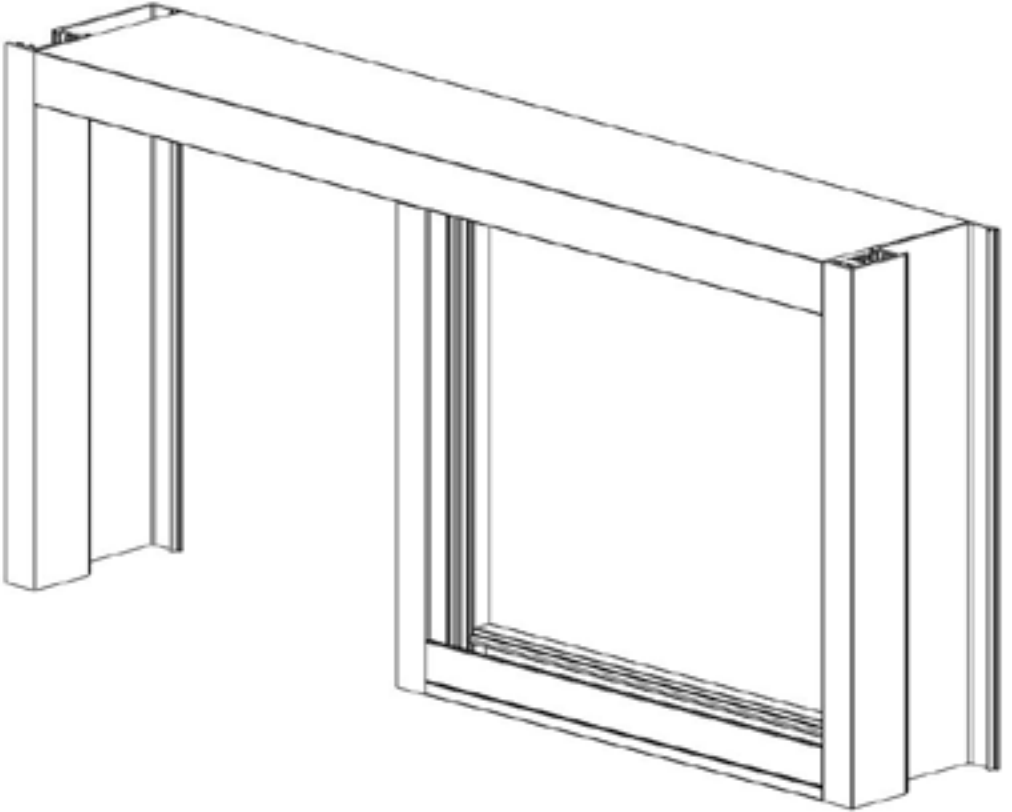


Important Installation Considerations

Please read all of the instructions before installation.


These instructions include the following:

Components.....	Page 3-4
Sliding Door Installation Instructions.....	Page 5-7
Hinge Door Installation Instructions.....	Page 8-9
Single Glaze Window Installation Instructions.....	Page 10
Double Glaze Window Installation Instructions.....	Page 11


Svelte® Installation Instructions

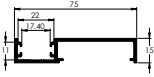

CI-0630 Window Frame

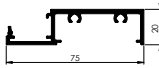

CI-0650 Window Sill



CI-0631 Back to Back Frame




CI-0634 Back to Back Frame Cap




CI-0633 Offset Glazing Frame




CI-0643 Offset Glazing Sill

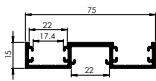


CI-0632 Double Glaze Window Frame

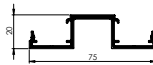


CI-0652 Double Glaze Window Sill

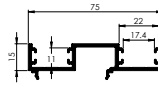

CI-0646 Double Frame Adaptor



CI-0644 Flat Filler




CI-0645 Offset Frame Adaptor




CI-0621 Frame Fixing Channel



CI-0651 Sill Bead

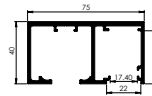


CI-0653 Offset Sliding Track (Top Roller)

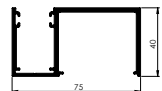


CI-0654 Window Frame (Suits Top Roller Track)


Svelte® Installation Instructions

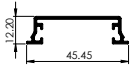

CI-0614 Door
Receiver
Adaptor

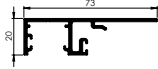


CI-0682
Bottom Roller
Door Guide

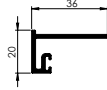


CI-0681
Bottom Roller
Door Guide




CI-0625
Sliding Door
Stile

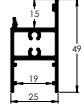

CI-0624
Sliding Door
Rail

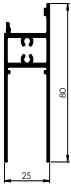


CI-0622
Sliding Door
Rail

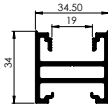

CI-0620 Hinge
Door Stile



CI-0623 Hinge
Door Rail

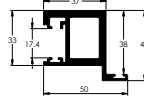

CI-0655 50mm
Door Jamb



CI-0660
Pocket Filler



CI-817513
Corner Bracket



CI-817715
Svelte Corner
Stake



CI-817716
Svelte Angle
Bracket




CI-817711
Svelte
Receiver
Channel Cap




CI-817415
Arctic Track
Opening Cap

Svelte Sliding Door® Installation Instructions

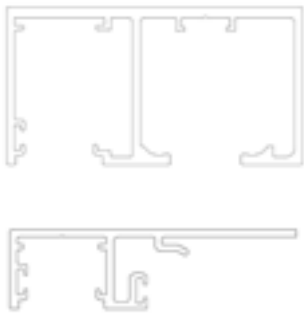


Step 1.

Fix CI-0682 Bottom Roller Door Guide or CI-0653 Offset Sliding Track (Top Roller to the Ceiling).

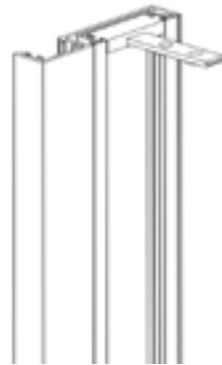

Step 2.

Clip CI-0614 Door Receiver Adaptor into CI-0630 Window Frame and slide CI-817711 Svelte Receiver Channel Cap into CI-0614 Door Receiver Adaptor.

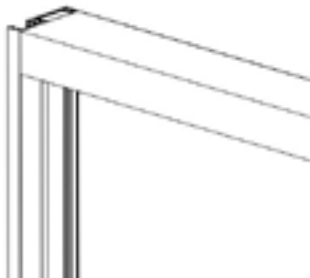

Step 3.


Position CI-0630 Window Frame against CI-0682 Bottom Roller Door Guide or CI-0653 Offset Sliding Track (Top Roller) and fix through CI-817711 Svelte Receiver Channel Cap.



Step 4.


Slide 2 x CI-817513 Svelte Corner Bracket into each end of a CI-0630 Window Frame.

Svelte Sliding Door® Installation Instructions

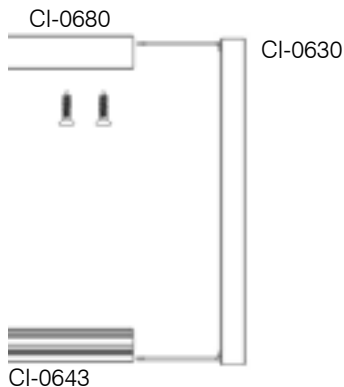


Step 5.

Position the CI-0630 Window Frame at the other end of the CI-0682 Bottom Roller Door Guide or CI-0653 Offset Sliding Track and CI-0643 Offset Glazing Sill. Fix to Ceiling and Floor.

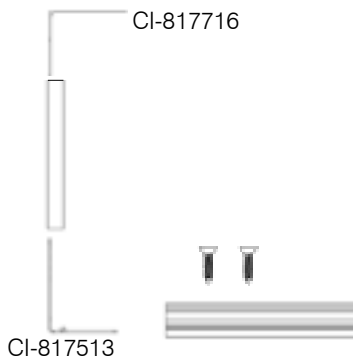

Step 6.

Slide CI-817513 Svelte Corner Bracket in CI-0633 Offset Glazing Frame. Slide CI-817716 Svelte Angle Bracket in the top. Slide into CI-0643 Offset Glazing Sill and fix into the floor.

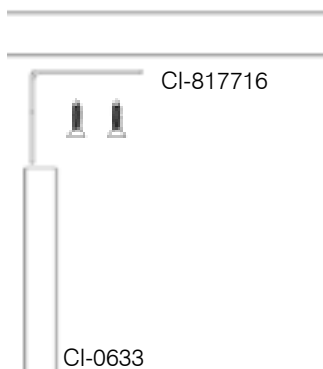

Step 7.

Fix through CI-817716 Svelte Angle Bracket into the ceiling.



Step 8.

If using Position the CI-0682 Bottom Roller Door Guide attach the CI-0681 Bottom Roller Door Guide and fix.


Svelte Sliding Door® Installation Instructions



Step 9.


Attach CI-817415 Arctic Track Opening Cap into the end of the track and fix.

Svelte Hinge Door® Installation Instructions

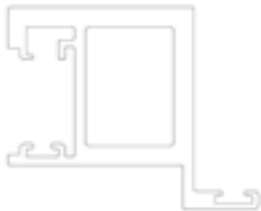


Step 1.

Using the Vertical CI-0655 50mm Door Jamb, mitre the top corners. Using the top horizontal CI-0655 50mm Door Jamb Mitre each end and connect to verticals.

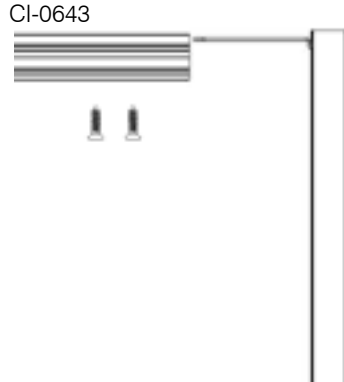


Step 2.

Adding a Hinge door next to a side light can be achieved by attaching CI-0643 Offset Glazing Sill onto the top bracket and fix into the Ceiling.

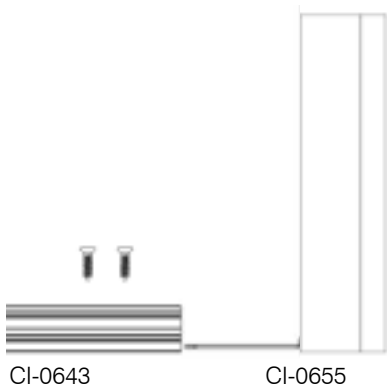

Step 3.


Position 2 x Svelte Corner Brackets into a CI-0655 50mm Door Jamb. Slide the bottom CI-0643 Offset Glazing Sill onto the bracket and fix into the floor.

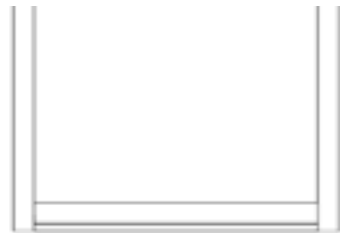

Step 4.

Glaze the windows and clip in CI-0651 Sill Beads top and bottom.

Svelte Single Glaze Window® Installation Instructions

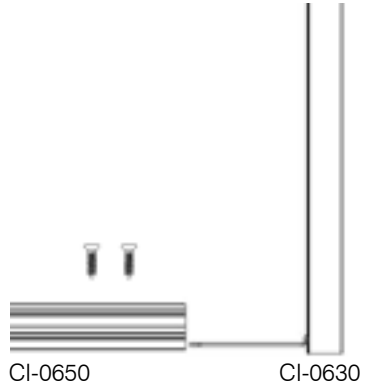


Step 1.

Fix CI-0650 Window Sill to the flooring in the correct position.


Step 2.

Position 2 x Svelte Corner Brackets into a CI-0630 Window Frame. 1 for the top and 1 for the bottom, slide the bottom CI-0650 Window Sill onto the bracket and fix into the floor.

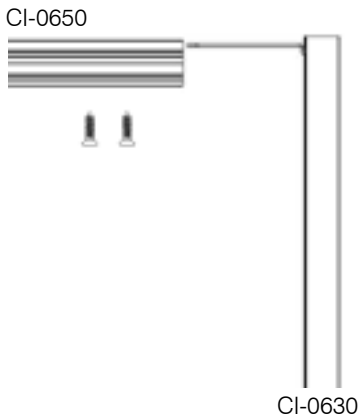

Step 3.


Slide the Top CI-0650 Window Sill onto the top bracket and fix into the Ceiling. Repeat this step for the other side of the window.

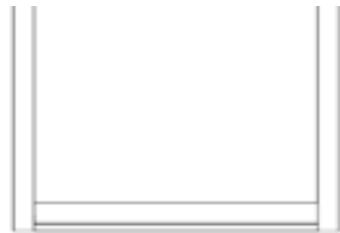

Step 4.

Glaze the windows and clip in CI-0651 Sill Beads top and bottom.

Svelte Double Glaze Window® Installation Instructions


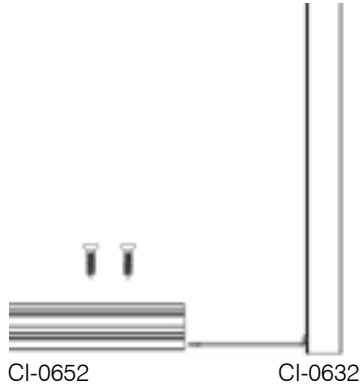


Step 1.

Fix CI-0652 Double Glazing Window Sill to the flooring in the correct position.

Step 2.

Position 4 x Svelte Corner Bracket into a CI-0632 Double Glazing Window Frame. 2 for the top and 2 for the bottom, slide the bottom CI-0652 Double Glazing Window Sill onto the bracket and fix into the floor.

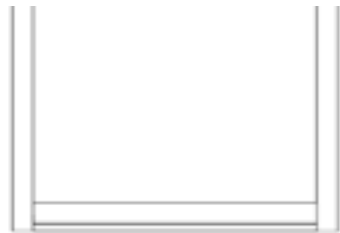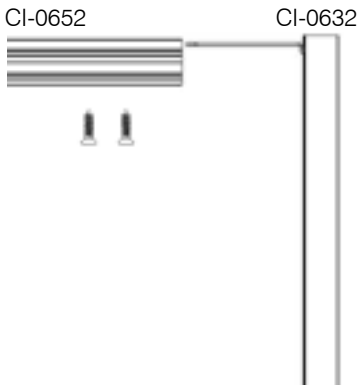

Step 3.

Slide the Top CI-0652 Double Glazing Window Sill onto the top brackets and fix into the Ceiling.
Repeat this step for the other side of the window.

Step 4.

Glaze the windows and clip in CI-0651 Sill Beads top and bottom.

VIC

15 Corporate Place
Broadmeadows, VIC, 3047
T: 03 9355 0700

sales@criterionindustries.com.au

NSW

95 Victoria Street
Smithfield, NSW, 2164
T: 02 9355 0700

sales.nsw@criterionindustries.com.au

WA

58 Tacoma Circuit
Canning Vale WA 6155
T: 08 9355 0700

sales.wa@criterionindustries.com.au

Technical Specifications:

- Cycle Tested Roller

Ensure the item has been installed by a
licensed and registered builder/installer