
















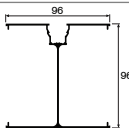


# **Multiglaze Suites**

**Installation  
Instructions**




# Contents

SECTION	PAGE
<b>Section Profiles</b>	
Multiglaze 80	4
Multiglaze 90	5
<b>Installation Instructions</b>	
Door Frame	7
Window Frame	8

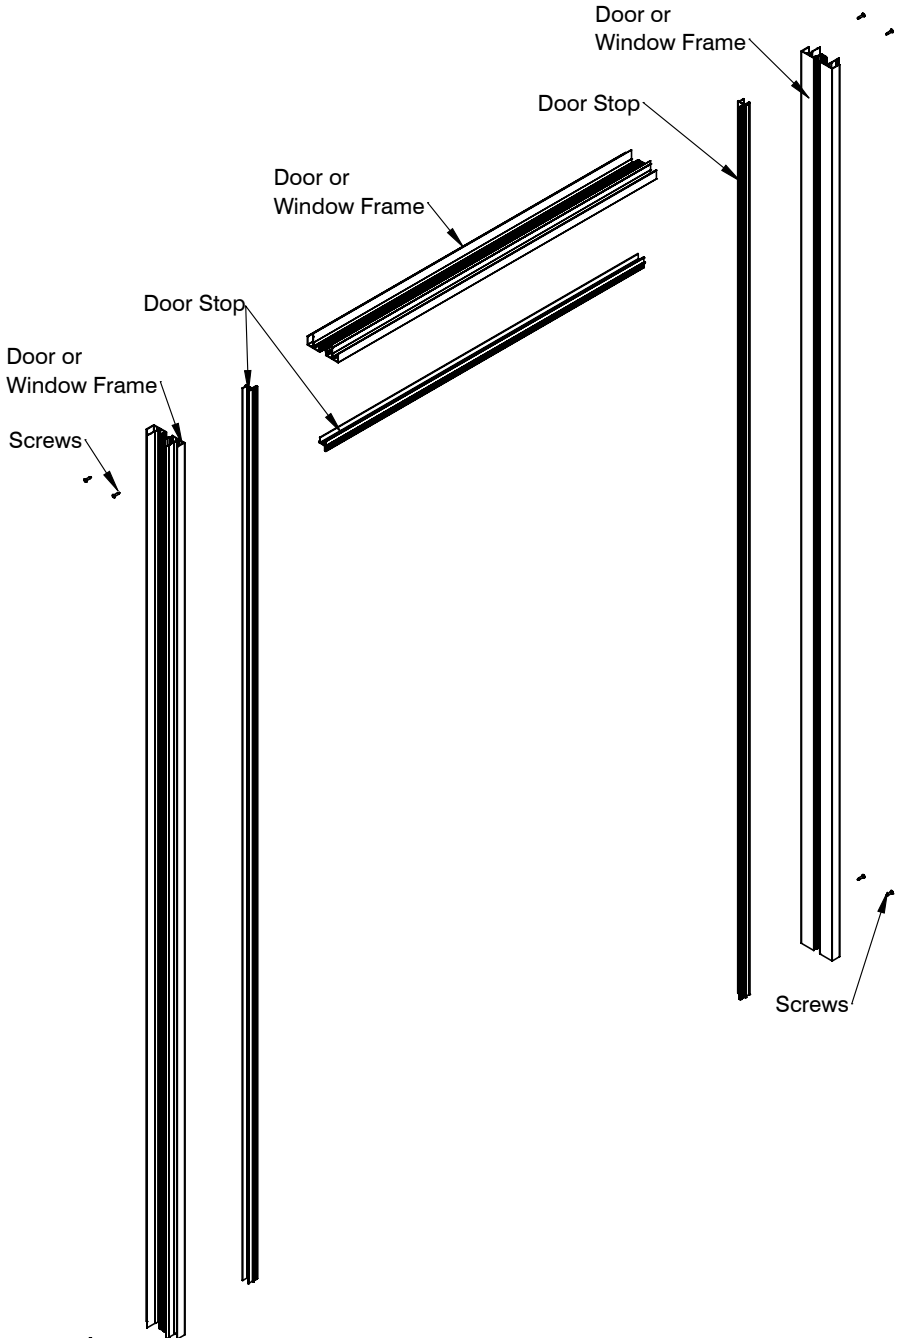
SECTION IMAGE	DESCRIPTION
	<b>CI-1110 Ceiling Channel 5mm Shadowline</b>
	<b>CI-1111 Ceiling Channel 10mm Shadowline</b>
	<b>CI-1120 Door Frame</b>
	<b>CI-1130 Window Frame</b>
	<b>CI-1150 Window Sill</b>
	<b>CI-1151 Sill Bead</b>
	<b>CI-1160 Pocket Filler</b>
	<b>CI-1163 Door Stop</b>
	<b>CI-2163 Door Stop</b>

SECTION IMAGE	DESCRIPTION
	<b>CI-2110 Ceiling Channel 5mm Shadowline</b>
	<b>CI-2111 Ceiling Channel 10mm Shadowline</b>
	<b>CI-2120 Door Frame</b>
	<b>CI-2130 Window Frame</b>
	<b>CI-2150 Window Sill</b>
	<b>CI-2151 Sill Bead</b>
	<b>CI-2178 2/3 Way Corner Post</b>
	<b>CI-2140 Post Adaptor</b>
	<b>CI-3144 Flat Filler</b>

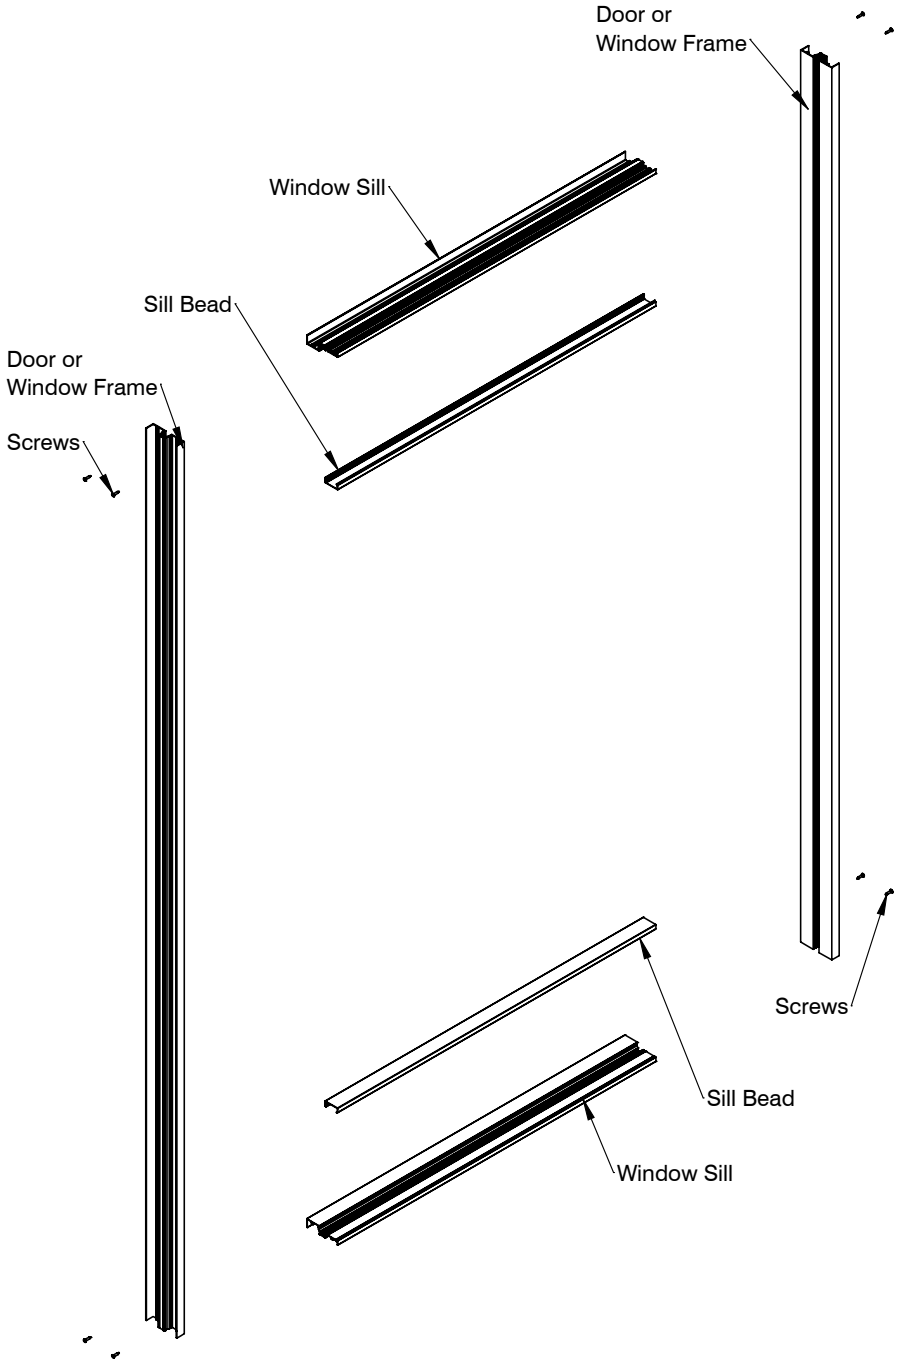
# Multigaze 90

SECTION IMAGE	DESCRIPTION
	<b>CI-1160 Pocket Filler</b>
	<b>CI-2161 Door Stop</b>
	<b>CI-2162 Door Stop</b>
	<b>CI-2163 Door Stop</b>

# Door Frame



# Window Frame





**VIC**

23 Scanlon Drive  
Epping, VIC, 3076  
T: 03 9355 0700

[sales@criterionindustries.com.au](mailto:sales@criterionindustries.com.au)

**NSW**

95 Victoria Street  
Smithfield, NSW, 2164  
T: 02 9355 0700

[sales.nsw@criterionindustries.com.au](mailto:sales.nsw@criterionindustries.com.au)

**WA**

58 Tacoma Circuit  
Canning Vale WA 6155  
T: 08 9355 0700

[sales.wa@criterionindustries.com.au](mailto:sales.wa@criterionindustries.com.au)

**QLD**

22 Holt Street  
Eagle Farm QLD 4009  
T: 07 3193 8990

[sales.qld@criterionindustries.com.au](mailto:sales.qld@criterionindustries.com.au)