



ground mount INSTRUCTIONS

Kit Includes:

(2) Anchors

(2) Bolts

(2) Steel Washers

(2) Silicon Washers

(2) Guide Rods

(1) Driving Cap



Tools Required:




Instructional Video:




Installation:


- 1) Make sure ground is level where the Boxx will be placed. Torquing the Boxx when mounting can cause alignment issues.
- 2) Remove two (2) of the rubber feet from the bottom of the Boxx. Remove diagonally opposite locations.

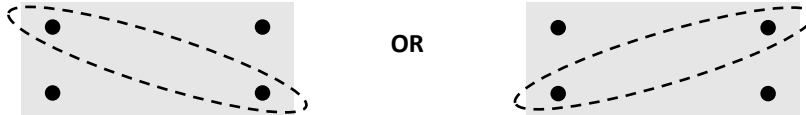

- 3) Insert the GUIDE RODS through the anchoring points. This marks where you will need to drive your ground anchors.
- 4) Lift the Boxx out of the way leaving the GUIDE RODS in place.
- 5) One at a time remove the GUIDE RODS and drive the ANCHORS into place, even with the leveled surface. **Be sure to use the DRIVING CAP,** so the top of the ANCHOR is not damaged.
- 6) Once both ANCHORS are driven into place, remove the DRIVING CAP and place the GUIDE RODS back into the top of the ANCHORS.
- 7) Slide the SILICON WASHERS onto the GUIDE RODS.

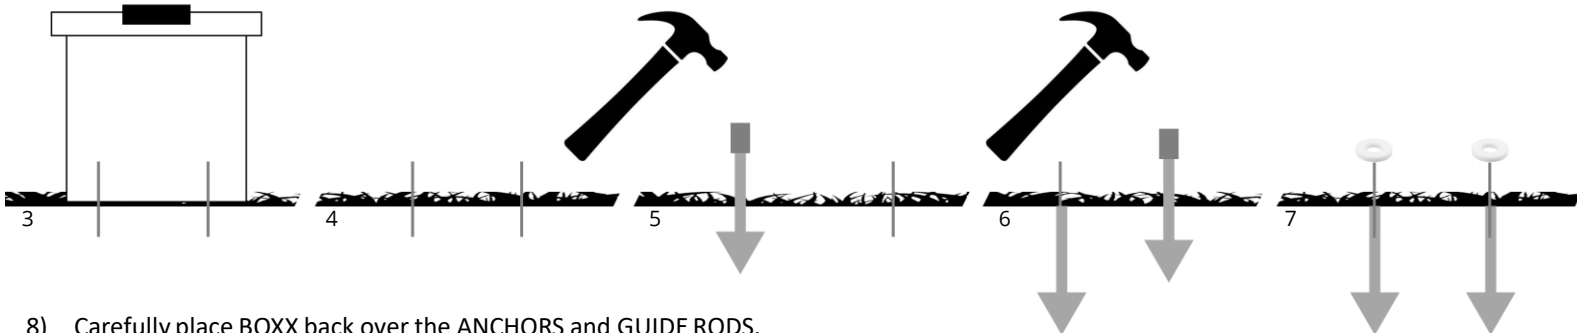

- 8) Carefully place BOXX back over the ANCHORS and GUIDE RODS.
- 9a) Remove one GUIDE ROD and place the WASHER then BOLT. (9b) Repeat for second GROUND ANCHOR.
- 10) Tighten BOLTS snugly into place.

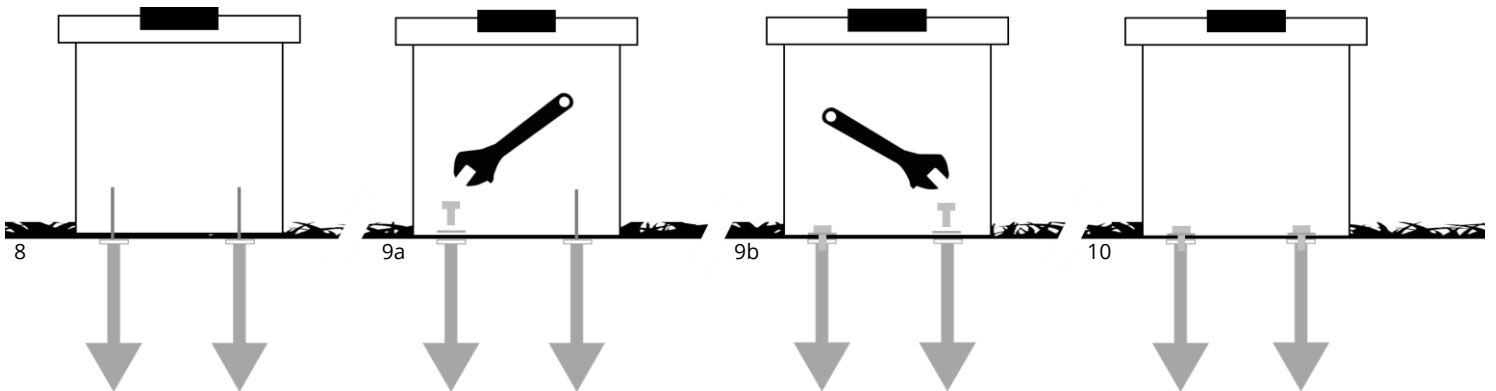

**After install if the Boxx is difficult to close, it might be necessary to check and make sure everything is level. Torquing the Boxx by overtightening can cause alignment issues.