










Single Wheelie Bin Store


KCT

Imported by:
KCT Direct
Glebe Farm, Old
London Road
Copdock
Ipswich, Suffolk
IP8 3JN
United Kingdom


Assembly Instructions

GWS101

-  A M3.5*16 24PCS+1
-  B M3.5*25 10PCS+1
-  C M3.5*20 1PCS+1
-  D  1PC
-  E  1PC
-  F  1PC

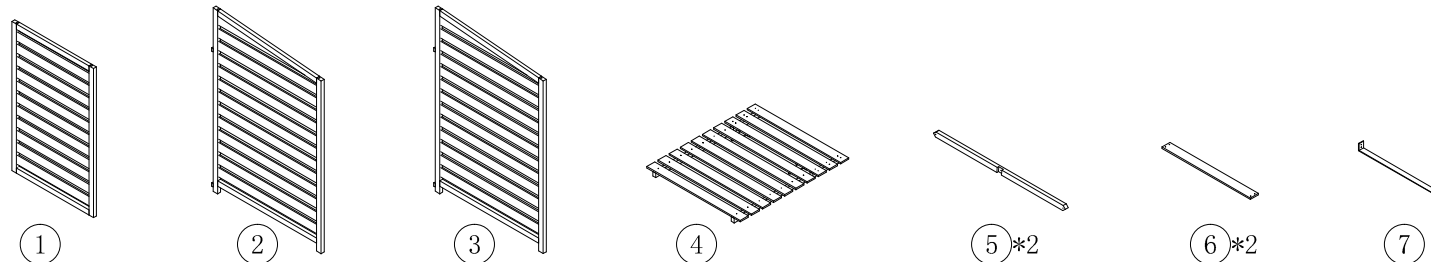


A M3.5*16 8PCS

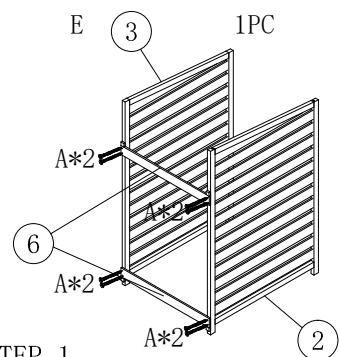


STEP 1

A M3.5*16 4PCS

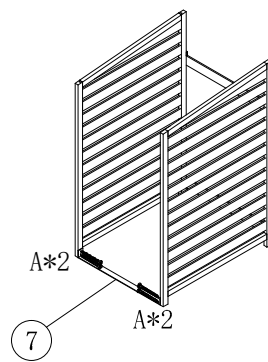


STEP 2

B M3.5*25 4PCS
C M3.5*20 1PCS

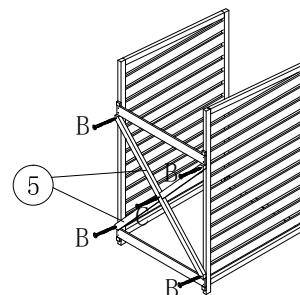




STEP 3

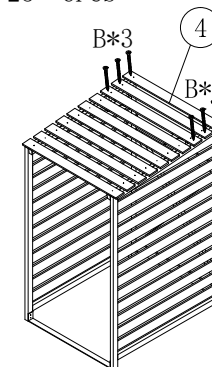B M3.5*25 6PCS




STEP 4

D  1PC
E  1PC

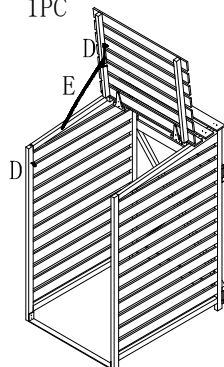


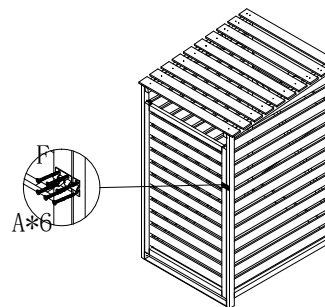
STEP 5

A M3.5*16 6PCS

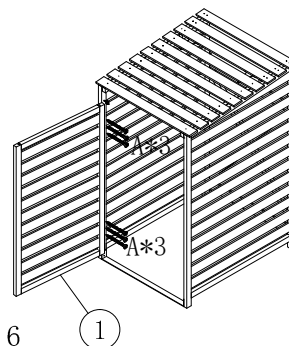

STEP 6

A M3.5*16 6PCS
F  1PC



STEP 7

STEP 8

