





Asti Run Box


KCT

Imported by:
KCT Direct
Glebe Farm, Old
London Road
Copdock
Ipswich, Suffolk
IP8 3JN
United Kingdom


Assembly Instructions

PPH101


-  A M6*50 8PCS+1
-  B M3.5*16 10PCS+1
-  C  1PC

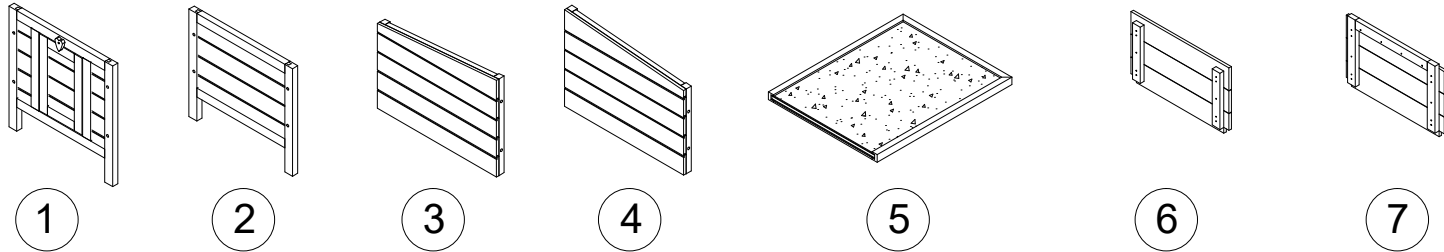

- A M6*50 8PCS

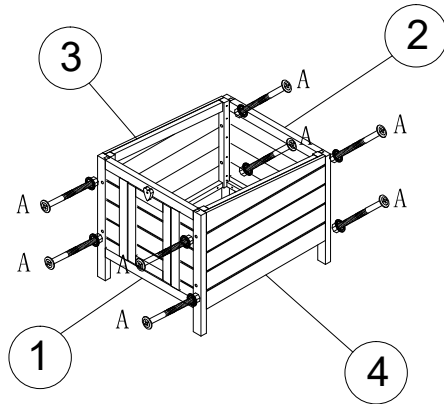


STEP 1

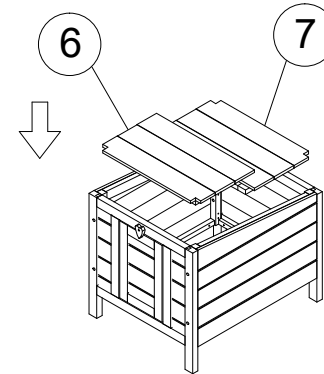

STEP 2


- B M3.5*16 6PCS

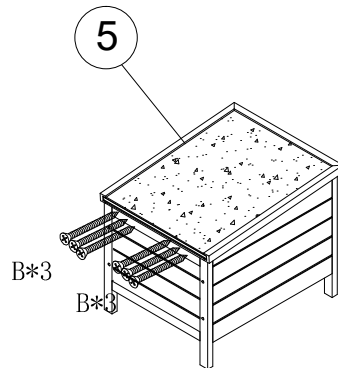

STEP 3

- B M3.5*16 4PCS

- C  1PC

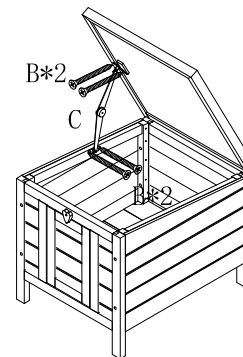

STEP 4