

## INSTALLING A FULLY ASSEMBLED BATTERY WATERING SYSTEM:


Always wear personal protective equipment (goggles, gloves, etc.) to protect yourself from sulfuric acid.  
Read instructions in entirety before beginning the installation.



Remove existing battery caps.



Ensure the electrolyte level is covering the plates in each cell. If not, add just enough water to cover the plates.

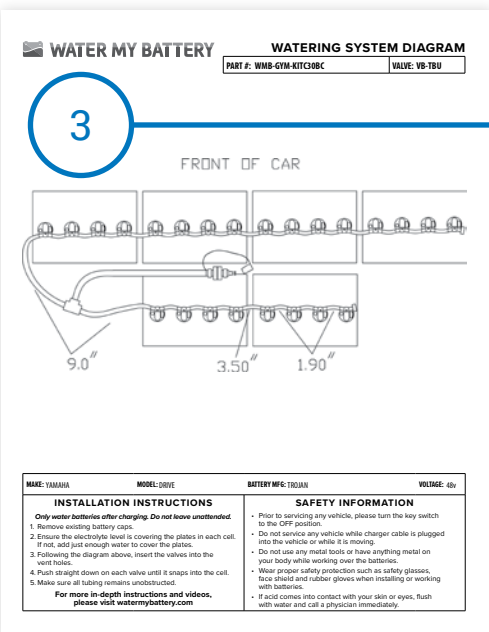

Following the diagram provided, insert the valves into the vent holes.

**Route the tubing underneath the cables.  
The tubing should never be pinched.**



Push straight down on each valve until it snaps into the cell.



Make sure all tubing remains unobstructed.