


CADILLAC ASSEMBLY INSTRUCTIONS

LEGACY[®]
PILATES APPARATUS



LEGACY[®]

PILATES APPARATUS

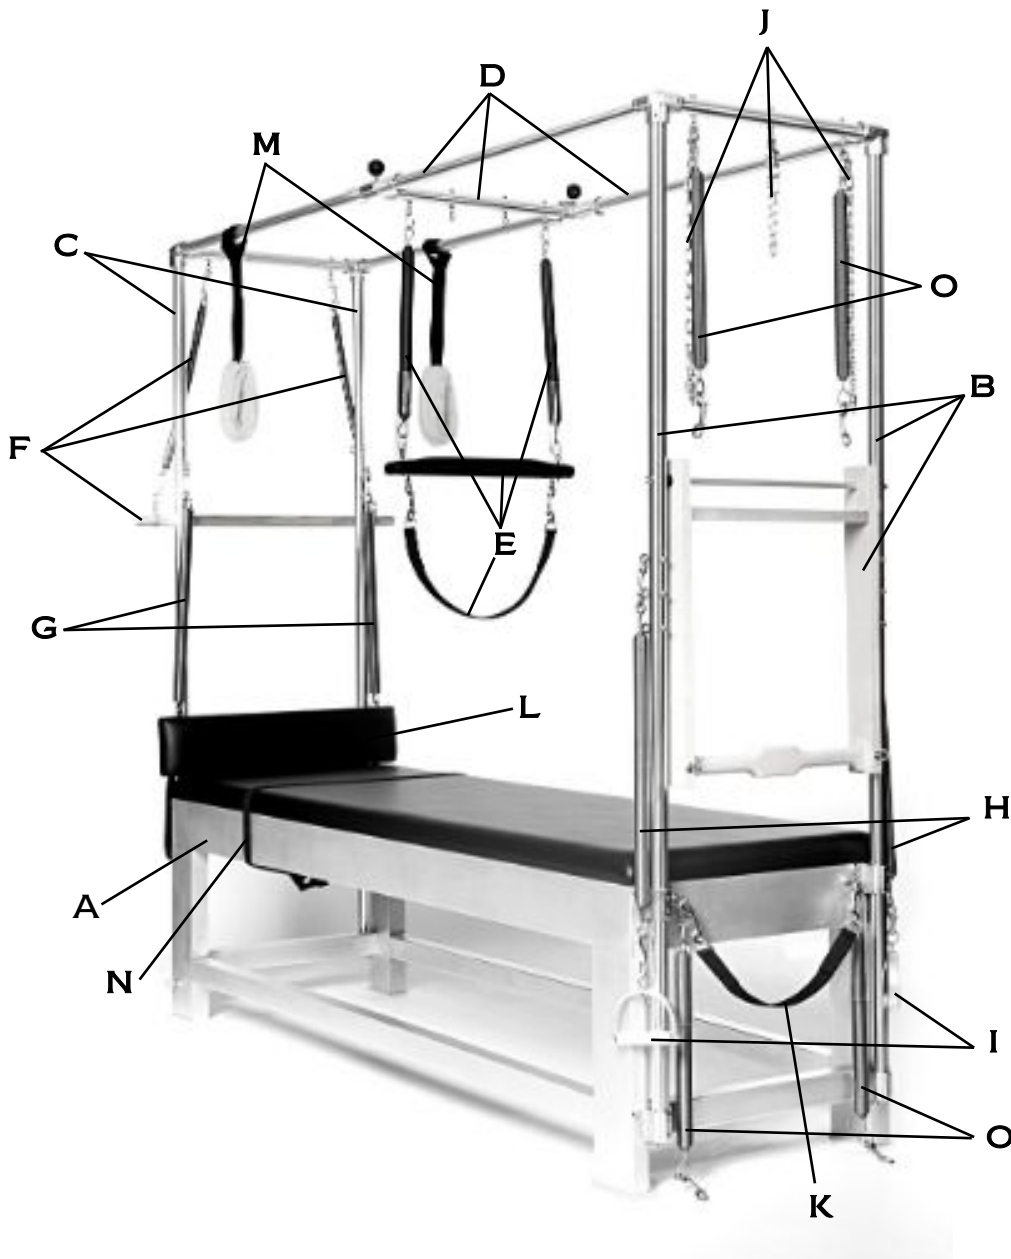

WHAT COMES IN THE BOX



- A- CADILLAC FRAME
- B- VERTICAL PIPES WITH PUSH THROUGH BAR
- C- VERTICAL PIPES
- D- CANOPY WITH TRAPEZE SLIDING BAR
- E- TRAPEZE ASSEMBLY (TRAPEZE BAR, TRAPEZE SPRINGS, TRAPEZE STRAP)
- F- ROLL BACK BAR ASSEMBLY
- G- LEG SPRINGS WITH LEG SPRINGS LOOPS
- H- ARM SPRINGS
- I- ALUMINUM WOODEN HANDLES
- J- SAFETY CHAINS
- K- FOOT STRAP
- L- KUNA BOARD
- M- HANGING FUZZIES
- N- BELLY STRAP
- O- PUSH THROUGH BAR SPRINGS (UP & DOWN)

STEP 1 - REMOVE CONTENTS FROM BOX


PLACE THE BOX LONG SIDE DOWN. USE THE SCISSORS CAREFULLY TO CUT TIES. TWO PACKED BUNDLES SHOULD BE IN THE BOX WITH EVERYTHING LISTED ON THE "WHAT COMES IN THE BOX"

STEP 2 - REMOVE THE TRAVELING PIPES

USE THE ALLEN KEY TO UNSCREW THE TRAVELING PIPES FROM THE CADILLAC FRAME (FIGURE A). NEXT, USE THE ALLEN KEY TO UNSCREW HEX SCREWS IN THE TRAVELING PIPES FROM THE CADILLAC FRAME (FIGURE B). BE SURE TO HOLD THE TRAVEL PIPES WHILE UNSCREWING, SO THEY DON'T FALL THROUGH. THEN REMOVE THE TRAVELING PIPES (FIGURE C).

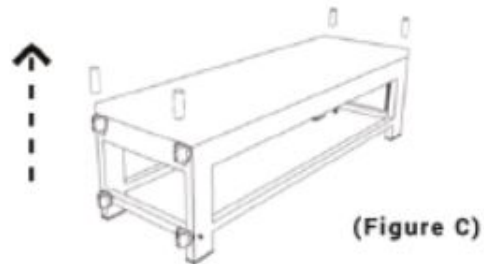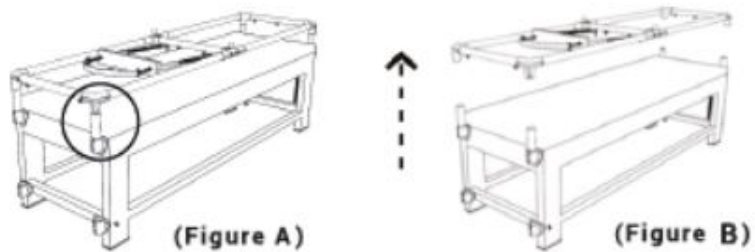

STEP 3 - PLACE THE VERTICAL PIPES AND CANOPY ON CADILLAC
LOCATE THE ALLEN KEY AND 4 VERTICAL PIPES. LOOSEN THE SCREWS AND INSERT THE 4 VERTICAL PIPES INTO THE FLANGES ON THE CADILLAC FRAME. TIGHTEN THE SCREWS UNTIL THE VERTICAL PIPES ARE FIRMLY SECURE. CAREFULLY PLACE THE CANOPY ON THE TOP OF THE 4 VERTICAL PIPES (SEE FIGURE D). CAREFULLY TIGHTEN THE SCREWS UNTIL THE CANOPY IS FIRMLY SECURE ON TOP OF THE VERTICAL PIPES (SEE FIGURE E).

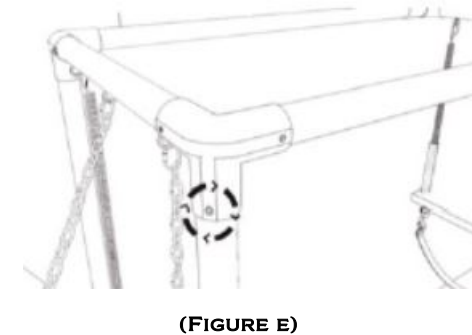

STEP 4 - PREP FOR USE

PRIOR TO USING, MAKE SURE ALL SPRINGS ARE IN PLACE TO YOUR LIKING AND ARE PROPERLY ATTACHED.