



ECO DROP STEP

PART #: TAC-EDS-T11

FITS: 2010-Up Toyota 4Runner

Exclude: 2010-2013 4Runner **SR5** Models
2010-Up 4Runner **Limited** Models
2020-2021 4Runner **Nightshade Edition** Models
2022-Up 4Runner **TRD Sport** Models



60-120 min



Cutting Not Required



Drilling Not Required

Torque & Tools


Fastener Size	Tightening Torque (ft-lbs)	Wrench Required	Allen Wrench Required		
<input type="checkbox"/> 6mm	<input type="checkbox"/> 7-8.5				
<input checked="" type="checkbox"/> 8mm	<input checked="" type="checkbox"/> 18-20			<input type="checkbox"/> 10mm	<input type="checkbox"/> 4mm
<input type="checkbox"/> 10mm	<input type="checkbox"/> 35-40			<input checked="" type="checkbox"/> 13mm	<input type="checkbox"/> 5mm
<input type="checkbox"/> 12mm	<input type="checkbox"/> 60-70			<input type="checkbox"/> 16mm	<input type="checkbox"/> 6mm
			<input type="checkbox"/> 8mm		

BEFORE INSTALLATION

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. ASSISTANCE IS RECOMMENDED.

Part List

Longer End is Front

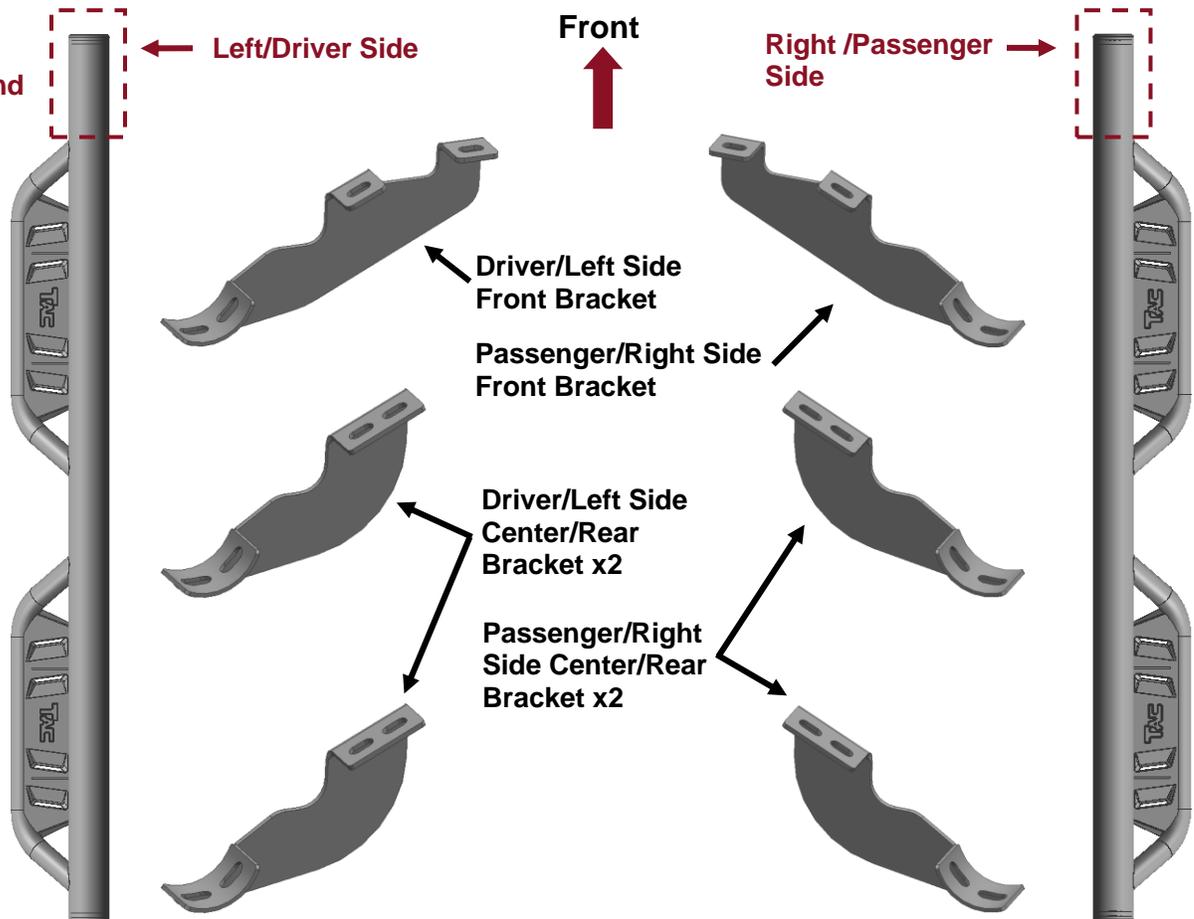



8mm x 30mm
Hex Bolt



8mm Flat Washer



8mm Lock Washer




8mm x 25mm
Combo Bolt

PLEASE NOTE THAT THE FOLLOWING PICTURES ARE BASED ON THE DRIVER SIDE INSTALLATION

STEP 1

Starting on the Driver/Left front of the vehicle, remove the plastic plugs, (or hex bolts), covering the threaded holes in the body panel, **(Fig 1)**.

FIG 1

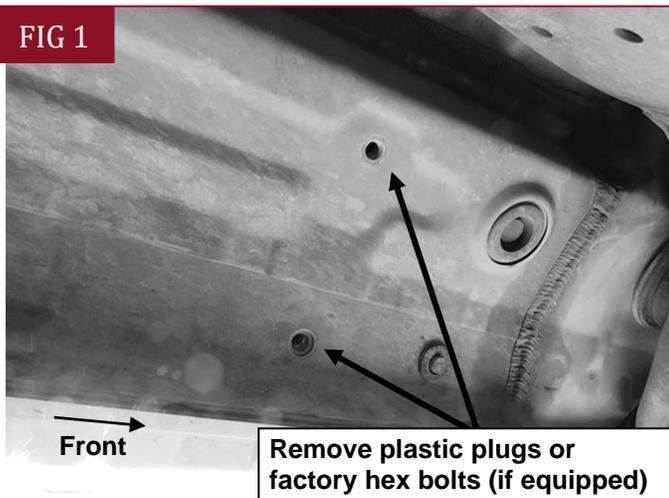


Remove plastic plugs or factory hex bolts (if equipped)

(Fig 1) Driver/Left front mounting location

STEP 2

Select the Driver/Left Front Mounting Bracket. Attach the Bracket to the front mounting location with (2) 8mm Hex Bolts, (2) 8mm Lock Washers and (2) 8mm Flat Washers, **(Fig 2)**. Do not tighten hardware at this time.

FIG 2

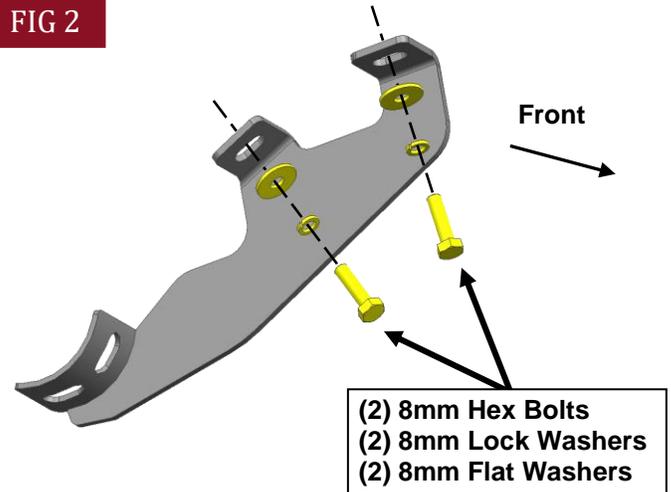


(Fig 2) Attach Driver/Left Front Mounting Bracket to the front mounting location

STEP 3


Move along the body panel to the center and rear location mounting location, **(Figs 3 & 4)**. Attach the Bracket to the center and rear mounting location with (2) 8mm Hex Bolts, (2) 8mm Lock Washers and (2) 8mm Flat Washers, **(Fig 5)**. Do not tighten hardware.

FIG 3

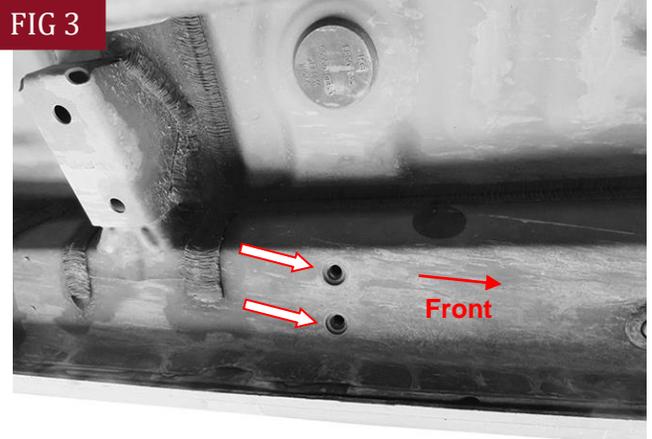


(Fig 3) Driver/Left center mounting location

FIG 4

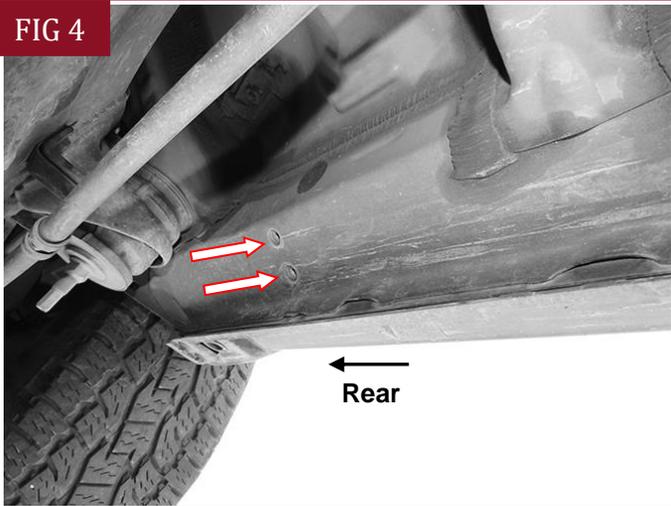

(Fig 4) Driver/Left rear mounting location

FIG 5

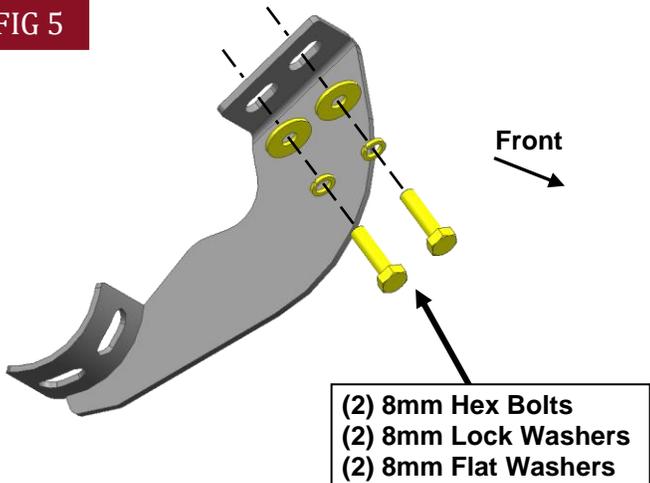


(Fig 5) Attach (1) Driver/Left Center/Rear Mounting Bracket to the center/rear location

STEP 4

Select the Driver/Left Running Board. **NOTE:** Please identify the Driver/Left Running Board according to the illustration on Part List. Carefully place Running Board on the brackets. **IMPORTANT:** Do not slide the Running Board front to back or damage to the finish may result. Attach Running Board to the (3) Mounting Brackets with (6) 8mm Combo Bolts, (Fig 6). Do not tighten hardware.

FIG 6

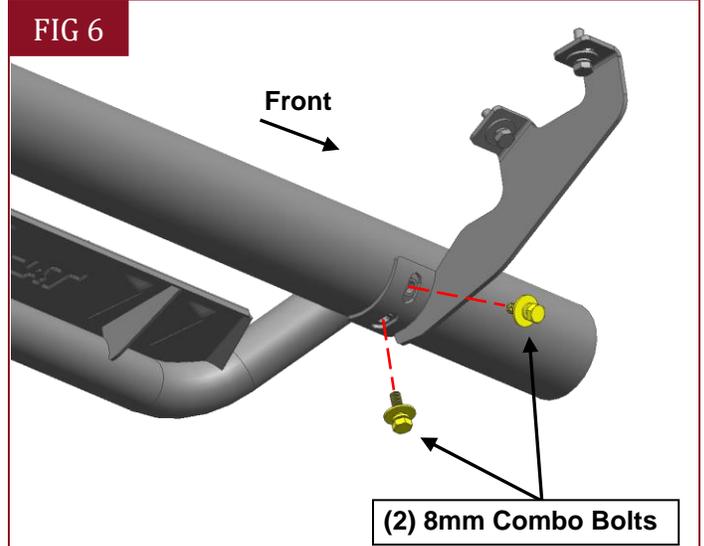

(Fig 6) Attach Driver/Left Running Board to the Mounting Brackets

STEP 5

Level and adjust the Running Board and fully tighten all hardware.

STEP 6

Repeat **Steps 1—5** to attach the Passenger/Right Running Board.

STEP 7

Do periodic inspections to the installation to make sure that all hardware is secure and tight.

Attention

To protect your investment, do not use any type of polish or wax that may contain abrasives that could damage the finish.

Mild soap may be used also to clean the Running Boards.