

## To install:


Determine how wide the door 'overlap' will be. The overlap is the distance between the leading edge of the door when fully open, and the trailing edge of the door when fully closed (1).


Mark centerline of overlap and place center of guide on line (2).

Predrill and install on floor so door will hang plumb.

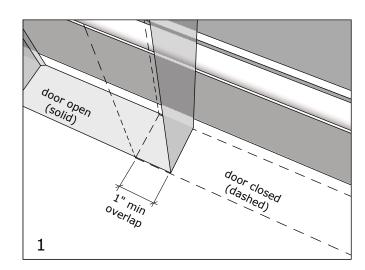

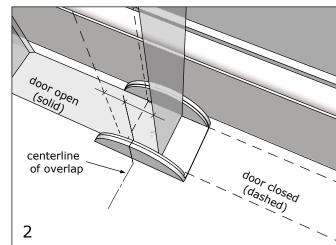

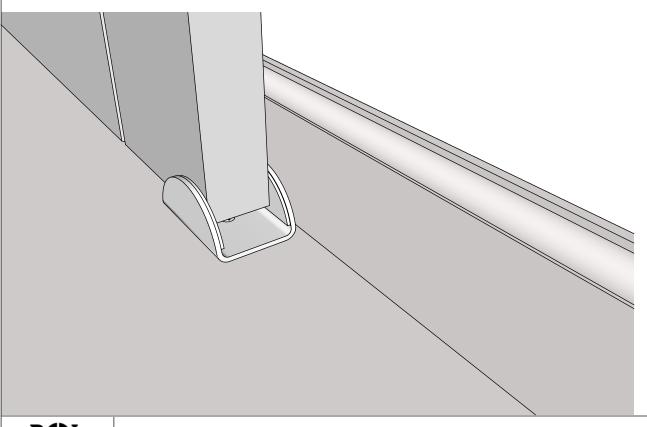

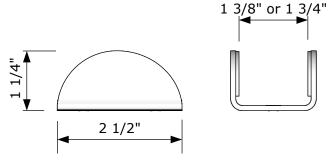

## **General Notes:**

For use when slotting the bottom of door for 'T' type guide is not desired or not possible.

Single mounting screw allows easy installation and alignment.

Smooth, high strength glide plastic guides door gently and quietly.



SA-CGUIDE Door Guide