


Elite 3D Design – Hornady Classic Press Primer Catcher Installation Guide

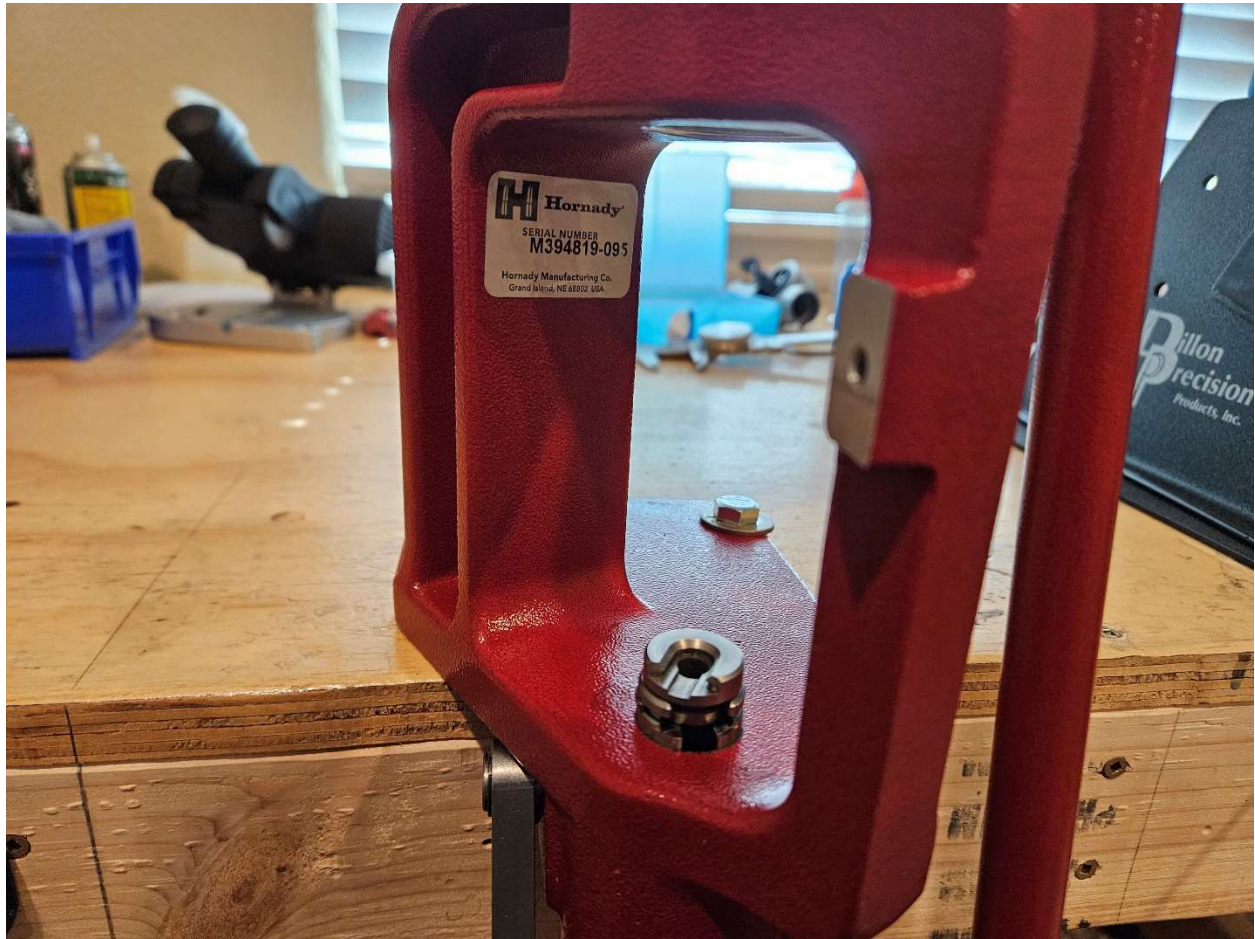

With the ram down install the primer catcher.



Attach the left arm on to the frame of the press and press to the right to snap the right arm onto the press.



The catcher is now installed.



Raise the ram fully and adjust the primer catcher up or down to match the hole with the primer ejection port. The catcher should be roughly 1-3/4" from the top frame.



Insert the wedge into the priming slot if you are not priming during operation.

For removal of the catcher, just reverse the instruction. The hose can be attached at any time.