


### **HOW TO HANG A CABINET**

## **GETTING STARTED**

- A. Follow the installation instructions and recommendations provided by the cabinet's manufacturer.
- B. With a pencil, mark on the wall where you want the top and center of the cabinet to be.


# STEP 1


- A. Place cabinet face down on a flat surface and mark center of cabinet with a pencil.
- B. Position the crossbar against the top of the cabinet.
- C. Align the center mark of the crossbar with the center of the cabinet.
- D. Align arms with the cabinet holes that will be used for the screws.

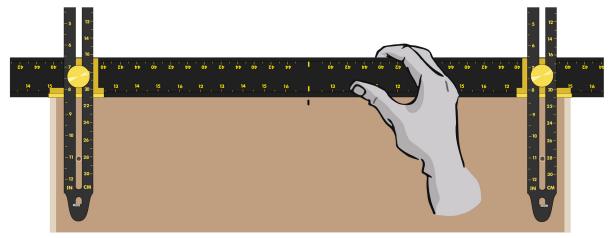

## STEP 2


- A. Slide arms up till hook aligns overtop the cabinet holes.
- B. Tighten knobs to secure arms in place.

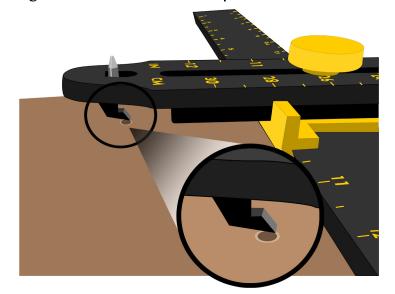

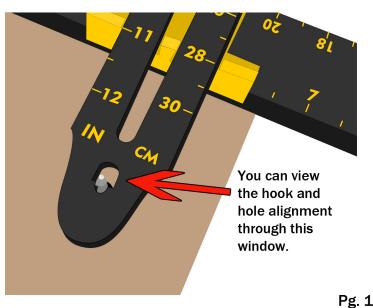


### STEP 3

- A. Remove Hang It Perfect from cabinet.
- B. Place Hang It Perfect with knobs against the wall and level facing you.
- C. Align the center of the level with the top-center mark you made on the wall from step one.
- D. Use the level to make sure the crossbar is straight.

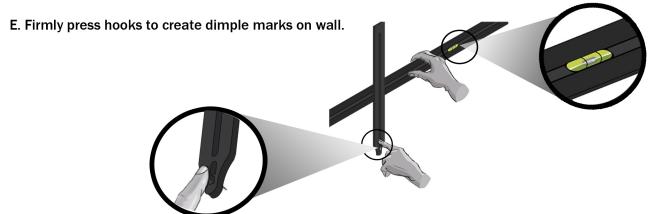

#### STEP 4

- A. Remove Hang It Perfect from wall.
- B. Follow the cabinet's manufacturer recommendations regarding the type of wall hardware to use. If needed, install wall anchors into the dimple marks on wall.
- C. Before mounting cabinet to the wall, partially install the screws.
- D. Place cabinet against the wall. Align the screw tips to the installed wall anchors or dimple marks on wall.

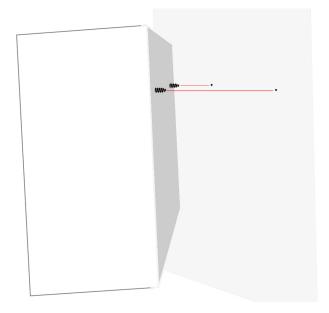

#### STEP 5

- A. Complete the cabinet to wall installation.
- B. The cabinet is now installed level to the wall!