




*Recommended span between brackets is 16" on center. Span will vary with application. Each bracket rated to hold 300 lbs.

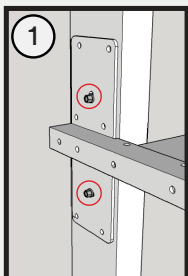

1 Use long openings to adjust level.

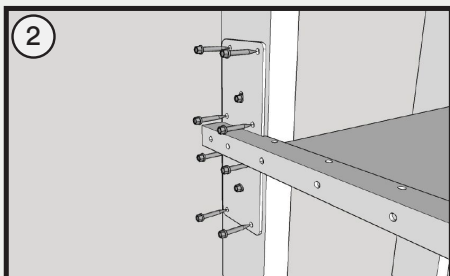


2 Use provided screws to fasten plates to substrate.

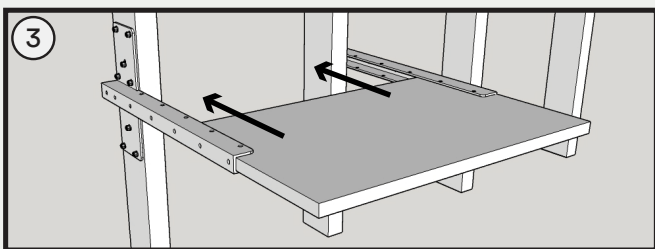


3 Slide in structural board. Must fit snug with minimal movement.


*Optional: Add-on Extension

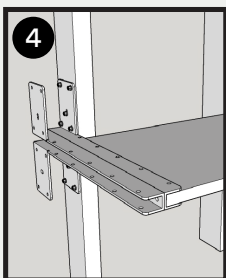

4 Add a new bracket.

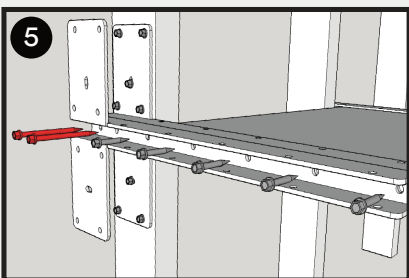

5 Fasten with provided screws. 2 additional long screws required (not included).

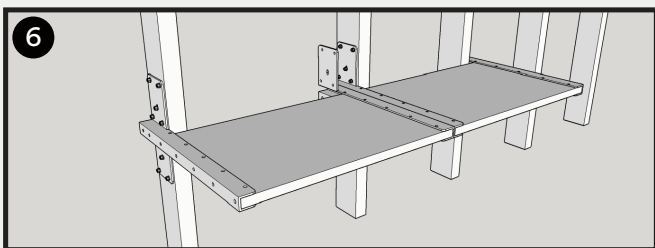

6 Repeat steps 1 to 3. Continue adding brackets as needed.